


# Stepper motor-driven diaphragm dosing pump

## **MEMDOS SMART LDX/LAX/LPX**

### Operating instructions

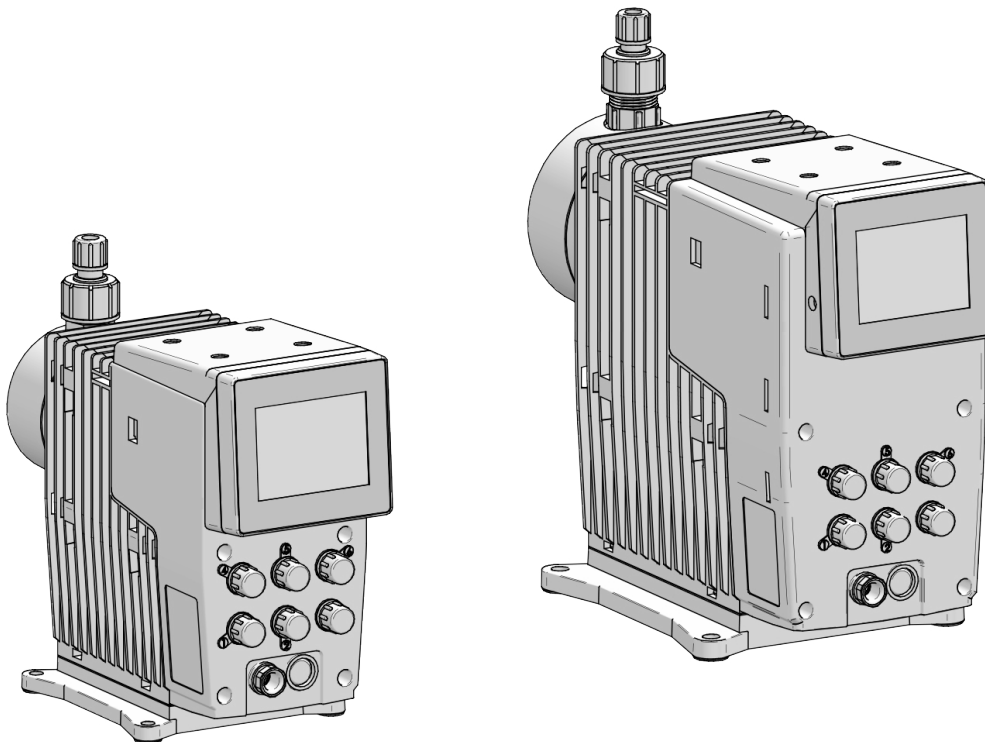

Read the operating manual!

The user is responsible for installation and operation related mistakes!



## Table of Contents

<b>1</b>	<b>Notes for the Reader</b> .....	4	<b>11</b>	<b>Operation</b> .....	29
1.1	General non-discrimination .....	4	11.1	Commissioning the dosing pump.....	29
1.2	Explanation of the signal words .....	4	11.2	Operating modes .....	30
1.3	Explanation of the warning signs .....	4	11.3	External On / Off via Release input .....	33
1.4	Identification of warnings .....	4	11.4	Leakage .....	34
1.5	Identification of action instructions .....	4	11.5	Outputs .....	34
<b>2</b>	<b>Safety</b> .....	5	11.6	Level .....	34
2.1	General warnings.....	5	11.7	Activating the password protection.....	35
2.2	Hazards due to non-compliance with the safety instructions .....	5	11.8	Decommissioning the dosing pump.....	35
2.3	Working in a safety-conscious manner .....	6	11.9	Shutting down in an emergency .....	35
2.4	Personal protective equipment .....	6	11.10	Storage .....	35
2.5	Personnel qualification .....	6	11.11	Transportation.....	35
<b>3</b>	<b>Intended use</b> .....	7	11.12	Disposal of old equipment .....	36
3.1	Notes on product warranty .....	7	<b>12</b>	<b>Maintenance</b> .....	37
3.2	Intended purpose .....	7	12.1	Maintenance intervals.....	37
3.3	Principles .....	7	12.2	Tighten up dosing head bolts.....	37
3.4	Prohibited dosing media.....	7	12.3	Change the diaphragm.....	38
3.5	Foreseeable misuse .....	7	12.4	Clean suction and pressure valves.....	38
<b>4</b>	<b>Product description</b> .....	9	<b>13</b>	<b>Troubleshooting</b> .....	39
4.1	Properties.....	9	13.1	Dosing pump not delivering or output too low .....	39
4.2	Scope of delivery .....	9	13.2	Dosing pump does not prime.....	39
4.3	Structure of the dosing pump .....	9	13.3	Delivery rate varies .....	40
4.4	Function description .....	10	13.4	Dosing pump delivery rate too high.....	40
4.5	Rating plate .....	10	13.5	Diaphragm is torn or tears too often.....	40
<b>5</b>	<b>Technical data</b> .....	12	<b>14</b>	<b>Spare parts</b> .....	41
<b>6</b>	<b>Dimensions</b> .....	13	14.1	Spare parts size 1 .....	41
6.1	MEMDOS SMART LDX/LAX/LPX 2 – 30 (size 1).....	13	<b>15</b>	<b>Delivery characteristic curves</b> .....	42
6.2	MEMDOS SMART LDX/LAX/LPX 60 – 180 (size 2).....	14	<b>16</b>	<b>EU Declaration of Conformity</b> .....	43
<b>7</b>	<b>Installing the Dosing Pump</b> .....	15	<b>17</b>	<b>Decontamination declaration</b> .....	44
7.1	Set up information .....	15	<b>18</b>	<b>Warranty claim</b> .....	45
7.2	Installation on the wall .....	15	<b>19</b>	<b>Index</b> .....	46
<b>8</b>	<b>Hydraulic installations</b> .....	16			
8.1	Design of the system.....	16			
8.2	System piping.....	16			
8.3	Hydraulic connections.....	16			
8.4	Connecting a leakage drain .....	18			
8.5	Connecting dosing head ventilation .....	18			
8.6	Hydraulic accessories .....	19			
<b>9</b>	<b>Electrical installation</b> .....	21			
9.1	Principles .....	21			
9.2	Description of connection sockets .....	21			
<b>10</b>	<b>Control</b> .....	24			
10.1	Explanation of the main menu .....	24			
10.2	Information menu .....	24			
10.3	Operating mode menu .....	26			
10.4	Service menu .....	27			
10.5	Setup menu .....	27			

## 1 Notes for the Reader

These Operating instructions contain information and behaviour rules for safe and designated operation of the dosing pump MEMDOS SMART LDX/LAX/LPX.

Observe the following principles:

- Read the entire operating manual prior to starting-up the device.
- Ensure that everyone who works with or on the dosing pump has read the operating instructions and follows them.
- Keep the operating instructions for the entire service life of the dosing pump.
- Pass on the operating instructions to any subsequent owner of the dosing pump.

### 1.1 General non-discrimination

This operating manual uses only the masculine gender in cases in which the rules of grammar would allow for gender allocation. This approach serves the purpose of legibility. Readers of all genders are always addressed equally.

### 1.2 Explanation of the signal words







Different signal words in combination with warning signs are used in this operating manual. Signal words illustrate the gravity of possible injuries if the risk is ignored:

Signal word	Meaning
DANGER	Refers to imminent danger. Ignoring this sign may lead to death or the most serious injuries.
WARNING	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to death or severe injuries.
CAUTION	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to minor injury or damage to property.
PLEASE NOTE	Refers to a danger which, if ignored, may lead to risk to the machine and its function.

Tab. 1: Explanation of the signal words

### 1.3 Explanation of the warning signs

Warning signs represent the type and source of a danger:

Warning sign	Type of danger
	Danger point
	Danger from electrical voltage
	Danger from corrosive substances
	Danger from potentially-explosive substances
	Danger from automatic startup
	Danger of damage to machine or functional influences

Tab. 2: Explanation of the warning signs

### 1.4 Identification of warnings

Warnings are intended to help you recognise risks and avoid negative consequences.

This is how warnings are identified:

Warning sign	SIGNAL WORD
<p><b>Description of danger.</b> Consequences if ignored. ⇒ The arrow signals a safety precaution to be taken to eliminate the danger.</p>	

### 1.5 Identification of action instructions

This is how pre-conditions for action are identified:

- ✓ Pre-condition for action which must be met before taking action.
- ✘ A resource such as a tool or auxiliary materials required to perform the operating instructions.

This is how instructions for action are identified:


- ➔ Separate step with no follow-up action.
- 1. First step in a series of steps.
- 2. Second step in a series of steps.
  - ▶ Result of the above action.
- ✓ **Action completed, aim achieved.**


## 2 Safety


### 2.1 General warnings


The following warnings are intended to help you to eliminate the dangers that can arise while handling the dosing pump. Risk prevention measures always apply regardless of any specific action.


Safety instructions warning against risks arising from specific activities or situations can be found in the respective sub-chapters.


	<b>DANGER</b>
<p><b>Mortal danger from electric shock!</b></p> <p>Wrongly connected or located cables or damaged ones can injure you.</p> <ul style="list-style-type: none"> <li>⇒ Connect the device only to a SCHUKO socket outlet protected by a ground fault circuit interrupter (GFCI).</li> <li>⇒ Replace damaged cables without delay.</li> <li>⇒ Do not use extension cables.</li> <li>⇒ Do not bury cables.</li> <li>⇒ Secure cables to avoid being damaged by other equipment.</li> </ul>	


	<b>DANGER</b>
<p><b>Danger to life through explosions!</b></p> <p>The use of dosing pumps without ATEX certification in a potentially explosive atmospheres can result in potentially-fatal explosions.</p> <ul style="list-style-type: none"> <li>⇒ Never use the dosing pump in potentially explosive areas.</li> </ul>	

	<b>WARNING</b>
<p><b>Danger from unsuitable materials</b></p> <p>The materials of the dosing pump and hydraulic parts of the system must be suitable for the dosing medium that is used. Should this not be the case, the dosing media may leak.</p> <ul style="list-style-type: none"> <li>⇒ Make sure that the materials you are using are suitable for the dosing medium.</li> <li>⇒ Make sure that the lubricants, adhesives, sealants, etc. that you use are suitable for the dosing medium.</li> </ul>	

	<b>WARNING</b>
<p><b>Caustic burns or other burns through dosing media!</b></p> <p>While working on the dosing head, valves and connections, you may come into contact with dosing media.</p> <ul style="list-style-type: none"> <li>⇒ Use sufficient personal protective equipment.</li> <li>⇒ Rinse the dosing pump with a liquid (e.g. water) which does not pose any risk. Ensure that the liquid is compatible with the dosing medium.</li> <li>⇒ Release pressure in hydraulic parts.</li> <li>⇒ Never look into open ends of plugged pipelines and valves.</li> </ul>	

	<b>WARNING</b>
<p><b>Danger of automatic start up!</b></p> <p>After connecting the mains supply, residual dosing media in the dosing head can spray out.</p> <ul style="list-style-type: none"> <li>⇒ Before connecting the mains supply, connect the dosing lines.</li> <li>⇒ Check that all the screw connections have been tightened correctly and are leak-proof.</li> </ul>	

	<b>CAUTION</b>
<p><b>Danger when changing the dosing medium!</b></p> <p>Changing the dosing media can provoke unexpected reactions, damage to property and injury.</p> <ul style="list-style-type: none"> <li>⇒ Clean the dosing pump and the system parts in contact with the media thoroughly before changing the dosing medium.</li> </ul>	

	<b>CAUTION</b>
<p><b>Increased risk of accidents due to insufficient qualification of personnel!</b></p> <p>Dosing pumps and their accessories may only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.</p> <ul style="list-style-type: none"> <li>⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.</li> <li>⇒ Prevent access to the system for unauthorised persons.</li> </ul>	

### 2.2 Hazards due to non-compliance with the safety instructions

Failure to follow the safety instructions may endanger not only persons, but also the environment and the device.

The specific consequences can be:

- Failure of vital functions of the dosing pump and the system
- Failure of required maintenance and repair methods
- Danger for individuals through dangerous dosing media
- Danger to the environment caused by substances leaking from the system

### 2.3 Working in a safety-conscious manner




Besides the safety instructions specified in this operating manual, further safety rules apply and must be followed:

- Accident prevention regulations
- Safety and operating provisions
- Safety provisions for handling dangerous substances (mostly the safety data sheets to dosing media)
- Environmental protection provisions
- Applicable standards and legislation

### 2.4 Personal protective equipment

Based on the degree of risk posed by the dosing medium and the type of work you are carrying out, you must use corresponding protective equipment. Read the Accident Prevention Regulations and the Safety Data Sheets to the dosing media find out what protective equipment you need.

You will require the minimum of the following personal protective equipment:

Personal protective equipment required	
	Protective goggles
	Protective clothing
	Protective gloves

Tab. 3: Personal protective equipment required

Wear the following personal protective equipment when performing the following tasks:

- Commissioning
- Working on the dosing pump while running
- Shut-down
- Maintenance work
- Disposal

### 2.5 Personnel qualification

Any personnel who work on the dosing pump must have appropriate special knowledge and skills.

Anybody who works on the dosing pump must meet the conditions below:

- Attendance at all the training courses offered by the owner
- Personal suitability for the respective activity
- Sufficient qualification for the respective activity
- Training in handling of the dosing pump
- Knowledge of safety equipment and the way this equipment functions
- Knowledge of this operating manual, particularly of safety instructions and sections relevant for the activity
- Knowledge of fundamental regulations regarding health and safety and accident prevention

All persons must generally have the following minimum qualification:

- Training as specialists to carry out work on the dosing pump unsupervised
- Sufficient training that they can work on the dosing pump under the supervision and guidance of a trained specialist.

These operating instructions differentiate between these user groups:

#### 2.5.1 Specialist staff

Thanks to their professional training, knowledge, experience and knowledge of the relevant specifications, specialist staff are able to perform the job allocated to them and recognise and/or eliminate any possible dangers by themselves.

#### 2.5.2 Trained persons

Trained persons have received training from the operator about the tasks they are to perform and about the dangers stemming from improper behaviour.

In the table below, you can check what personnel qualifications are required for the respective tasks. Only people with appropriate qualifications are allowed to perform these tasks!

Qualification	Activities
Specialist staff	<ul style="list-style-type: none"> <li>■ Assembly</li> <li>■ Hydraulic installations</li> <li>■ Electrical installation</li> <li>■ Maintenance</li> <li>■ Repairs</li> <li>■ Commissioning</li> <li>■ Taking out of operation</li> <li>■ Disposal</li> <li>■ Fault rectification</li> </ul>
Trained persons	<ul style="list-style-type: none"> <li>■ Storage</li> <li>■ Transportation</li> <li>■ Control</li> <li>■ Fault rectification</li> </ul>

Tab. 4: Personnel qualification

## 3 Intended use

### 3.1 Notes on product warranty

Any non-designated use of the product can compromise its function or intended protection. This leads to invalidation of any warranty claims!

Please note that liability is on the side of the user in the following cases:

- The dosing pump is operated in a manner which is not consistent with these operating instructions, particularly safety instructions, handling instructions and the section "Intended Use".
- if people operate the product who are not adequately qualified to carry out their respective activities.
- no original spare parts or accessories of Lutz-Jesco GmbH are used.
- Unauthorised changes are made to the device.
- The user uses different dosing media than those indicated in the order.
- The user does not use dosing media under the conditions agreed with the manufacturer such as modified concentration, density, temperature, contamination, etc.

### 3.2 Intended purpose

The dosing pump MEMDOS SMART LDX/LAX/LPX is intended for the following purpose: the conveying and dosing of liquids.

### 3.3 Principles

- Before delivery, the manufacturer inspected the dosing pump and operated it under specific conditions (with a specific dosing medium with a specific density and temperature, with specific pipe dimensions, etc.) Since these conditions vary at every installation location, you must calibrate the dosing pump after delivery. For information on the calibration procedure, refer to section 11.1.2 "Calibrating the dosing pump" on page 30.
- Comply with the information regarding the operating and environmental conditions (see chapter 5 "Technical data" on page 12).
- Any restrictions regarding the viscosity, temperature and density of dosing media must be followed. You must only use dosing media at temperatures above freezing point or below the boiling point of the respective medium.
- The materials of the dosing pump and hydraulic parts of the system must be suitable for the dosing medium that is used. In this connection, note that the resistance of these components can change in dependence on the temperature of the media and the operating pressure.



Information on the suitability of materials combined with different dosing media can be found in the Compatibility Chart of Lutz-Jesco GmbH. The information in this resistance list is based on information from the material manufacturers and on expertise obtained by Lutz-Jesco from handling the materials. As the durability of the materials depends on many factors, this list only constitutes initial guidance on selecting material. In all cases, test the equipment with the chemicals you use under operating conditions.

- The dosing pump is not intended for outdoor use unless appropriate protective measures have been taken.
- Avoid leaks of liquids and dust into the casing and avoid direct exposure to sunlight.
- You must never operate dosing pumps in a potentially explosive atmosphere if they do not have corresponding nameplates or an appropriate EC Declaration of Conformity for potentially explosive atmospheres.

### 3.4 Prohibited dosing media

The dosing pump must not be used for these media and substances:

- Gaseous media
- Radioactive media
- Solid substances
- Combustible media
- All other media that are not suitable for delivery using this dosing pump

### 3.5 Foreseeable misuse

Below, there is information about the applications of the dosing pump or associated equipment that are not considered to be intended use. This section is intended to allow you to detect possible misuse in advance and to avoid it.

Foreseeable misuse is assigned to the individual stages of the product lifetime:

### 3.5.1 Incorrect assembly

- Unstable or unsuitable bracket
- Dosing pump bolted wrongly or loosely

### 3.5.2 Incorrect hydraulic installation

- Suction and pressure lines dimensioned incorrectly
- Unsuitable connection of the pipes due to wrong material or unsuitable connections
- Suction and pressure lines mixed-up
- Damage to threads due to them being tightened too much
- Bending of pipelines
- No free return flow of the pressure relief valve
- Excessive demand due to the pressure differences between the suction and pressure valves
- Through-suction at installation without back-pressure valves
- Damage due to undamped acceleration mass forces
- Exceeding the admissible pressure on the suction and discharge sides
- Using damaged parts

### 3.5.3 Incorrect electrical installation

- Connecting the mains voltage without a protective earth
- Unsecured mains or one that does not conform to standards
- Not possible to immediately or easily disconnect the power supply
- Wrong connecting cables for mains voltage
- Dosing pump accessories connected to wrong sockets
- Diaphragm monitoring not connected or defective
- Protective earth removed

### 3.5.4 Incorrect start-up

- Start-up with damaged system
- Shut-off valves closed at commissioning
- Closed suction or pressure line, e.g. due to blockages
- Personnel was not informed before the start-up
- System was recommissioned after maintenance without all the protective equipment and fixtures, etc. being reconnected.
- Inadequate protective clothing or none at all

### 3.5.5 Incorrect operation

- Protective equipment not functioning correctly or dismantled
- Modification of the dosing pump without authority
- Ignoring operational disturbances
- Elimination of operational disturbances by personnel without adequate qualifications
- Deposits in the dosing head due to inadequate purging, particularly with suspensions
- Bridging the external fuse
- Operation made more difficult due to inadequate lighting or machines that are difficult to access
- Operation not possible due to dirty or illegible display of the dosing pump

- Delivery of dosing media for which the system is not designed
- Delivery of particulate or contaminated dosing media
- Inadequate protective clothing or none at all

### 3.5.6 Incorrect maintenance

- Carrying out maintenance during ongoing operation
- Carrying out work that is not described in the operating manual
- No adequate or regular inspection of correct functioning
- No replacement of damaged parts or cables with inadequate insulation
- No securing against reactivation during maintenance work
- Using cleaning materials that can cause reactions with the dosing media
- Inadequate cleaning of the system
- Unsuitable purging medium
- Unsuitable cleaning materials
- Detergents left in system parts
- Using unsuitable cleaning equipment
- Using the wrong spares or lubricants
- Contaminating the dosing medium with lubricant
- Installing spare parts without following the instructions in the operating manual
- Blocking venting orifices
- Pulling off sections of the plant
- Contamination at installation without a dirt trap
- Mixing up the valves
- Mixing up the sensor lines
- Not reconnecting all the lines
- Damaging or not installing all the seals
- Not renewing seals
- Not paying attention to safety data sheets
- Inadequate protective clothing or none at all

### 3.5.7 Incorrect decommissioning

- Not completely removing the dosing medium
- Dismantling lines while the dosing pump is running
- Device not disconnected from the power supply
- Using the wrong dismantling tools
- Inadequate protective clothing or none at all

### 3.5.8 Incorrect disposal

- Incorrect disposal of dosing media, operating resources and other materials
- No labelling of hazardous substances

## 4 Product description

### 4.1 Properties

The MEMDOS SMART LDX/LAX/LPX is a stepper motor-driven diaphragm dosing pump that is used when precise dosing results are required.

They are characterized by the following properties:

- Size 1: Output range from 2.6 – 30.7 l/h, up to 20 bar
- Size 2: Output range from 58.5 – 182 l/h, up to 10 bar
- Power supply 110 – 250 V, 50/60 Hz, IP65, 25 – 70 W
- Microprocessor-controlled drive
- Material finishes PVC, PP, PVDF and stainless steel
- 3.5" touchscreen with multilingual menu
- Display removable (optional)
- Delivery rate precisely adjustable via display
- Supply amount displayed in various units

Also with MEMDOS SMART LPX:

- Two alarm relay outputs
- Diaphragm failure input for leak monitoring
- FLOWCON input
- Diaphragm replacement programme
- Three slow-motion modes
- Venting function
- Storage of messages
- Software backup with four memory locations
- Ethernet interface (optional)

### 4.2 Scope of delivery

Please compare the delivery note with the scope of delivery. The following items are part of the scope of delivery:

- MEMDOS SMART LAX, LDX or LPX dosing pump
- One set each of hose clamping connections for the suction and discharge sides for hoses with diameters of 4/6 mm, 6/9 mm and 6/12 mm (made of PVC, PP and PVDF)
- Covering caps electrical connections:  
3 for MEMDOS SMART LDX or LAX  
6 for MEMDOS SMART LPX
- Mains cable
- Operating instructions
- Inspection report and test certificate (optional)
- Accessory kit (optional)

### 4.3 Structure of the dosing pump

#### 4.3.1 General Overview

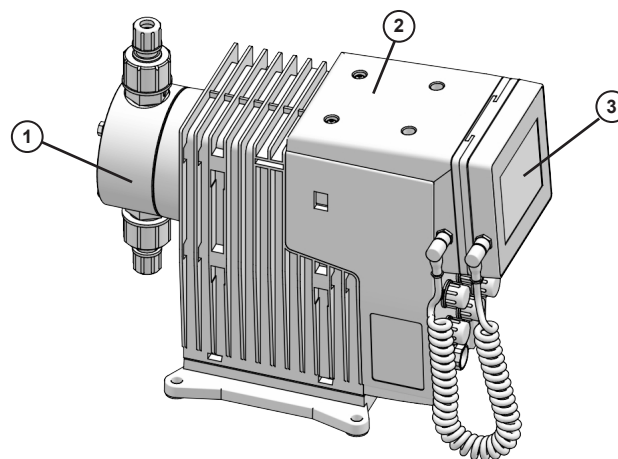


Fig. 1: Dosing pump overview MEMDOS SMART LDX/LAX/LPX

No.	Description
1	Dosing head
2	Drive unit
3	Control box

Tab. 5: Designation of components

#### 4.3.2 Dosing head

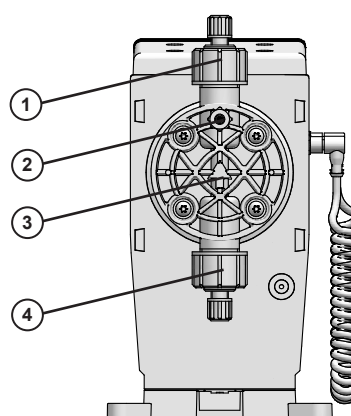


Fig. 2: Dosing head

No.	Description
1	Valve and connection on the discharge side
2	Integrated dosing head ventilation (only MEMDOS SMART LDX/LAX/LPX 2, 5 and 10 with plastic dosing head)
3	Arrow indicating the direction of throughflow of the dosing medium (plastic version only)
4	Valve and connection on the suction side

Tab. 6: Designation of components

### 4.3.3 Control elements

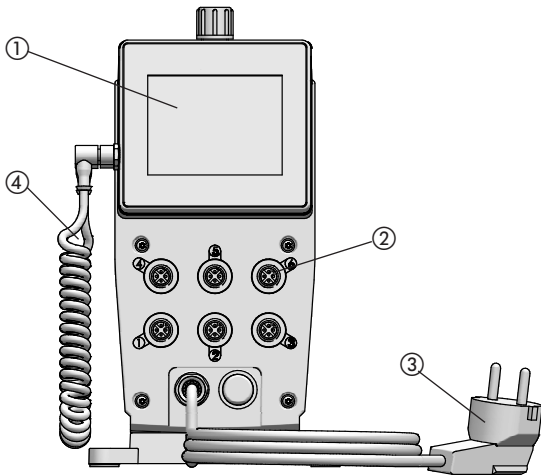


Fig. 3: Controller of dosing pump MEMDOS SMART LDX/LAX/LPX

No.	Description
1	Touch display
2	Connection ports
3	Mains cable for power supply
4	Display cable (optional)

Tab. 7: Designation of components

### 4.4 Function description

Dosing pumps are positive displacement pumps. They are used if precisely defined delivery of a medium is necessary. A constant volume per stroke or time is delivered.

The system delivers or meters the dosing medium by means of a repeated sequence of suction strokes followed by pressure strokes. This results in a low-pulsation flow.

If the dosing pump is in the suction stroke phase, the diaphragm is pulled into the rear final position. Due to the resulting vacuum in the dosing head, the pressure valve closes, the suction valve opens and dosing medium flows from the suction line into the dosing head.

If the dosing pump is in the pressure stroke phase, the diaphragm is moved into the front final position. Due to the pressure in the dosing head, the suction valve closes and the dosing medium flows through the pressure valve from the dosing head into the pressurised pipe.

### 4.5 Rating plate

There is information on the equipment about safety or the product's way of functioning. The information must stay legible for the duration of the service life of the product.

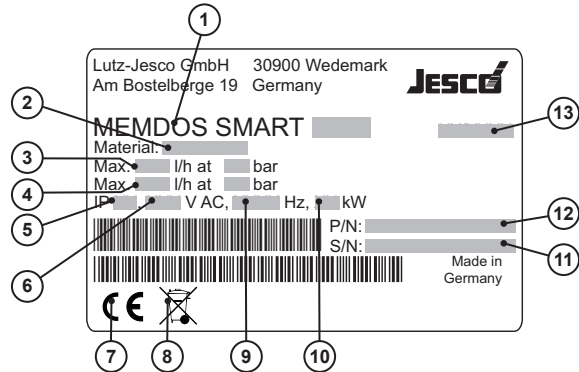


Fig. 4: Rating plate MEMDOS SMART LDX/LAX/LPX

No.	Description
1	Product, type, nominal size
2	Material of the dosing head/seals
3	Maximum delivery capacity at average pressure
4	Maximum delivery capacity at maximum pressure
5	Protection class
6	Voltage supply
7	Label showing conformity with applicable European directives
8	WEEE label
9	Frequency
10	Power consumption
11	Serial number
12	Part number
13	Month/year of manufacture

Tab. 8: Designation of components

### Conveying characteristics

The design of the dosing pump enables it to perform the pressure and suction stroke at different speeds. For low supply rates, for example, the dosing pump performs the suction stroke at the maximum speed and adjusts the speed of the pressure stroke to match the desired supply rate. This produces a constant supply stream, which gives you a low-pulsation, smooth dosing.

In addition, in the operating modes *Slow Motion 1*, *Slow Motion 2* and *Slow Motion 3*, it offers the possibility of reducing the suction speed. This allows more viscous media to be dosed more easily and precisely.

**i** When the slow motion modes are activated, the maximum delivery rate of the dosing pump is reduced:

- Slow Motion 1: Reduction to 75 %
- Slow Motion 2: Reduction to 50 %
- Slow Motion 3: Redreduction to 25 %

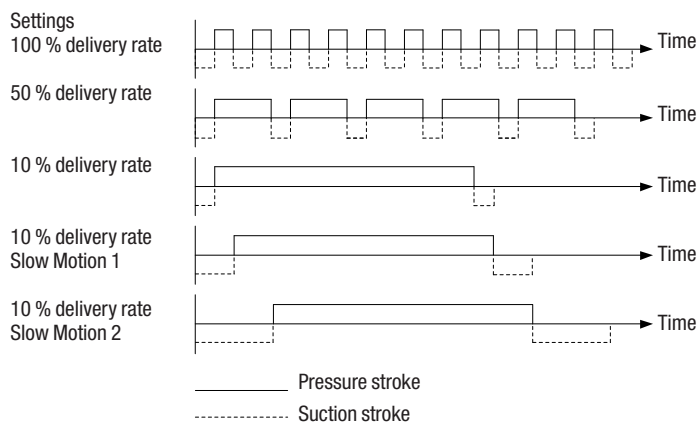


Fig. 5: Conveying characteristics

## 5 Technical data

Please note that some of this data only represents guide values. The actual capacity of a dosing pump depends on various factors. For approximate values of the delivery capacity at different pressures, refer to chapter 15 "Delivery characteristic curves" on page 42.

Specification and Unit		MEMDOS SMART LDX/LAX/LPX Size								
		2	5	10	20	30	60	100	180	
Delivery capacity at max. backpressure	l/h	2.6	5.6	10.4	19.9	30.7	58.5	101.6	182	
	ml/stroke	0.29	0.62	1.15	2.21	3.41	6.5	11.29	20.22	
Max. delivery pressure	bar	20 (16*)	16	12	8	6	10	7	4	
Delivery capacity at average backpressure	l/h	3	6.4	11	20.9	31.6	65	112.7	191	
	ml/stroke	0.33	0.71	1.22	2.32	3.51	7.22	12.52	21.22	
Average delivery pressure	bar	10	8	6	4	3	5	4	2	
Max. stroke frequency	rpm	150								
Suction lift for non-gassing media	mWS	3					5			
Max. supply pressure	mbar	800					500			
Diameter of diaphragm	mm	33	39	54		68	90			
Nominal valve width		DN3**/ DN4	DN4			DN6	DN10			
Voltage supply		100 – 250 V, 50/60 Hz								
Electrical cable	m	1.8 m (with mains plug)								
Power consumption	W	25				50	70			
Protection class		IP65 (with covering caps on the connections or connected signal lines)								
Insulation class		F								
Materials		PVC, PP, PVDF and 1.4571								
Weight	PVC, PP, PVDF	kg	4 approx.				8 approx.	9 approx.		
	1.4571	kg	5 approx.				10 approx.	14 approx.		
Approved ambient temperature	PVC	°C	5 – 40***							
	PP, PVDF, stainless steel (1.4571)	°C	5 – 45***							
Max. temperature of the medium	PVC	°C	0 – 35							
	PP, PVDF	°C	0 – 60							
	Stainless steel (1.4571)	°C	0 – 80							
Relative humidity	%	max. 90								
Max. sound pressure level	dB(A)	51 – 56								
Viscosity limits	mPa·s	300****/1000*****								

\* With a PVC design

\*\* DN3 double ball valves only

\*\*\* Use of the dosing pump at ambient temperatures below 5 °C must be checked individually. In such cases, please contact the manufacturer.

\*\*\*\* With a viscosity of ~300 mPa·s and above, you must use spring-loaded valves.

\*\*\*\*\* If the viscosity is above 1000 mPa·s, this must be checked individually.

Tab. 9: Technical data

## 6 Dimensions

All dimensions in mm

### 6.1 MEMDOS SMART LDX/LAX/LPX 2 – 30 (size 1)

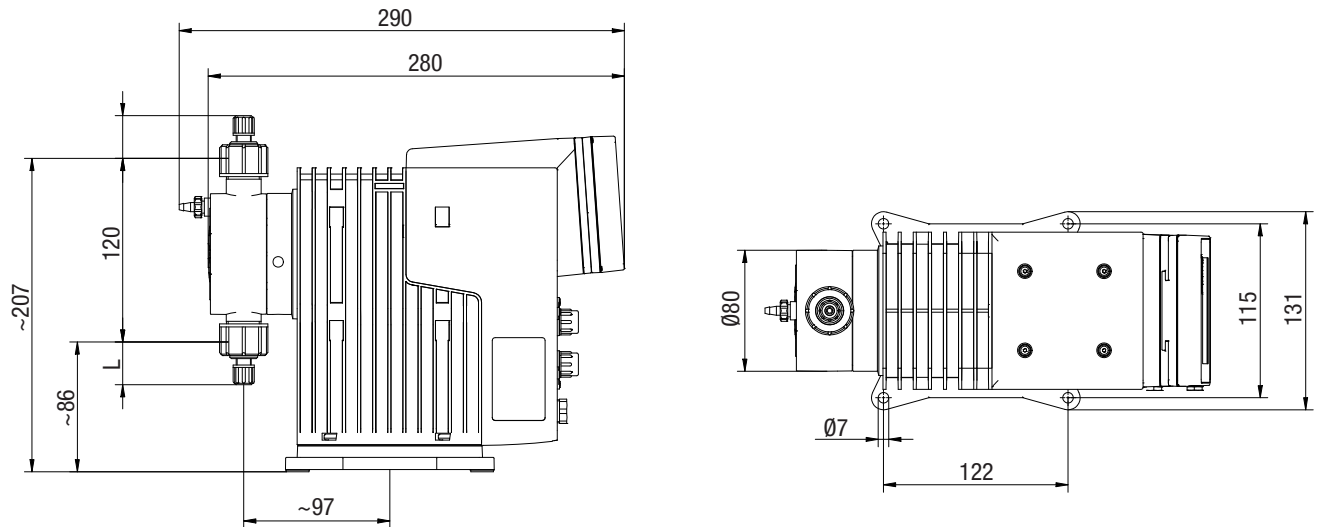


Fig. 6: Dimensioned drawing MEMDOS SMART LDX/LAX/LPX 2, 5 and 10 PVC, PP and PVDF

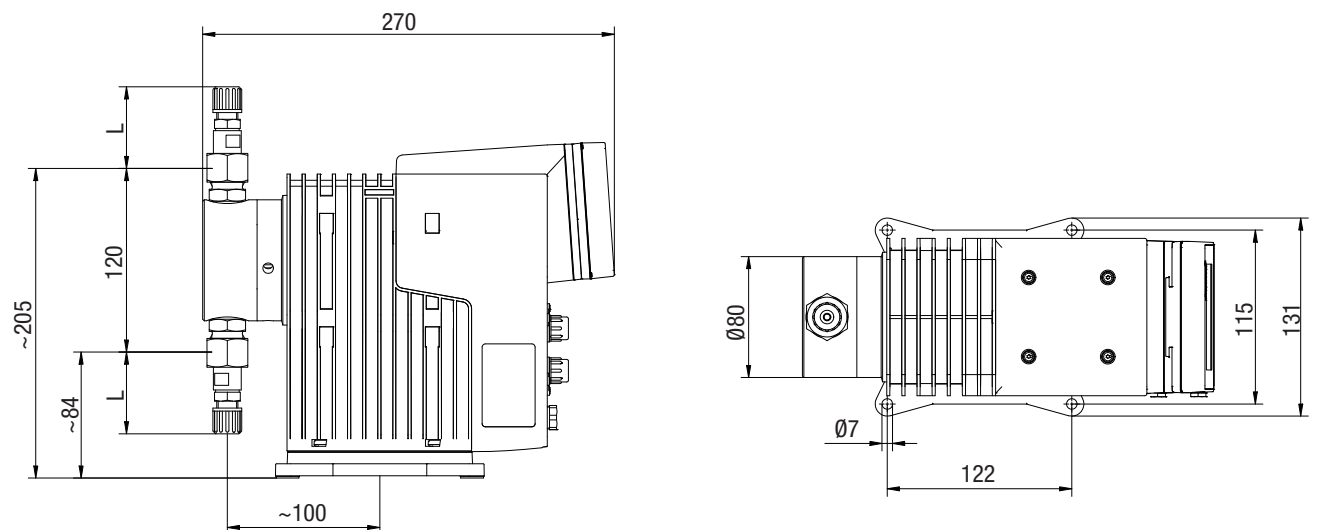


Fig. 7: Dimensioned drawing MEMDOS SMART LDX/LAX/LPX 2, 5 and 10 stainless steel

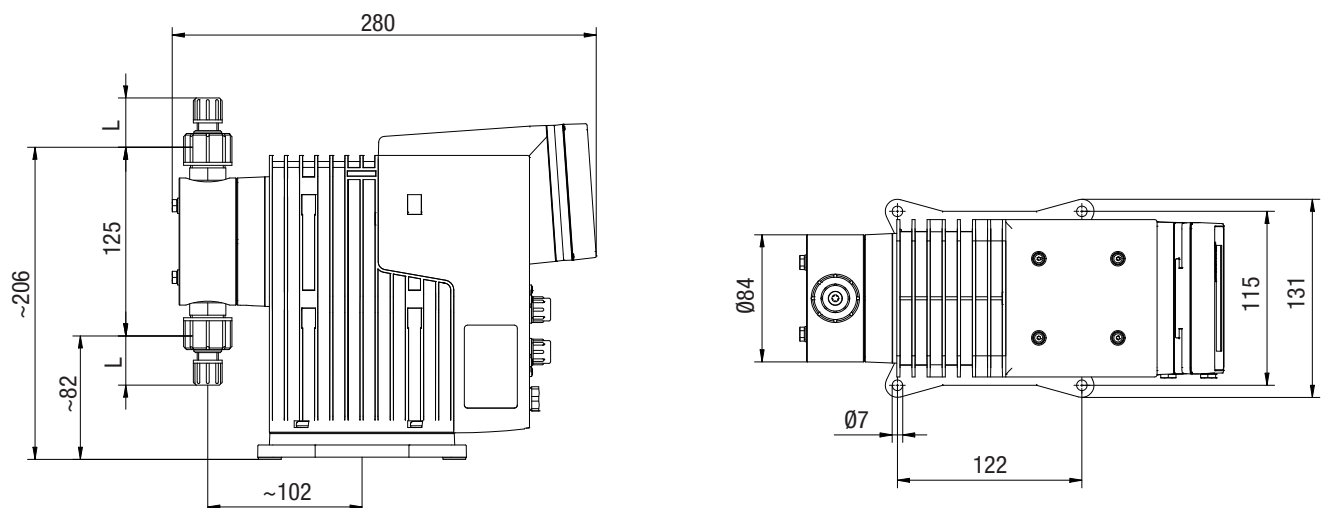


Fig. 8: Dimensioned drawing MEMDOS SMART LDX/LAX/LPX 20 and 30 PVC, PP, PVDF and stainless steel

Hose clamp connection	Material	Scale	Nominal valve width	L
LDX/LAX/LPX 2, 5, 10	PVC/PP/PVDF	4/6 mm	DN3 (only with LDX/LAX/LPX 2)/DN4	31
	Stainless steel	4/6 mm	DN4	50
LDX/LAX/LPX 20, 30	PVC/PP/PVDF	4/6 mm	DN4	31
		1/4x3/8"	1/4"	13
		6/9 mm	DN6	34
		6/12 mm	DN6	13
	Stainless steel (1.4571)/PVDF	4/6 mm	DN4	50
		6/9 mm	DN6	54

**6.2 MEMDOS SMART LDX/LAX/LPX 60 – 180 (size 2)**

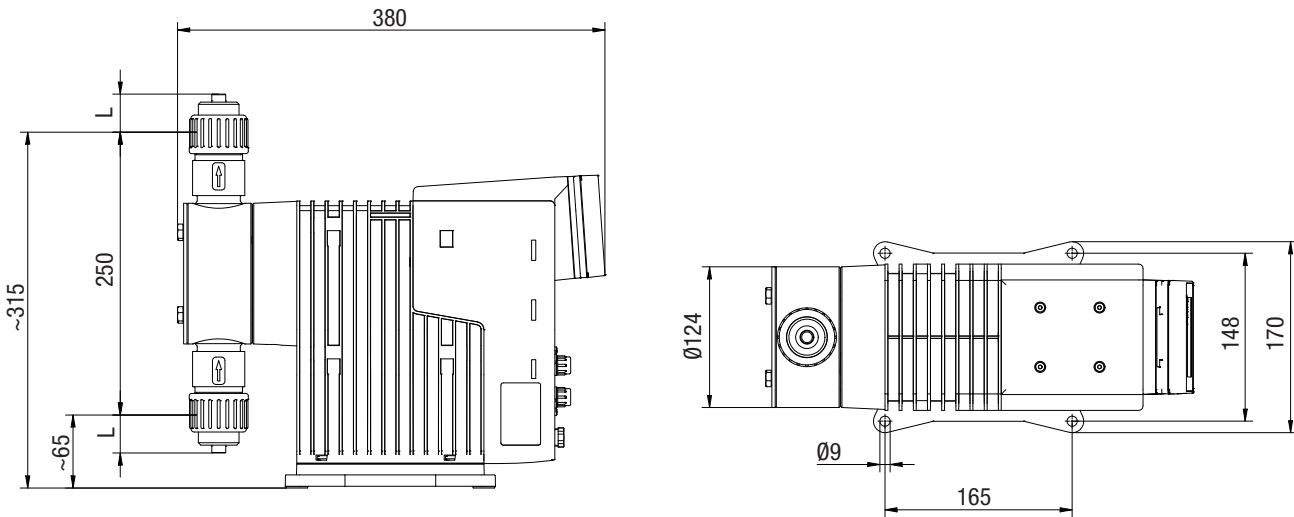




Fig. 9: Dimensioned drawing MEMDOS SMART LDX/LAX/LPX 60, 120 and 180

Hose clamp connection	Material	Scale	Nominal width	L
LDX/LAX/LPX 60	PVC/PP/PVDF	6/9 mm	DN6	34
		6/12 mm	DN6	13
	1.4571/PVDF	6/9 mm	DN6	54
LDX/LAX/LPX 100, 180	PVC/PP/PVDF	13/20 mm	DN10	34
	1.4571/PVDF	G3/8	DN10	34

## 7 Installing the Dosing Pump

	<b>DANGER</b>
<b>Mortal danger from electric shock!</b>	
Electrically conductive liquid can enter pump housings, cable screw connections and mains connectors.	
⇒ Make sure that all protective measures comply at least with the requirements of protection class IP65.	
⇒ Always set up the dosing pump such that water cannot enter the housing.	

	<b>CAUTION</b>
<b>Danger of personal injury and material damage!</b>	
A dosing pump that is difficult to access represents a danger due to incorrect operation and faulty maintenance.	
⇒ Install the dosing pump such that it is accessible at all times.	

### 7.1 Set up information

When installing, follow the basic principles below:

- The valves must be vertical: Pressure valve at top, suction valve at bottom. In this connection, pay attention to the arrow on the dosing head. The dosing head must be aligned such that the arrow points vertically upwards.
- You should install the dosing pump at a convenient height for operation.
- It must not be installed under the ceiling.
- The frame of foundation for fixing the dosing pump must not be subjected to jolts. The pump must be vibration-free and stable.
- There must be enough free space in the area of the dosing head and the suction and pressure valves for these parts to be easily dismantled if required. The entire space requirement for installation and maintenance is approximately 1 m<sup>2</sup>.
- The distance from the sides of the dosing pump to the wall or other dosing pumps or equipment must be at least 3 cm. There must be a guaranteed flow of circulating air.
- The maximum ambient temperature must be complied with, see chapter 5 “Technical data” on page 12. If necessary, radiant heat from surrounding equipment must be screened.
- Avoid exposure to direct sunlight.
- The dosing pump is not intended for use out of doors unless appropriate protective measures have been taken to prevent dust and water from entering the housing.
- For the dimensions of the fastening holes, refer to chapter 6 “Dimensions” on page 13.
- The tightening torque for the fastening bolts is 1.5 – 2 Nm.

### 7.2 Installation on the wall

The stepper motor diaphragm metering pump has a removable foot that is mounted to and dismantled from the pump without tools. It can be removed by pressing down on the tab and at the same time pushing your foot away from the dosing pump. The foot can be attached to the lower part as well as to the sides of the dosing pump.

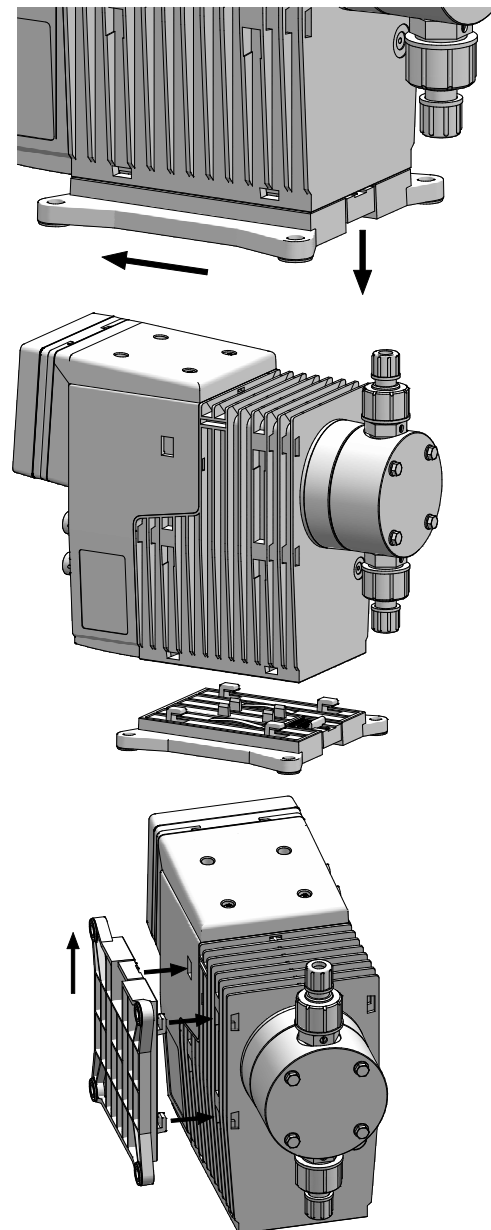





Fig. 10: Mounting stand laterally and display frontally


## 8 Hydraulic installations

In this chapter, you will find information about the hydraulic parts of a system that you should install or that can install additionally. In many cases, you must install hydraulic accessories to be able to use all the functions that the dosing pump offers, to guarantee functional safety or to achieve a high level of dosing precision.

	<b>WARNING</b>
<b>Caustic burns or other burns through dosing media!</b>	
A diaphragm rupture, blocked pressure lines or the use of material not suitable for the dosing medium can result in the discharge of dosing medium. Depending on the type and hazardousness of the dosing medium, this can result in injury.	
⇒ Wear the recommended personal protective equipment.	
⇒ Make sure that the materials you are using are suitable for the dosing medium.	
⇒ Make sure that the lubricants, adhesives, sealants, etc. that you use are suitable for the dosing medium.	
⇒ Install a leakage drain.	
⇒ Install pressure relief valves.	

	<b>CAUTION</b>
<b>Danger of personal injury and material damage!</b>	
High peak pressures can lead to piping vibrating and cause them to snap. This can result in injury from piping or escaping dosing media.	
⇒ Install pulsation dampeners.	

	<b>PLEASE NOTE</b>
<b>Damage to drives due to overloading</b>	
The pressure on the pressure side must be higher than on the suction side in order to avoid over-delivery. This could otherwise cause uncontrolled dosing processes and damage to the pipelines and the dosing pump.	
⇒ Ensure that the pressure on the discharge side is at least 1 bar than on the suction side.	

	<b>PLEASE NOTE</b>
<b>Locking of threads</b>	
Stainless steel and plastic parts (particularly those made of PVC) that are bolted together in a detachable connection (e.g. the dosing head and the valves) can lock. This makes them difficult to release.	
⇒ Before bolting, grease the corresponding parts with a lubricant (e.g. PTFE spray). Ensure that the lubricant is compatible with the dosing medium.	

### 8.1 Design of the system

- The dosing pump's technical data must be taken into account and the plant's layout must be set up appropriately (e.g. pressure loss when rating the lines with regard to their nominal diameter and length).
- The entire system and its integrated dosing pump must be designed in such a way that an escaping dosing medium (due to the failure of wearing parts such as the diaphragm, or burst hoses) does not lead to permanent damage to system parts or the premises.
- The leakage opening of the dosing head must be visible so that you can detect a diaphragm rupture. It must be possible for the outflow from the leakage drain to be on a free downwards gradient.
- If you use hazardous dosing media, the installation must be designed such that no disproportionately high consequential damages arise due to dosing media escaping.
- To avoid dosing errors after the end of the process, the dosing pump must be locked hydraulically.
- To allow you to easily inspect the pressure conditions in the system, you should provide connections for pressure gauges close to the suction and pressure valves.

### 8.2 System piping

- The system piping must not exert any force on the connections and valves of the dosing pump.
- This means that steel piping should be connected to the dosing pump by means of flexible pipe sections.
- The nominal diameters of the pipework and the installed fittings should be rated the same as or greater than the nominal diameters of the dosing pump's suction and pressure valves.
- The suction line should be kept as short as possible.
- You should avoid intertwined hoses.
- Avoid loops, since air bubbles can collect.

### 8.3 Hydraulic connections

#### 8.3.1 Connecting hose clamp connection

Choose the hose connection according to the condition of the hose (material, inner diameter, wall thickness) in order to ensure maximum pressure resistance.

### 8.3.1.1 Size 4/6 and 6/9

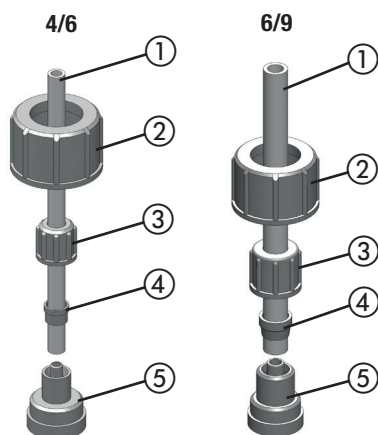


Fig. 11: Hose clips 4/6 and 6/9 (internal and external diameters in mm)

Perform the following working steps:

1. Cut the hose (1) to the appropriate length neatly and at an exact right angle.
2. Place a gasket that is suitable for the dosing medium between the connection (5) and the valve.
3. Screw the connecting piece to the dosing pump's valve using the union nut (2).
4. Thread the union nut (3) and the clamping ring (4) onto the hose.
5. Plug the hose all the way in to the grommet of connection piece.
6. Push the clamping ring onto the grommet of connection piece and screw it with the union nut.
7. Carry out the same procedure with the connection to the dosing pump's other valve.

✓ **Hose clamp connection connected.**

2. Place a gasket that is suitable for the dosing medium between the connection (4) and the valve.
3. Push the union nut (2) and the cutting ring (3) over the hose.
4. Press the end of the hose onto the grommet of connection piece. You can do this more easily by moistening the end of the hose on the inside or applying some lubricant to the grommet in the cone area. You should push at least two thirds of the hose onto the grommet of the connection piece.
5. Push the cutting ring over the hose into the cone area on the grommet of connection piece.
6. Screw the union nut onto the valve of the dosing pump.

✓ **Hose clamp connection connected.**

### 8.3.1.2 Size 6/12

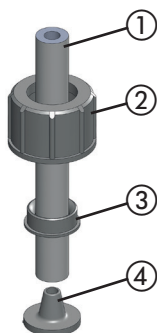


Fig. 12: Hose clip 6/12 (internal and external diameters in mm)

Size 6/12 hose clips only have a union nut. It clamps the hose onto the grommet of the connection piece and at the same time fastens on the dosing pump's valve.

Perform the following working steps:

1. Cut the hose (1) to the appropriate length neatly and at an exact right angle.

### 8.3.2 Connecting cemented connection

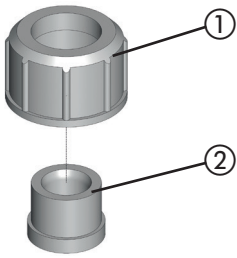


Fig. 13: Cemented connection

Perform the following working steps:

1. Cut the PVC tube to length.
2. Push the union nut (1) onto the tube.
3. Stick the bonded coupling sleeve (2) to the tube (follow the instructions of the adhesive manufacturer).
4. Screw the union nut onto the valve of the dosing pump. Use a gasket that is suitable for the dosing medium.

✓ **Cemented connection connected.**

### 8.3.3 Connecting threaded connection

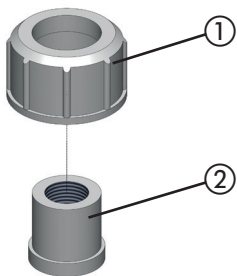


Fig. 14: Threaded connection

Perform the following working steps:

1. Cut the tube to length.
2. Cut the thread (2) onto the end of the tube.
3. Push the union nut (1) onto the tube.
4. Seal the thread. When choosing your sealing material, take into account its resistance to material, temperature and pressure.
5. Screw the union nut onto the valve of the dosing pump. Use a gasket that is suitable for the dosing medium.

✓ **Threaded connection connected.**

**i** Under normal conditions, you only need to screw the hydraulic connections finger-tight. However, due to the material settling, the pre-tension of the screw connection can slacken. This means that you must re-tighten the screw connection before carrying out commissioning.

### 8.4 Connecting a leakage drain

Lutz-Jesco GmbH dosing pumps are produced to the highest of quality standards with a long service life. However, some parts are subject to operational wear. This is the case particularly with the diaphragms that are continuously subjected to forces during the suction and discharge strokes and to the effects of the dosing medium.

If a diaphragm ruptures, the dosing medium starts to leak. This leakage is drained via the leakage opening. On the flange of the dosing head, there are three openings for this purpose. Depending on the alignment of the dosing pump, the leakage is drained via the downward opening.

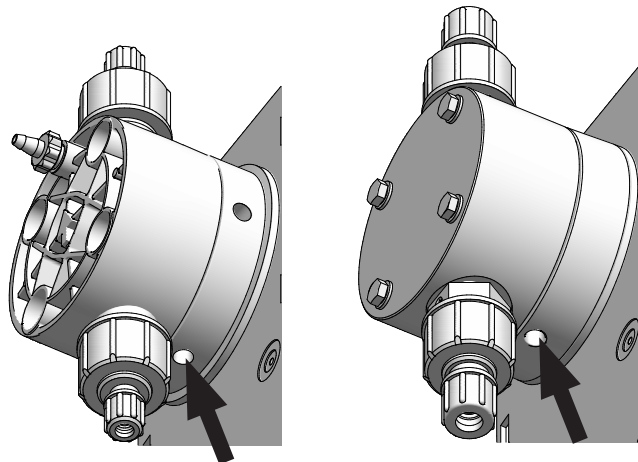


Fig. 15: Openings of the leakage drain



#### PLEASE NOTE

##### Damage to drives due to effervescent media

If a hose is connected to the leakage drain and it is routed back into the dosing tank, effervescent media can enter the drive and damage it.

- ⇒ Collect the leakage in a collecting pan.
- ⇒ As an alternative, you can route the leakage back to the dosing tank using a funnel. You should install the funnel at an adequate distance from the leakage opening.

### 8.5 Connecting dosing head ventilation

The dosing heads of the MEMDOS SMART LDX/LAX/LPX 2, 5 and 10 have an integrated dosing head venting unit (except for dosing heads made of stainless steel).

For the procedure when venting, refer to chapter 11.1.1 “Venting the dosing pump” on page 29.

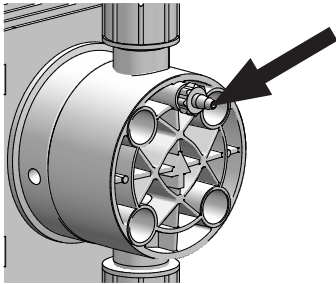


Fig. 16: Dosing head ventilation with hose connection

Perform the following working steps:

1. Connect a 4/6 hose to the dosing head venting facility.
2. Route the other end of the hose into the dosing tank or a collecting tank.

✓ **Dosing head ventilation connected.**

## 8.6 Hydraulic accessories

The following chapter is intended to give you an overview of installation options.

Please note that these operating instructions are no substitute for the instructions supplied with the accessories in each case. The corresponding documentation supplied with the product applies to safety information and provides exact instructions on assembly.

### 8.6.1 Injection nozzle

If the pressure line enters a main line, it is advisable to install an injection nozzle.

Injection nozzles have three main functions:

- Dosing the medium into a main line
- Preventing flowback into the pressure line through a non-return valve

Notes on assembly:

- Double-ball injection nozzles must be installed into the main line vertically from the bottom. You can install hose and spring-loaded injection nozzles any way you like.
- With dosing media that tend to crystallize, it is advisable to carry out installation into the main line from the bottom. This prevents air bubbles from being trapped.
- Many dosing media tend to contaminate the injection nozzles, which can lead to blockages. In cases like this, it is advisable to install an injection nozzle that is easy to dismantle and block off.

### 8.6.2 Contact water meter

The contact-type water meter measures the throughflow in a pipe and sends a pulse to the dosing pump, which then starts dosing. This means that ideal proportional dosing is also possible with large throughflow fluctuations.

The contact water meter is connected to connection port 2 (see chapter 9.2.2 “Connection socket 2” on page 22).

### 8.6.3 Pressure-relief valve

Pressure relief valves have an important safety function for protecting the dosing pump and the associated pipes and fittings. The dosing pump can generate a pressure that is many times the rated one. A blocked pressure line can lead to dosing medium escaping.

An improperly high pressure can occur if:

- The shut-off valves are closed even though the dosing pump is running
- Pipes block

At an appropriate pressure, a pressure relief valve opens a bypass line and protects the system in this way from damage caused by over-pressure.

Notes on assembly:

- The line for returning dosing medium from the pressure relief valve must be routed to the dosing tank or to a collecting pan.
- The pressure in the dosing tank must not be too high so that it is possible to accommodate the returned dosing medium.
- As an alternative, the system can return dosing medium into the suction line in front of the dosing pump. In this case, there must not be a non-return valve or a foot valve in the suction line.
- You should install the pressure relief valve as close as possible to the dosing head.

### 8.6.4 Back-pressure valve

Back-pressure valves are required in the following cases:

- There are considerably fluctuating system pressures
- The pressure on the suction side is higher than on the discharge side or if you intend to carry out dosing into depressurized lines

In cases like this, if you do not use a back-pressure valve, imprecise dosing results will occur or overloading will result. The back-pressure valve solves these problems by generating a defined, constant backpressure.

In some circumstances, a back-pressure valve is unnecessary if you use a hose injection nozzle and if the backpressure that it generates is adequate.

### 8.6.5 Pulsation dampener

Pulsation dampeners have the following functions:

- Damping pulsating delivery flows for processes that require low-pulsation dosing,
- Reducing the throughflow resistance with long pipelines

When installed on the suction side:

- Damping of acceleration mass forces and with this reduction of wear

on the dosing pump

- Preventing cavitation (pull-off of the liquid column) due to too high acceleration

However, pulsation dampeners also have important safety functions, since they prevent pressure peaks from arising that lead to piping vibrating and cause them to snap.

This problem can occur:

- With the high amplitudes of the vibrations
- When using long pipes (the severity of the pulsation increases with the length of the pipe)
- When using rigid piping instead of elastic hoses

Notes on assembly:

- You should carry out assembly in the direct vicinity of the location where you want to damp the pressure peaks (directly in front of the suction valve or directly behind the pressure valve).
- Pulsation dampeners should be installed with throttle valves or back-pressure valves installed directly behind them. By setting the valves appropriately, you can further-optimize damping of the pulsations.
- To prevent unnecessary pipe friction losses, you should lay the connecting line straight and in accordance with the rated width of the pulsation dampener.
- You must separately fasten relatively large pulsation dampeners and ones with hose connections.
- Pipelines must not transfer any mechanical tensions onto the pulsation dampener.

### 8.6.6 Priming aid

Priming aids are particularly advisable:

- In the case of dosing pumps with small volumetric displacements per stroke or with low stroke length settings
- With high suction heights
- With highly dense dosing media
- At priming for the first time due to dry valves and air in the suction line and the dosing head
- In dosing systems with frequent downtimes

Further advantages resulting from priming aids:

- Preventing cavitation in the suction line
- Gas removal
- Optical dosing control with small amounts
- Smoothing of the suction flow

### 8.6.7 Level control

Level monitoring of suction-side feeding of the dosing medium to prevent the tank being sucked dry and to ensure that it can be topped up again in good time.

### 8.6.8 Dosing of suspensions

When dosing suspensions, the dosing head must be rinsed regularly to prevent depositing. To do this, you install a feed line for the rinsing medium (water) in the suction side installation.

### 8.6.9 Suction pressure regulator

A suction pressure regulator may be necessary if the suction-side installation of the system demonstrates a varying suction pressure or supply pressure:

- Dosing pumps that are installed above dosing tanks deliver less as the tank empties, since the suction head increases.
- Dosing pumps that are installed below dosing tanks deliver less as the tank empties, since the positive delivery pressure reduces.

Further problems that can occur:

- Greater wear on the dosing pump, e.g. diaphragm rupture due to the effects of heavy forces with particularly high tanks and high-density dosing media.
- Idling of the dosing tank in the case of a diaphragm rupture or pipe breakage
- Impermissibly high forces in the pump transmission that occur when dosing pumps receive the dosing medium directly from the pressure line
- Reduced performance or destruction of fittings due to cavitation with long suction lines

Installing a suction pressure regulator is a remedy for the problems above. The suction pressure regulator is opened by the dosing pump's suction pressure. This ensures that no dosing medium can flow if the dosing pump is not running or no vacuum can be generated following a pipe fracture.

Notes on assembly:

- When using a large suction pressure regulator, you should provide a pulsation dampener on the suction side.

## 9 Electrical installation

**DANGER**

**Mortal danger from electric shock!**

If there is an electrical accident, you must disconnect the dosing pump from the mains as quickly as possible.

⇒ Install an emergency stop switch or integrate the dosing pump into the plant safety concept.

**CAUTION**

**Danger of automatic start up!**

The dosing pump does not have an ON/OFF switch and may start to pump as soon as it is connected to the mains supply.

⇒ Install an emergency stop switch or integrate the dosing pump into the plant safety concept.

**PLEASE NOTE**

**Damage due to incorrect mains voltage**

The dosing pump can be damaged if you connect it to the wrong mains voltage.

⇒ Observe the information on the mains supply that is given on the rating plate.

**PLEASE NOTE**

**Insufficient electromagnetic compatibility**

When you connect the dosing pump to a socket without an attached protective earth, it is not possible to guarantee the interference radiation and interference immunity according to EMC regulations.

⇒ Only connect the dosing pump to sockets with an attached protective earth.

### 9.1 Principles

- The dosing pump has a 110 – 250 V AC 50/60 Hz wide-range power supply unit.
- The electrical connection comply with local regulations.
- The dosing pump must be plugged into a grounded power outlet.
- To avoid dosing errors at the end of the process, the dosing pump must be locked electrically.
- The dosing pump must not be operated by switching the mains voltage on or off.
- Signal cables must not be laid parallel to high-voltage current lines or mains cables. You must route supply and signal lines in separate channels. An angle of 90° is required at line crossings.

### 9.2 Description of connection sockets

The MEMDOS SMART LDX and LAX have 3 sockets that are A-coded. The MEMDOS SMART LPX has 6 sockets. Sockets 4 and 5 are B-coded, sockets 1, 2, 3 and 6 are A-coded.

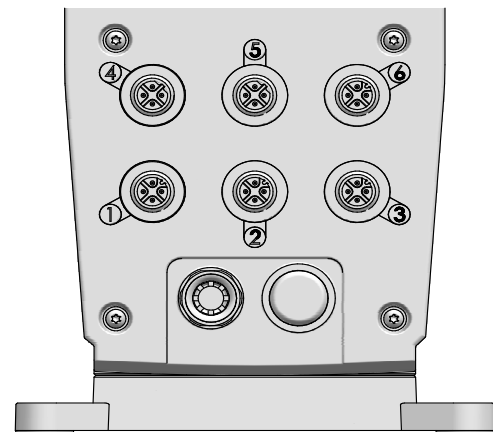


Fig. 17: Connection sockets 1 – 6 MEMDOS SMART LDX/LAX/LPX

No.	Connection socket
1	Release input and optocoupler output
2	Pulse input and analogue input
3	Level input (early warning and main alarm)
4	Fault reporting relay output 1 (only LPX)
5	Fault reporting relay output 2 (only LPX)
6	Flowcon and diaphragm rupture input (LPX only)





Tab. 10: Designation of components

### 9.2.1 Connection socket 1

Connection socket 1 is equipped with an optocoupler output and a release input. The optocoupler can be configured for stroke feedback or a fault message. The connections and switch data are listed in the following tables.

Pin	Function
Optocoupler (pin 1 and 2)	max. 30 V DC, max. 5 mA
Release input (pin 3 and 4)	potential-free circuit, Open NC or closed NO Freely programmable

Tab. 11: Technical data connection port 1

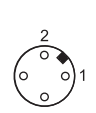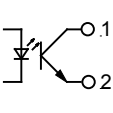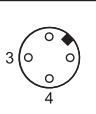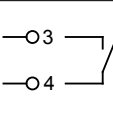Pin	M12x1 (A-coded)	Assignments	Connection	Cable colour*	
1		Optocoupler collector (+)		Brown	BN
2		Optocoupler emitter (-)		White	WH
3		Ground (GND)		Blue	BU
4		External On/Off		Black	BK

Tab. 12: Connection socket 1

\* Applies to cable colours of cables from Lutz-Jesco GmbH. No liability is accepted for cables from other manufacturers.

#### 9.2.1.1 Stroke feedback output

At the stroke feedback output, the dosing pump reports back each executed stroke to the pulse input of another dosing pump or PLC. In this way, it is possible to network several dosing pumps and to trigger synchronized dosing strokes.

The stroke feedback output can continue to be used e.g. to evaluate the signal in a PLC (stroke counting for batch mode).



Fig. 18: Synchronization of several dosing pumps by means of stroke feedback and pulse control

#### 9.2.1.2 Fault reporting optocoupler

The optocoupler will notify dosing pump faults upon activation of this function. The message can be evaluated e.g. with a PLC.

To set the fault-reporting optocoupler function, see section 10.5.2.1 "Fault messages menu" on page 28.

#### 9.2.1.3 Release input

Using the Release input, it is possible to start or stop the dosing pump externally.

To set the release input function, see section 11.3 "External On / Off via Release input" on page 33.


 
 
### 9.2.2 Connection socket 2

#### 9.2.2.1 Analogue input (LAX/LPX only)

The analog input makes it possible to control the delivery capacity by means of a 0/4 – 20 mA signal. The delivery capacity is regulated via the stroke frequency.

- 0/4 – 20 mA-Signal
- settable
- Current range variable
- Working resistance: 200 Ohm (because of the electronic fuse), not potential-free

For information on setting the Analog input operating mode, see page 31.

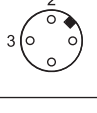Pin	M12x1 (A-coded)	Assignments	Connection	Cable colour*	
1				Brown	BN
2		(+)0/4 – 20 mA		White	WH
3		Ground (GND)		Blue	BU
4	-	+5 V DC	-	Black	BK

Tab. 13: Connection socket 2

 

\* Applies to cable colours of Lutz-Jesco GmbH cables. No liability is accepted for cables from other manufacturers.

#### 9.2.2.2 Pulse input (LDX/LPX only)

The pulse input enables the control of the delivery rate by pulses. The system regulates the delivery capacity by means of the dosing pump's stroke frequency and number of strokes in dependence on the number of pulses and the pulse spacing.

- On-site, potential-free switching
- For potential-free closing contact, e.g. a contact water meter
- 5 V DC supply voltage (current across all connections limited to a total maximum of 50 mA)
- Pulse length min. 4 ms

For information on setting the Pulse input operating mode, see page 30.

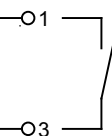Pin	M12x1 (A-coded)	Assignments	Connection	Cable colour*	
1		Pulses		Brown	BN
2		(+)0/4 – 20 mA		White	WH
3		Ground (GND)		Blue	BU
4	-	+5 V DC	-	Black	BK

Tab. 14: Connection socket 2

\* Applies to cable colours of Lutz-Jesco GmbH cables. No liability is accepted for cables from other manufacturers.

 

### 9.2.3 Connection socket 3

#### 9.2.3.1 Level input

Connection for level monitoring of a dosing tank (e.g. a suction line with a float switch).

- 5 V DC supply voltage (current across all connections limited to a total maximum of 50 mA)
- Alert and main alarm
- Potential-free circuit
- Programmable NC or NO contact

For information on setting the Level input function, see chapter 11.6 “Level” on page 34.

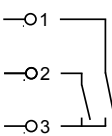Pin	M12x1 (A-coded)	Assignments	Connection	Cable colour*	
1		Pre-alarm		Brown	BN
2		Main alarm		White	WH
3		Ground (GND)		Blue	BU
4	-	+5 V DC	-	Black	BK

Tab. 15: Connection socket 3

\* Applies to cable colours of Lutz-Jesco GmbH cables. No liability is accepted for cables from other manufacturers.

 

### 9.2.4 Connection sockets 4 and 5 (LPX only)

#### 9.2.4.1 Alarm relay output

Using the alarm relay, it is possible to forward outwards disturbances on the dosing pump.

- Potential-free changeover contact
- Max. 250 V AC, 2.5 A bzw. max. 30 V DC, 2.5 A

For information on setting the Alarm relay, see chapter 10.5.2.1 “Fault messages menu” on page 28.

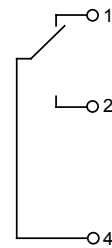Pin	M12x1 (B-coded)	Assignments	Connection	Cable colour*	
1		Break (NC) contact		Brown	BN
2		Make (NO) contact		White	WH
3		-		Blue	BU
4		Changeover contact		Black	BK

Tab. 16: Connection socket 4

 

\* Applies to cable colours of Lutz-Jesco GmbH cables. No liability is accepted for cables from other manufacturers.

### 9.2.5 Connection port 6 (only LPX)

#### 9.2.5.1 Diaphragm rupture input

A connection to a leak sensor in the flange of the dosing head to monitor for a possible diaphragm rupture.

- 5 V DC supply voltage (current across all connections limited to a total maximum of 50 mA)

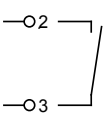Pin	M12x1 (A-coded)	Assignments	Connection	Cable colour*	
1		-		Brown	BN
2		Leak sensor		White	WH
3		Ground (GND)		Blue	BU
4		+5 V DC		Black	BK

Tab. 17: Connection socket 5

\* Applies to cable colours of Lutz-Jesco GmbH cables. No liability is accepted for cables from other manufacturers.

## 10 Control

The pump is operated and set via the touch display. The display is permanently connected to the pump as standard. Optionally, it can be configured as a detachable version with a display cable so that it can be removed from the display holder for operation. Any number of other MEMDOS SMART dosing pumps can be controlled/operated with a display. To do this, simply connect the display module to another dosing pump.

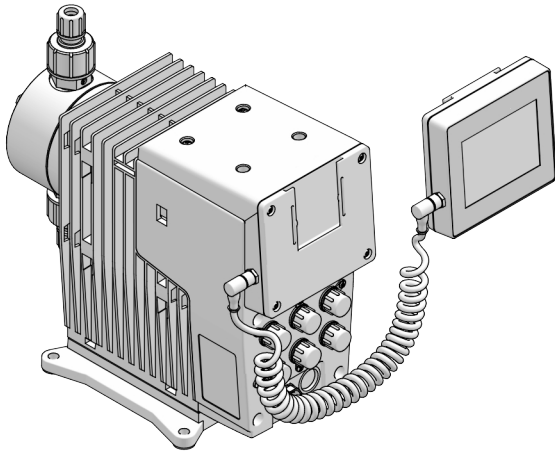


Fig. 19: Removable touch display

The start display is structured as follows:

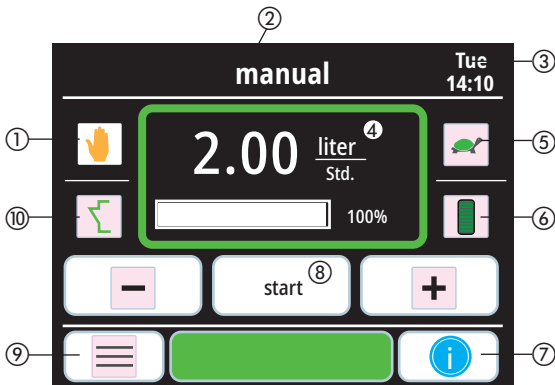


Fig. 20: Start screen

No.	Explanation
1	Symbol Operating mode
2	Current operating mode
3	Time and date
4	Currently set flow rate with unit of measurement
5	Slowmode
6	Level indicator
7	Information field
8	Start/Stop
9	Menu
10	Release input

Tab. 18: Designation of components

### 10.1 Explanation of the main menu

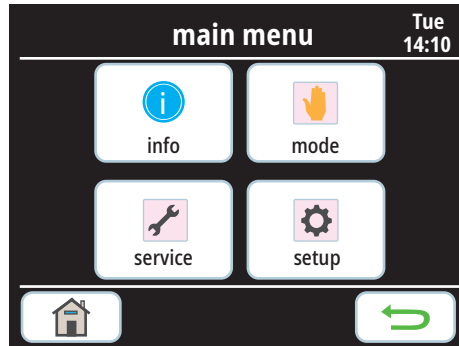


Fig. 21: Main menu

Pressing the **menu** button in the start display calls up the main menu. The dosing pump does not interrupt the dosing process. You do not stop the dosing pump until you change to a different operating mode. Press the **Home** button to return to the start screen. The **arrow** button is used to scroll back. The following can be selected in the main menu:

- **Info**: Reading out information about the pump and pump messages
- **Operating mode**: Selection of different pumping modes
- **Service**: Calibration options of the pump and setting(s) (of accessories)
- **Setup**: System settings and setting of inputs and outputs

### 10.2 Information menu

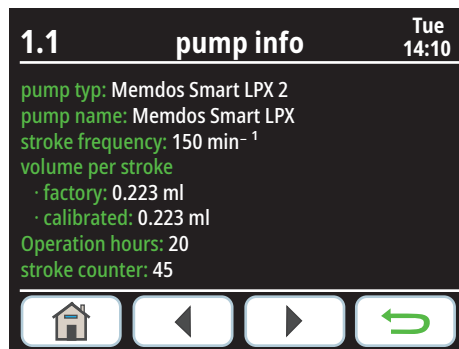


Fig. 22: Extract Menu Information



Fig. 23: Extract Menu Information

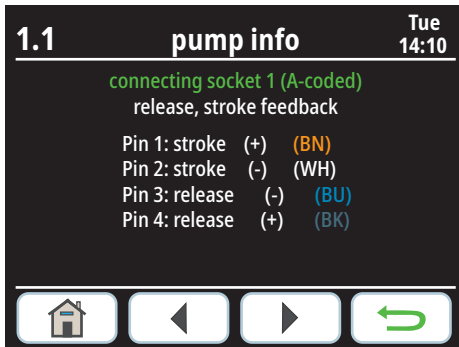


Fig. 24: Extract Menu Information

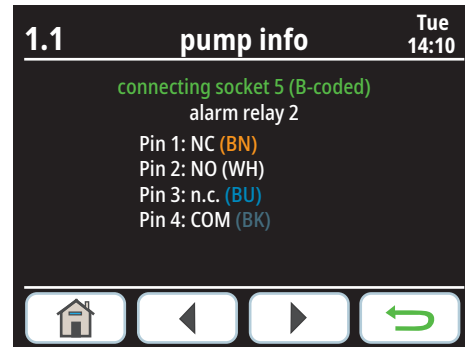


Fig. 28: Extract Menu Information

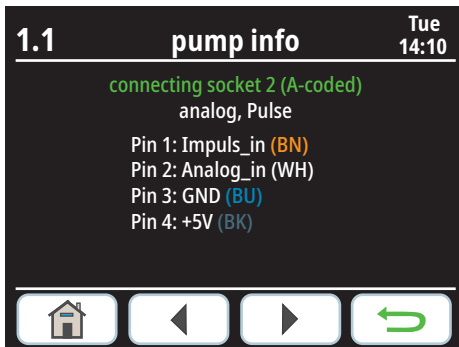


Fig. 25: Extract Menu Information

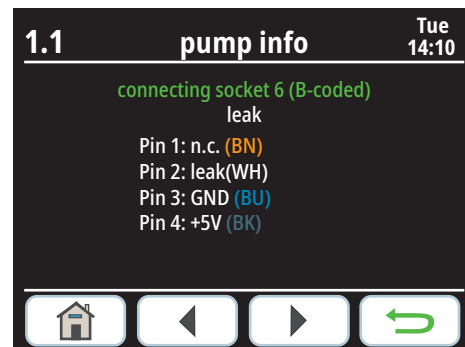


Fig. 29: Extract Menu Information

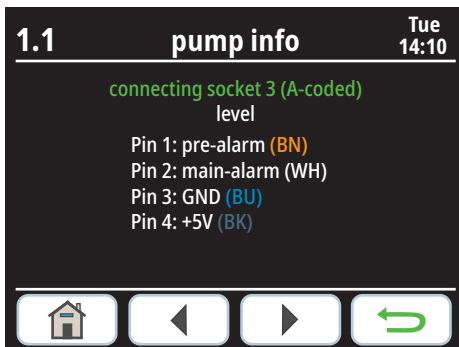


Fig. 26: Extract Menu Information

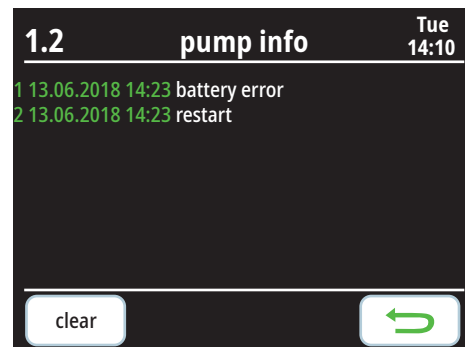


Fig. 30: Extract Menu Information

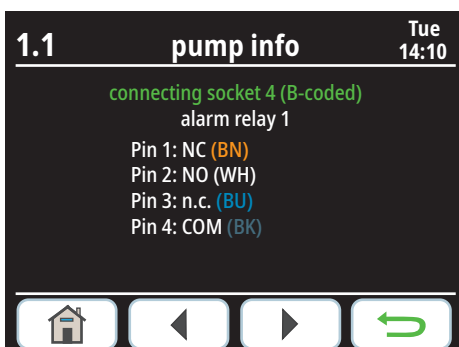


Fig. 27: Extract Menu Information

In the **Information** menu, the pump name and type, the serial number as well as the software version with programming date, the current system time, the date as well as the analogue input signal are displayed. In addition, the operating time of the pump is displayed with the corresponding number of strokes and the stroke frequency. The stroke volume ex works and the calibrated stroke volume of the dosing pump can also be read in this menu. Furthermore, information about the pin assignment and the type of socket is given for each connection socket.

### 10.3 Operating mode menu

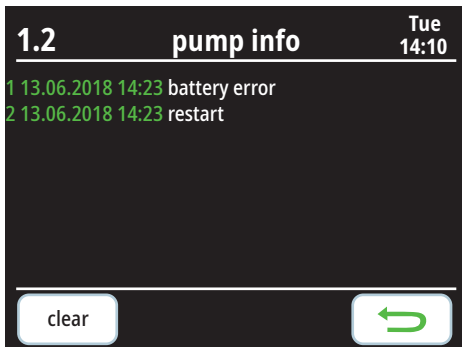


Fig. 31: Operating mode menu

You can choose from the following operating modes:

- **Manual**: In manual mode, the delivery rate is set manually. The desired delivery rate of the dosing pump can be set using the delivery rate setting buttons.
- **Analogue**: Enables control of the delivery rate via a 0/4 – 20 mA signal. (LAX/LPX only)
- **Impulse**: The pulse input enables control of the stroke frequency and the number of strokes depending on the number of pulses and the pulse spacing. (LDX/LPX only)
- **Batch**: Control of the flow rate via manual start, an external pulse, at intervals or at set times. (only LPX)

#### 10.3.1 Settings Operating mode

##### Manual

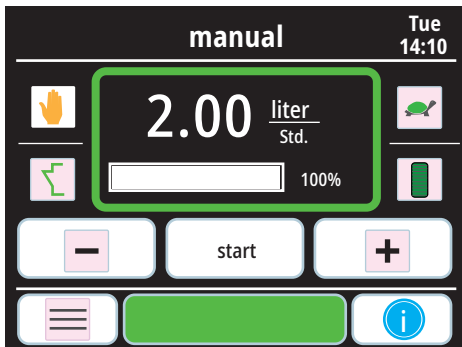


Fig. 32: Manual operating mode

The desired flow rate of the dosing pump can be varied with the aid of the flow rate setting buttons (+/-). Pressing the button + increases the delivery rate and pressing the - button decreases it. With the Start button, the pump starts pumping and with the Stop button, it is stopped again.

##### Analogue

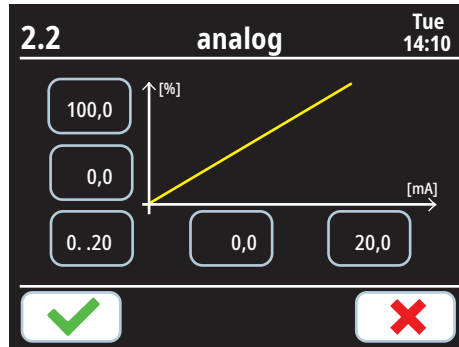


Fig. 33: Analogue operating mode

No.	Input field
1	Percentage max. value [in % - flow rate]
2	Percentage min. value [in % - flow rate]
3	Cable break function 0/4 mA
4	Start value of the current signal
5	End value of the current signal

Tab. 19: Designation of components

The operating mode **Analogue** allows the delivery rate to be controlled via a current signal. The diagram shows the percentage value [%] of the delivery rate depending on the current signal [I]. On the one hand, it is possible to switch between the setting 0 – 20 mA or with cable break function 4 – 20 mA. On the other hand, the setting ranges of the analogue signal are adjustable.

Values between 0 % and 100 % can be assigned to the percentage factor. Thus, the percentage maximum and minimum value can be assigned to a specific maximum or minimum value of the analogue signal. The limits of the analogue signal can assume any value between 0 mA and 20 mA. For example, with the corresponding setting, 100 % of the delivery rate can already be achieved with a 10 mA current signal. The 0 – 20 mA control is set as standard.

The analogue signal can be evaluated for control or measurement purposes in external switchgear.

##### Impulse

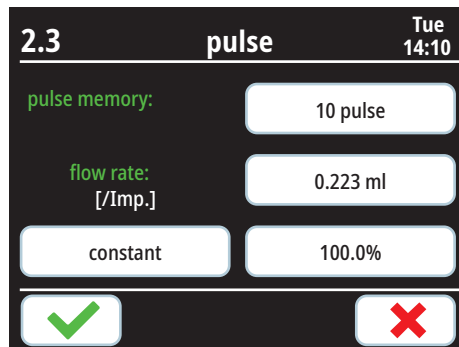


Fig. 34: Pulse operating mode

The pulse input enables the control of the delivery rate by pulses. There are different variants for the setting. The **Dynamic** setting calculates the delivery rate based on the pulse sequence, i.e. if the pulse sequence increases, the delivery rate increases at the same time. The **Constant** setting, on the other hand, allows the delivery rate of the dosing pump to be set via a fixed value.

- **Flow rate:** Delivery of a fixed output per pulse
- **Pulse memory:** All the strokes still to be executed are stored in the pulse memory

**Batch**

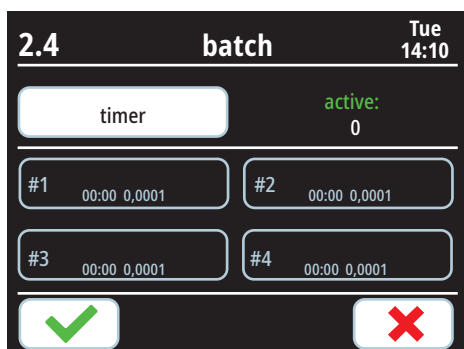


Fig. 35: Batch operating mode

In **Batch mode**, the system regulates the dosing pump's stroke frequency and the number of strokes in dependence on the delivered output. You can set the output on an individual basis for the dosing pump's run time, number of strokes and delivery capacity (stroke frequency). This allows dosing at intervals or at fixed times during the course of a week. The following types are available:

- **Manual:** Manual start of dosing via start/stop
- **Ext Start:** External starting of dosing
- **Interval:** Automatic starting of dosing at regular intervals
- **Timer:** Starting of dosing at specific times

**10.4 Service menu**

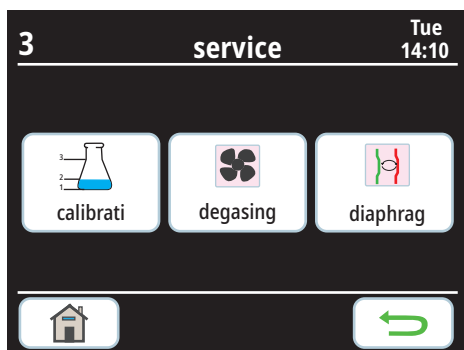


Fig. 36: Service menu

The following functions are available:

- **Calibration:** The dosing pump can be calibrated with the Calibrate function in the Service menu. In dependence on the dosing medium you are using and the existing delivery pressure, you must match the theoretical delivery capacity with that which is actually measured.
- **Venting:** The diaphragm moves back and forth quickly, making it easier to remove the air in the dosing head.

- **Diaphragm change:** The diaphragm moves to the front dead centre for easy diaphragm replacement.

**10.5 Setup menu**

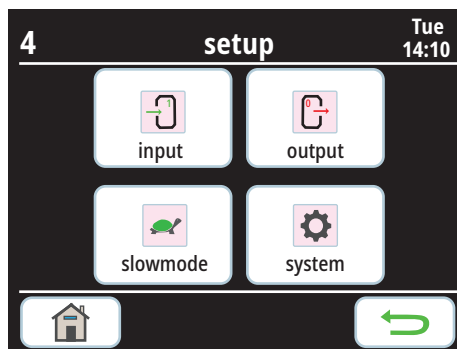


Fig. 37: Setup menu

- **Inputs:** Setting the input signals
- **Outputs:** Setting the output signals
- **Slowmode:** Slow suction
- **System:** System settings

**10.5.1 Inputs**

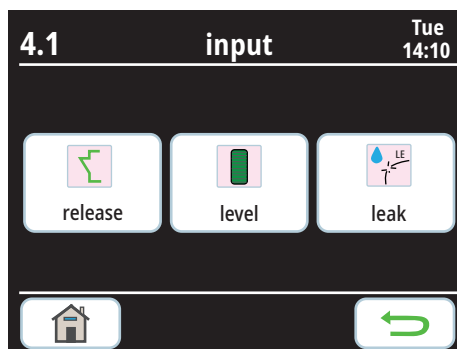


Fig. 38: Inputs

- **Release:** Using the Release input, it is possible to start or stop the dosing pump externally.
- **Level:** Fill level monitoring of the dosing medium to prevent the container from being sucked empty and thus refilling can be done in time
- **Leakage:** A connection to a leak sensor in the flange of the dosing head to monitor for a possible diaphragm rupture.

**10.5.2 Outputs**

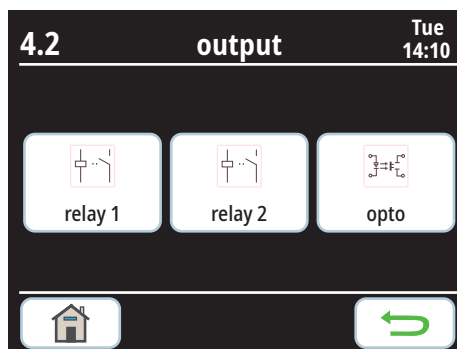


Fig. 39: Outputs

- **Relay 1**: Using the relay 1, it is possible to forward outwards disturbances on the dosing pump.
- **Relay 2**: Using the relay 2, it is possible to forward outwards disturbances on the dosing pump.
- **Opto**: Optocoupler output for transmitting a signal between galvanically isolated circuits.

**10.5.2.1 Fault messages menu**

Faults to the dosing pump can be notified externally using the fault reporting function. This can be performed using the fault reporting relays or the fault reporting optocoupler. When activating the fault reporting optocoupler in the menu, the relays will also be activated and can be used in parallel.

For connection see section 9.2.4.1 “Alarm relay output” on page 23 and section 9.2.1.2 “Fault reporting optocoupler” on page 22.

1. Use **↑** or **↓** to select the menu item *Fault message* and press **Setup**.

You can choose from the following options:

- **Not active** (factory default setting)
- **NO relay** Collective alarm relay
- **NC relay** (Opener)
- **Optocoupler N.O.** Collective alarm relay
- **Optocoupler N.C.** (Opener)

2. Use the **↑** or **↓** button to choose the desired function and press **OK**.

✓ **Fault message set.**

**10.5.3 Slowmode**

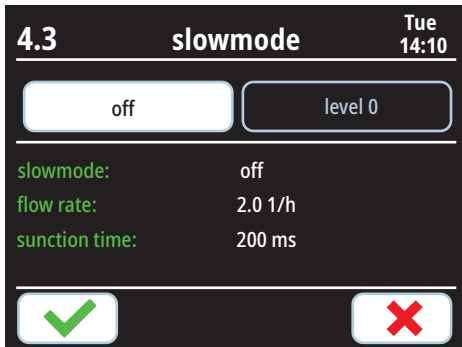


Fig. 40: Slowmode

In slow mode, four different suction speeds can be selected for gentle dosing of viscous media. You can choose from the following options:

- **Off** (factory default setting)
- **Slow Motion 1** (75 % of the standard suction speed)
- **Slow Motion 2** (50 % of the standard suction speed)
- **Slow Motion 3** (25 % of the standard suction speed)

**10.5.4 System set-up**

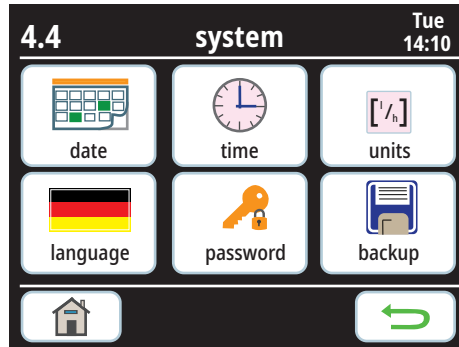




Fig. 41: System set-up

- **Date**: Enter the current date
- **Time**: Enter the current time
- **Units**: Selection of the units of measurement to be displayed. Available are: Litres per hour, litres per day, millilitres per minute, US gallons per hour, US gallons per day, imperial gallon per hour and imperial gallon per day.
- **Language**: Setting the displayed menu language. Available are: German, English, French, Italian, Dutch, Polish and Portuguese.
- **Password**: If the Release code is activated, operation of the dosing pump is blocked. You can only perform settings after entry of the correct release code. You can set any Release code you like from 0001 to 9999.

## 11 Operation


	<b>WARNING</b>
<p><b>Caustic burns or other burns through dosing media!</b></p> <p>After connecting the mains supply, residual dosing media in the dosing head can spray out.</p> <ul style="list-style-type: none"> <li>⇒ Before connecting the mains supply, connect the dosing lines.</li> <li>⇒ Check that all the screw connections have been tightened correctly and are leak-proof.</li> </ul>	

	<b>CAUTION</b>
<p><b>Danger of automatic start up!</b></p> <p>The dosing pump does not have an ON/OFF switch and may start to pump as soon as it is connected to the mains supply. This means that dosing medium can escape. Depending on the type and hazardousness of the dosing medium, this can result in injury.</p> <ul style="list-style-type: none"> <li>⇒ Stop the dosing pump before disconnecting it from the mains supply.</li> <li>⇒ Ensure that the dosing pump has been installed correctly before connecting it to the mains supply.</li> </ul>	

### 11.1 Commissioning the dosing pump

Precondition for action:


- ✓ The dosing pump was fitted and installed in accordance with the sections "Fitting the dosing pump", "Hydraulic installation" and "Electrical installation".
- ✓ All the mechanical fastenings have been inspected to ensure adequate load-bearing capacity.
- ✓ The dosing head screws have been tightened with the correct torque.
- ✓ All the hydraulic sections have been inspected to ensure they are adequately leak-proof and that the through flow direction is correct.
- ✓ The dosing pump was setup in accordance with the section 10.1 "Explanation of the main menu" on page 24.

 For initial commissioning, it is advisable to use water as the dosing medium to check that the system is leak-proof and that the dosing pump is functioning correctly. Check first whether undesirable reactions could occur between the actual dosing medium and the water.

Perform the following working steps:

1. Open the shut-off valves on the suction and discharge sides if present.
2. Plug in the dosing pump's mains plug to the power supply.


3. If the dosing head is fitted with a vent screw, vent the dosing pump (see section 11.1.1 "Venting the dosing pump" on page 29).
4. Calibrate the dosing pump (see chapter 11.1.2 "Calibrating the dosing pump" on page 30).
5. Select an operating mode and start the dosing pump in accordance with the instructions in the chapter 11.2 "Operating modes" on page 30.
  - ▶ The dosing pump primes. If it does not prime enough, use a priming aid (see chapter 8.6.6 "Priming aid" on page 20).

 At initial commissioning, it is advisable to prime the pump without backpressure. For this purpose, we recommend installing a relief valve on the discharge side of the dosing pump.

✓ **The dosing pump is commissioned.**

#### 11.1.1 Venting the dosing pump

Size 2, 5 and 10 plastic dosing heads are fitted with a vent screw. Gas bubbles can be removed from the dosing head using vent screws, in order to improve the performance of the pump. Whether venting is helpful depends on the dosing medium and the size of the pump.

	<b>CAUTION</b>
<p><b>Danger of personal injury and material damage!</b></p> <p>Dosing medium can escape if you loosen connections on the dosing head (e.g. for venting) during operation.</p> <ul style="list-style-type: none"> <li>⇒ Use sufficient personal protective equipment.</li> <li>⇒ Follow the safety data sheet of the dosing medium.</li> <li>⇒ Clean the dosing pump if dosing medium escapes.</li> <li>⇒ Dispose of the dosing medium correctly.</li> </ul>	

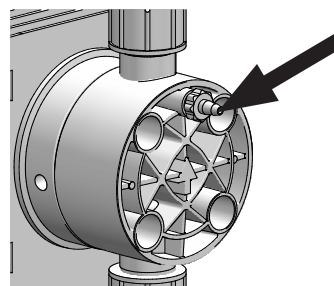


Fig. 42: Dosing head venting with venting screw

Precondition for action:

- ✓ The dosing head ventilation has been connected in accordance with chapter 8.5 "Connecting dosing head ventilation" on page 18.

Perform the following working steps:

1. Open the vent screw by one complete turn (looking onto the dosing head, anti-clockwise).
2. Press **Menu**.
3. Use the **↑** or **↓** button to choose the *Venting* menu item and press **OK**.
4. Press and hold the **Start** button.
  - ▶ The dosing pump starts delivery at the highest stroke frequency.
5. Release **Start** as soon as a continuous flow without air bubbles escapes from the dosing head ventilation entweicht.
  - ▶ The dosing pump stops delivery.
6. Close the vent screw.

✓ **The dosing pump is vented.**

**i** If you are using strongly effervescent dosing media, allow them to flow out continuously. Open the vent screw such that about one drop per 1 – 3 strokes escapes, then close the discharge.

### 11.1.2 Calibrating the dosing pump

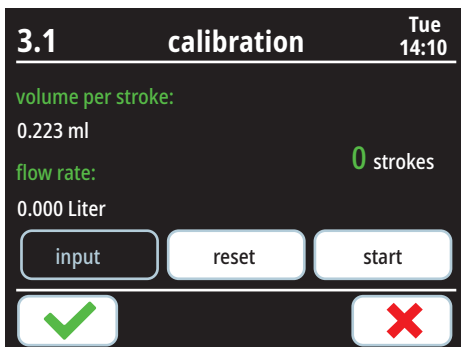


Fig. 43: Calibrating the dosing pump

In dependence on the dosing medium you are using and the existing delivery pressure, you must match the theoretical delivery capacity with that which is actually measured.

The dosing pump starts pumping as soon as **Start** is pressed. The pumped volume must be collected and measured with a metering container. Subsequently, the measured value is entered with the function **Enter** and transmitted to the pump. The dosing pump is then calibrated. Pressing the **Reset** button resets the entries to the factory setting.

## 11.2 Operating modes

The dosing pump offers the following operating modes:

- *Manual*: Manual setting of the delivery capacity.
- *Impulse*: Controlling the stroke frequency and number of strokes in dependence on the number of pulses and the pulse spacing.
- *Analogue*: Controlling the delivery capacity by means of a 0/4 – 20 mA signal.
- *Batch*: Controlling the delivery output via manual start, an external pulse or intervals.

### 11.2.1 Manual (manual operation)

#### 11.2.1.1 Selecting the operating mode

Perform the following working steps:

1. Press **Settings** in the start display.
2. In the main menu, select **Operating mode**.
3. In the menu, select operating mode **Manual**.
4. Confirm the selection by pressing the **√**.
  - ▶ You return to the main menu and the start display shows the symbol of the operating mode *Manual*.

✓ **Manual operating mode is set.**

#### 11.2.1.2 Starting the dosing pump

1. In the start display, press **Start**.
  - ▶ The dosing pump starts dosing immediately. The current delivery rate is automatically shown on the display.
2. Use **+** and **-** to set the desired stroke frequency and thus increase or decrease the delivery rate.

✓ **Dosing pump has started.**

#### 11.2.1.3 Stopping the dosing pump

→ Press **Stop** in the start display..

✓ **Dosing pump has stopped.**

**i** Pressing **Menu** does not interrupt dosing! You do not stop the dosing pump until you change to a different operating mode using the menu.

### 11.2.2 Impulse

In *Impulse* mode, the frequency and number of strokes issued by the dosing pump is controlled in dependence on the number of and clearance between the pulses of the signal applied at the pulse input (see section 9.2.2.2 “Pulse input (LDX/LPX only)” on page 22).

#### 11.2.2.1 Selecting the operating mode

Perform the following working steps:

1. Press **Menu** in the start display.
2. In the main menu, select **Operating mode**.
3. Select **Pulse** in the operating mode menu.
  - ▶ The dosing pump displays the current configuration of this operating mode's parameters.
4. Confirm the selection by pressing the **√**.
  - ▶ You return to the main menu and the start display shows a symbol of the operating mode *pulse*.

✓ **Pulse operating mode set**

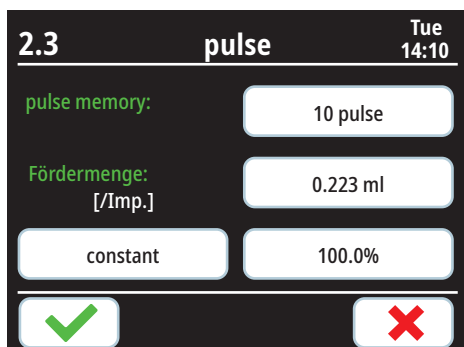


Fig. 44: Main menu with operating mode pulse

### 11.2.2.2 Select pulse type

In pulse mode, there are two different variants for setting. The *Dynamic* setting calculates the delivery rate based on the pulse sequence, i.e. if the pulse sequence increases, the delivery rate increases at the same time. The *Constant* setting allows the delivery rate of the dosing pump to be set via a fixed value.

Perform the following working steps:

1. Press **Settings** in the start display.
2. Select **Pulse** in the operating mode menu.
  - ▶ The dosing pump displays the current configuration of this operating mode's parameters.
3. Select a pulse type from **Dynamic** or **Constant**.
4. Enter the value of the desired delivery rate.
5. Confirm the entry by pressing the **✓**.

✓ **Pulse type selected and configured.**

### 11.2.2.3 Starting the dosing pump

Precondition for action:

- ✓ The dosing pump has been connected in accordance with the chapter 9.2.2.2 "Pulse input (LDX/LPX only)" on page 22.

1. Press **Start**.
2. Supply a pulse to the pulse input of the dosing pump.
  - ▶ The dosing pump starts dosing immediately. The system automatically calculates the resulting delivery capacity and displays it.

✓ **Dosing pump has started.**

### 11.2.2.4 Stopping the dosing pump

➔ Press **Stop**.

✓ **Dosing pump has stopped.**

## 11.2.3 Analogue

In *Analogue* mode, an external 0/4 – 20 mA signal at the analogue input controls the stroke frequency (see chapter "Connection socket 2" on page 22).

### 11.2.3.1 Selecting the operating mode

1. Press **Settings** in the start display.
2. In the main menu, select **Operating mode**.
3. Select **Analogue** in the operating mode menu.
  - ▶ The dosing pump displays the current configuration of this operating mode's parameters.
4. Confirm the entry by pressing the **✓**.
  - ▶ You return to the main menu and the dosing pump displays the *Analogue* symbol in the start display.

✓ **Analogue operating mode set.**

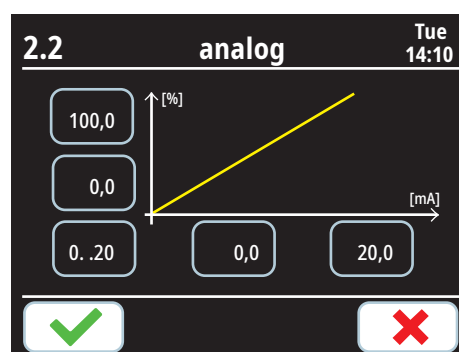


Fig. 45: Main menu with analogue operating mode

### 11.2.3.2 Setting the signal mode

You have the option of setting a 0 - 20 mA or a 4 - 20 mA signal.

With the cable break function, you have the option of setting a 0 - 20 mA or a 4 - 20 mA signal.

1. Press **Settings** in the start display.
2. Select **Analogue** in the operating mode menu.
3. By pressing the **0..20** button, you can switch between the two signal types.
4. Confirm your entry with **✓**.

✓ **The signal mode is set.**

### 11.2.3.3 Set current values

1. Press **Settings** in the start display.
2. Select **Analogue** in the operating mode menu.
3. The dosing pump displays the current configuration of this operating mode's parameters.
4. Set the desired current values and flow rates. A value in the range of 0.00 - 20.00 mA is permissible for the current value and a value of 0 - 100 % for the delivery rate.
5. Confirm your entry with **✓**.

✓ **Current values for delivery rates are set.**


### 11.2.3.4 Starting the dosing pump

Precondition for action:

- ✓ The dosing pump has been connected in accordance with the chapter 9.2.2.1 "Analogue input (LAX/LPX only)" on page 22.
- 1. Press **Start**.
- 2. Route a 0 - 20 mA or a 4 - 20 mA signal to the analogue input of the dosing pump.
  - ▶ The dosing pumps starts dosing immediately. The system automatically calculates the resulting delivery capacity and displays it.
- ✓ **Dosing pump has started.**

### 11.2.3.5 Stopping the dosing pump

- ➔ Press **Stop** or reduce the incoming signal to the value for *0% current* or less.

 If the signal value is below 4 mA for a 4 - 20 mA signal, the error message *cable break* appears in the information field.

- ✓ **Dosing pump has stopped.**

## 11.2.4 Batch

The operating mode Batch is a batch dosing in which the stroke frequency and the number of strokes of the dosing pump are controlled depending on the required flow rate.

### 11.2.4.1 Selecting the operating mode

Perform the following working steps:


- 1. Press **Settings** in the start display.
- 2. In the main menu, select **Operating mode**.
- 3. Select the menu operation mode **Batch**.
  - ▶ The dosing pump displays the current configuration of this operating mode's parameters.
- 4. Confirm your entry with **✓**.
  - ▶ You return to the main menu and the dosing pump displays the *Batch* symbol in the start display.
- ✓ **Batch operating mode set.**

### 11.2.4.2 Select batch type

You can choose from the following modes in *Batch mode*:

- Manual External Start
- Interval
- Timer

### Manual External Start

 The system marks the currently active mode by displaying *(On)* after the menu item. In the factory default setting, the *Start/Stop* mode is preselected: *Start/Stop (On)*.

Batch mode types *Start/Stop* and *External Start* do not differ by virtue of the configuration; rather, the only difference is in the way in which that the dosing pump is started (see ). They offer the following configuration options:

- *Flow rate*: Defines the required delivery rate of the dosing pump, specified in litres. The display shows the calculated running time.
- *Delivery capacity*: Specifies the required stroke frequency stated as a percentage of the maximum stroke frequency.

### Interval

The *Interval* batch mode mode offers the following configuration options:

- *Runtime*: Specifies the required runtime of the dosing pump; input in hours and minutes.
- *Flow rate*: Defines the required delivery rate of the dosing pump, specified in litres. The display shows the calculated running time.
- *Delivery capacity*: Specifies the required stroke frequency stated as a percentage of the maximum stroke frequency.

- ➔ Once all settings have been made, the dosing pump calculates the required runtime based on the settings and shows it directly on the display (green).

### Timer

Using the MEMDOS SMART dosing pump *Timer* batch mode, you can program four different dosing procedures for a period of one week.

You can provide up to four dosing procedure(s) for each day of the week which start at a specific time (this start time is repeated for each further dosing procedure of the same mode on other days of the week). You can therefore program up to 28 dosing procedures per week. You must specify for each day of the week if no dosing procedure, dosing procedure 1, 2, 3, 4, or both dosing procedures should be started after each other. Apart from this, you must specify for each dosing procedure whether the dosing pump is to carry out dosing for a specific time or for a specific number of strokes. For each setting, the dosing pump indicates the runtime required to process this setting.

The following parameters can be configured for timers 1 to 4:

- *On/Off*: Dosing process present or not
- *Time*: Sets the start time and day of the week.
- *Flow rate*: Sets the quantity that the pump is to deliver.
- *Delivery capacity*: Sets the stroke frequency of the dosing pump.

### 11.2.4.3 Programming the dosing procedures

Perform the following working steps:

- 1. Press **Settings** in the start display.
- 2. Select **Batch** in the operating mode menu.
- 3. First select **Timer**.
- 4. Select one of the four timers to configure.

5. First determine with **On** or **Off** whether the dosing process should exist.
6. If there is a dosing process, enter the days of the week and the start time for the dosing process.
7. Set the delivery rate and the delivery capacity.
8. Additional timers can be set as required.
9. Confirm the complete selection by pressing the **✓** or cancel the entries with **X**.

✓ **Dosing procedures programmed.**

#### 11.2.4.4 Starting the dosing pump

If batch mode mode Start/Stop is set:

1. Press **Start** in the start display.
2. Press **Start** again.
  - ▶ The dosing pumps starts dosing immediately. The system automatically displays the resulting delivery capacity.

✓ **Dosing pump has started.**

If batch mode type Ext. Start is set:

1. Press **Start** in the start display.
2. Supply a pulse to the pulse input of the dosing pump.
  - ▶ The dosing pumps starts dosing immediately. The system displays the resulting delivery capacity.

✓ **Dosing pump has started.**

If batch mode mode Interval is set:

- ➔ Press **Start** in the start display.
  - ▶ The dosing pump displays the time remaining until the set interval is reached. After the time has expired, the pump starts dosing.

✓ **Dosing pump has started.**

If batch mode mode Timer is set:

- ➔ Press **Start** in the start display.
  - ▶ The dosing pump starts dosing when one of the set days of the week and one of the set start times are reached.

✓ **Dosing pump has started.**

#### 11.2.4.5 Stopping the dosing pump

- ➔ Press **Stop**.

✓ **Dosing pump has stopped.**

### 11.3 External On / Off via Release input

Regardless of the selected operating mode, you can start or stop the dosing pump by means of the closed switching contact on the Release input. If you set the function, the system displays in the selected operating mode the symbol for configuration of the Release input.

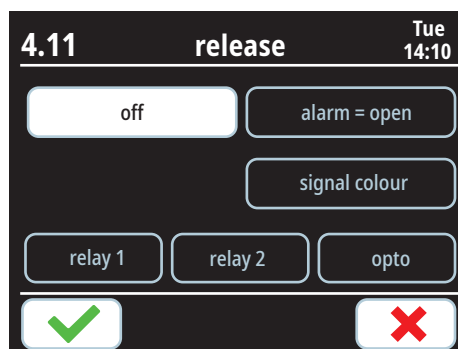


Fig. 46: Setting options Release


The release enables the dosing pump to be started or stopped externally. Connection see section 9.2.1 "Connection socket 1" on page 22. You can choose from the following options:

- Not active (factory default setting)
- Alarm = contact (enables the dosing pump if both contacts are closed),
- Alarm = open (enables the dosing pump if both contacts are open).

Perform the following working steps:

1. Press **Menu** in the start display.
2. In the main menu, select **Setup**.
3. From the Setup menu, select **Inputs**.
  - ▶ The dosing pump displays the configuration of the enable input.
4. Activate the release input via **Off/On** and determine with **Alarm = Open** whether the contacts are opened or closed. By selecting the individual relays or optocouplers, you can determine which ones are switched. Furthermore, you can assign different signal colours to the release.
5. Confirm the selection by pressing the **✓**.

✓ **Release set.**

 The system displays the selected setting of the Release input as an icon on the start screen of each operating mode.

## 11.4 Leakage

If a diaphragm ruptures, the dosing medium starts to leak. This leakage is drained via the leakage opening. On the flange of the dosing head, there are three openings for this purpose. By connecting a leakage probe (LJ accessory), a switching signal can be routed to the outside.

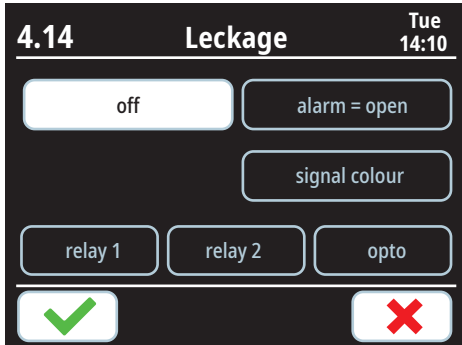


Fig. 47: Leakage setting options

Perform the following working steps:

1. Press **Menu** in the start display.
2. In the main menu, select **Setup**.
3. From the Setup menu, select **Inputs** and then **Leakage**.
4. Activate the leakage via **Off/on** and determine with **Alarm = Open**, whether the contact is opened or closed. By selecting the individual relays or optocouplers, you can determine which ones are switched. Furthermore, you can assign different signal colours to the leakage.
5. Confirm the selection by pressing the **✓** or return with **X**.

✓ **Leakage set.**

## 11.5 Outputs

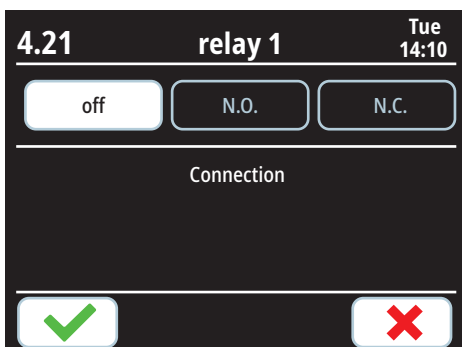


Fig. 48: Setting options relay

The outputs can be used to report faults in the dosing pump externally. This can be performed using the relay or the optocoupler. The optocoupler also has the function for stroke feedback.

For connection see section 9.2.4.1 "Alarm relay output" on page 23 and section 9.2.1.2 "Fault reporting optocoupler" on page 22.

Perform the following working steps:

1. Press **Settings** in the start display.
2. In the main menu, select **Setup**.
3. Select **Outputs** in the Setup menu.

4. The dosing pump displays relays and an optocoupler for selection.
5. Select a relay or the optocoupler.
6. Activate the relay or the optocoupler via **Off/On**.
7. Relay selection: Determine whether the relay is to be a normally open contact with **N.O.** or a normally closed contact with **N.C.**; optocoupler selection: Determine whether the optocoupler is to be a normally open contact with **N.O.** or a normally closed contact with **N.C.** or whether the optocoupler is to be for stroke feedback.
8. Confirm the selection by pressing the **✓** or return with **X**.

✓ **Outputs set.**

## 11.6 Level

Level monitoring of suction-side feeding of the dosing medium to prevent the tank being sucked dry and to ensure that it can be topped up again in good time. For this purpose, the level monitoring has two alarm levels: Alert and main alarm. Connection see section 9.2.3.1 "Level input" on page 23.

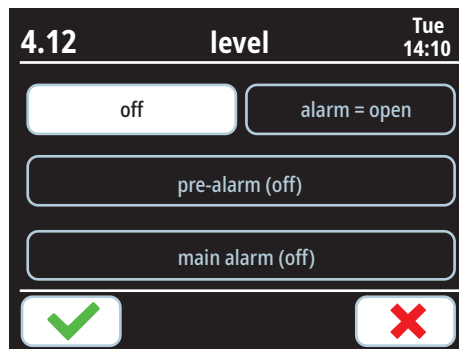

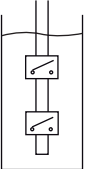
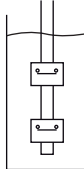

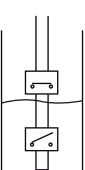
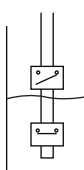

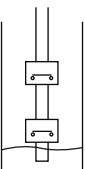
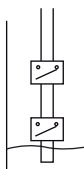


Fig. 49: Setting options for level monitoring

Perform the following working steps:

1. Press **Menu** in the start display.
2. In the main menu, select **Setup**.
3. From the Setup menu, select **Inputs**.
  - The dosing pump shows the level monitoring settings.
4. Activate this via **Off/On** and determine with **Alarm = Open** whether the contact is opened or closed.
5. Activate or deactivate the pre-alarm or main alarm as required.
6. Confirm the selection by pressing the **✓**.

✓ **Release set.**


Status	Display	Level input		Dosing pump
		Alarm = contact	Alarm = open	
Tank full				Running
Tank at minimum (alert)				Running
Tank empty (main alarm)				Stopped

Tab. 20: Level input configuration

### 11.7 Activating the password protection

If the password is activated, operation of the dosing pump is blocked for some or all areas. As soon as a button is pressed for a blocked area, the password must be entered. If you enter the code correctly, you have 5 minutes in which to operate the dosing pump. When the 5 minutes have elapsed, you must re-enter the code, even if you are in the middle of making another entry (this does not include settings in the menus).

You can only perform settings after entry of the correct password. You can set any password you like from 0000 to 9999. In the factory setting, the password is 1234.



**WARNING**

**Caustic burns or other burns through dosing media!**

If the password protection is activated, operation of the dosing pump is blocked. The only way to stop a dosing pump without entry of the password is via the power supply. In unfavourable cases, if the password protection has been inadvertently activated or the user has forgotten the password, the dosing pump cannot be stopped in time. This can result in injury.

⇒ Install an emergency stop switch or integrate the dosing pump into the plant safety concept.

Perform the following working steps:

1. Press **Settings** in the start display.
2. In the main menu, select **Setup**.
3. Select **System** in the Setup menu.

4. Enter the password 1234 when setting for the first time.
    - ▶ The dosing pump displays the configuration of the password protection.
  5. In this menu, activate the password protection with **Off/On** and change the password with **Change** if necessary. Furthermore, you can configure whether individual areas of the pump are to be locked or all setting options.
  6. Confirm the selection by pressing the **✓**.
- ✓ **Password protection activated.**

### 11.8 Decommissioning the dosing pump

Perform the following working steps:

1. Stop the dosing pump in accordance with the selected operating mode.
2. Unplug the dosing pump's mains plug from the power supply.
3. Disconnect all electrical connections.
4. Depressurize all the hydraulic parts in the system.
5. Unplug all the hydraulic connections on the dosing pump.
6. Empty the dosing head.
7. Remove any residual dosing medium from the dosing head by flushing the system with a washing agent. Ensure that the washing agent is compatible with the dosing medium.

✓ **Dosing pump is decommissioned.**

### 11.9 Shutting down in an emergency

- In an emergency, you must immediately disconnect the dosing pump from the mains supply or activate the Emergency Stop switch installed in the system.
- Depending on the type of incident, you must depressurized the hydraulic connections or locked to prevent dosing medium from escaping.
- You must follow the safety data sheet of the dosing medium.

### 11.10 Storage

Storing the dosing pump correctly extends its service life. You should avoid negative influences like extreme temperatures, high humidity, dust, chemicals, etc.

Ensure ideal storage conditions where possible:

- The storage place must be cold, dry, dust-free and moderately ventilated.
- Temperatures between +2 °C and +40 °C (for PP and PVDF dosing heads, between +2 °C and +60 °C)
- Relative air humidity must not exceed 90 %

### 11.11 Transportation

Perform the following working steps:

- The unit should be thoroughly cleaned. Any dangerous dosing media

must be additionally neutralised and decontaminated.

- All accessories should be dismantled.
- All openings should be closed, so that no foreign objects can get into the system.
- The dosing pump must be suitably packed, preferably in the original packing, for transportation.


If the device is sent back to the manufacturer, please follow chapters 17 “Decontamination declaration” on page 44 and 18 “Warranty claim” on page 45.


### **11.12 Disposal of old equipment**


- The waste unit must be thoroughly cleaned. Any dangerous dosing media must be additionally neutralised and decontaminated.
- Any residual dosing media must be removed in a professional manner.
- The dosing pump must be disposed of in accordance with applicable local laws and regulations. The device does not belong to household waste!
- As the disposal regulations may differ from country to country in the European Union, please consult your supplier if necessary. In Germany, the manufacturer must provide free-of-charge disposal provided the unit has been sent in a safe manner.


## 12 Maintenance

Dosing pumps by Lutz-Jesco are manufactured to the highest quality standards and have a long service life. Nevertheless, some of their parts are subject to wear due to operation (e.g. diaphragms, valve seats, valve balls). This means that regular visual inspections are necessary to ensure a long operating life. Regular maintenance will protect the dosing pump from operation interruptions.

	<b>DANGER</b>
<p><b>Mortal danger from electric shock!</b></p> <p>Live parts can inflict fatal injuries.</p> <ul style="list-style-type: none"> <li>⇒ Before carrying out any maintenance work, always disconnect the dosing pump from the power supply.</li> <li>⇒ Secure the dosing pump from accidental power-up.</li> </ul>	

	<b>WARNING</b>
<p><b>Caustic burns or other burns through dosing media!</b></p> <p>While working on the dosing head, valves and connections, you may come into contact with dosing media.</p> <ul style="list-style-type: none"> <li>⇒ Use sufficient personal protective equipment.</li> <li>⇒ Rinse the dosing pump with a medium (e.g. water) which does not pose any risk.</li> <li>⇒ Release pressure in hydraulic parts.</li> <li>⇒ Never look into open ends of plugged pipelines and valves.</li> </ul>	

	<b>WARNING</b>
<p><b>Caustic burns or other burns through dosing media!</b></p> <p>After connecting the mains supply, residual dosing media in the dosing head can spray out.</p> <ul style="list-style-type: none"> <li>⇒ Before connecting the mains supply, connect the dosing lines.</li> <li>⇒ Check that all the screw connections have been tightened correctly and are leak-proof.</li> </ul>	

	<b>CAUTION</b>
<p><b>Danger of personal injury and material damage!</b></p> <p>The dosing pump can generate a pressure that is many times the rated one. The dosing medium can escape in the case of material failure or wear on the dosing head, the connection pipe or the seals that are used.</p> <ul style="list-style-type: none"> <li>⇒ Carry out maintenance work at the recommended intervals.</li> </ul>	

### 12.1 Maintenance intervals

This table gives you an overview of maintenance work and the intervals at which you must carry it out. The next few sections contain instructions for carrying out this work.

Maintenance work to be carried out	Frequency
Check that piping is seated firmly	Regularly
Check that suction and pressure valves are seated firmly	Regularly
Clean suction and pressure valves	Regularly
Check that electrical connections are not damaged	Regularly
Tighten up dosing head bolts	<ul style="list-style-type: none"> <li>■ Regularly</li> <li>■ Before initial commissioning</li> <li>■ After each diaphragm change</li> </ul>
Check diaphragm for leakage due to rupture	Regularly (as long as no leak monitoring system is installed)
Check that the installed accessories are functioning correctly	Regularly
Check the dosing pump for unusual noises during operation, unusual temperatures or smells	Regularly
Replace parts that are subject to wear (diaphragms, valves, seals, etc.)	When unacceptable levels of wear are detected
Rinse out and clean the dosing pump	<ul style="list-style-type: none"> <li>■ Before changing diaphragms</li> <li>■ Before taking out of service for a long period of time</li> <li>■ After feeding aggressive, sticky, crystallising or contaminated liquids</li> </ul>

Tab. 21: Maintenance information and maintenance intervals

### 12.2 Tighten up dosing head bolts

→ Tighten the dosing head bolts in diagonally opposite sequence with a torque wrench.

The necessary torque is 180 Ncm.

## 12.3 Change the diaphragm

The dosing pump has automatic diaphragm change program which simplifies replacing diaphragms.

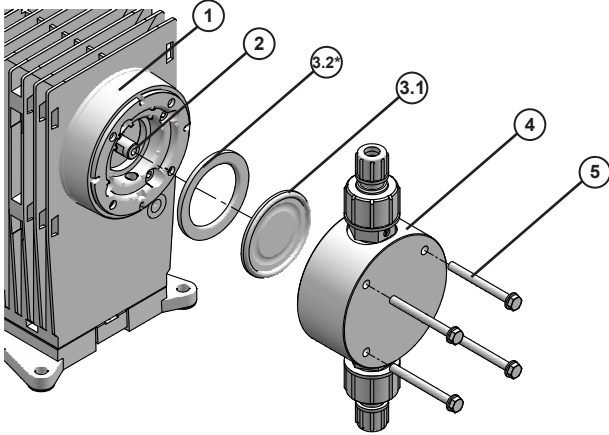


Fig. 50: Exploded view of the diaphragm and dosing head

\* only for sizes 20 and 30

### 12.3.1 Remove the old diaphragm

Precondition for action:

- ✓ You have disconnected the dosing pump from the mains supply.
- ✓ You have depressurised the hydraulic sections of the plant.
- ✓ You have rinsed the dosing pump using a safe medium (e.g. water).

Perform the following working steps:

1. Screw out the four screws (5) on the dosing head using a suitable tool (SW 3 Allen key) and take off the dosing head (4).
2. Press **Menu**.
3. Use the **↑** or **↓** button to choose the *Diaphragm change* menu item and press **OK**.
4. Press **Start**.
  - ▶ The diaphragm travels to the front end position. The message *Please wait!* is displayed.
5. Wait until the message *Change!* is displayed.
6. Use pliers to bend the edge of the diaphragm (3) slightly upwards and screw it out counter-clockwise.

### 12.3.2 Install a new diaphragm

Precondition for action:

- ✓ You have thoroughly cleaned the diaphragm rod (2) and the diaphragm flange (1) so that the new diaphragm is not affected by dosing medium residues.
- ✓ The diaphragm (3) thread was lightly greased (e.g. Molycote Longterm W2).

Perform the following working steps:

1. Screw the diaphragm manually in the clockwise direction until it safely contacts into the diaphragm rod.



### PLEASE NOTE

#### Damage to the dosing head/diaphragm leaks

If you tighten the screws too much, this can lead to the dosing head being damaged. However, not tightening the screws enough leads to the diaphragm being leaky and correct functioning being affected.

⇒ Tighten the screws to a torque of 180 Ncm.

2. Bring the dosing head into position and insert the screws. First tighten the screws finger-tight. After this, tighten the bolts on the diagonal, e.g. top left – bottom right – top right – bottom left.

✓ **Diaphragm change finished.**



It may be necessary to gauge the delivery capacity after replacing the diaphragm or other dosing pump spare parts.

## 12.4 Clean suction and pressure valves

Contaminated valves affect the dosing precision and this means that you should clean the valves on a regular basis.

With dosing heads made of plastic, when replacing a valve you must replace the complete dosing head.

## 13 Troubleshooting

See below for information about how to rectify faults on the device or the system. If you cannot eliminate the fault, please consult with the manufacturer on further measures or return the dosing pump for repair.

### 13.1 Dosing pump not delivering or output too low

Possible cause	Remedy
Wrong type of dosing pump selected	→ Check the dosing pump's technical data and if necessary select a type with a higher delivery capacity.
Valve leaking or blocked	→ Clean the valve and vent the dosing pump. → Tighten the screw connections.
Valve installed incorrectly	→ Reassemble the valve. Ensure that the valve balls are located above the valve seats.
Valve damaged (e.g. valve balls)	→ Remove the damaged parts or install a new valve.
Suction line is leaking	→ Seal the leak locations or replace the parts.
Suction line is blocked (e.g. screen in foot valve)	→ Clean the suction line.
Shut-off valves closed	→ Open the shut-off valves. Inspect the dosing pump for possible damage.
Suction head too high	→ Set the dosing pump to feed or reduce the suction head. → Install a priming aid.
Viscosity too high	→ Possibly reduce the concentration of the dosing medium or increase the temperature. → Install spring-loaded valves. → Increase the pipe diameter.
Current supply interrupted	→ Reconnect the current supply
The dosing pump's electrical data does not match that of the mains supply	→ Check the electrical installation.

Tab. 22: Type of fault: Dosing pump not delivering or output too low

Possible cause	Remedy
System backpressure too high (measured at discharge connection of dosing pump)	→ Clean blocked injection nozzle. → Install pulsation dampeners to reduce pressure peaks if pipes are too long. → Check function of safety valves.

Tab. 22: Type of fault: Dosing pump not delivering or output too low

### 13.2 Dosing pump does not prime

Possible cause	Remedy
Valve leaking or blocked	→ Clean the valve and vent the dosing pump. → Tighten the screw connections.
Valve installed incorrectly	→ Reassemble the valve. Ensure that the valve balls are located above the valve seats.
Valve damaged (e.g. valve balls)	→ Remove the damaged parts or install a new valve.
Suction line is leaking	→ Seal the leak locations or replace the parts.
Suction line is blocked (e.g. screen in foot valve)	→ Clean the suction line.
Shut-off valves closed	→ Open the shut-off valves. Inspect the dosing pump for possible damage.
Suction head too high	→ Set the dosing pump to feed or reduce the suction head. → Install a priming aid.
Viscosity too high	→ Possibly reduce the concentration of the dosing medium or increase the temperature. → Install spring-loaded valves. → Increase the pipe diameter.
Current supply interrupted	→ Reconnect the current supply
Dry the valves	→ Dampen the dosing head and the valves → Vent the dosing head.
Air in the suction line with simultaneous pressure on the pressure valve	→ Vent the dosing head or the lines.

Tab. 23: Type of fault: Dosing pump does not prime

### 13.3 Delivery rate varies

Possible cause	Remedy
Valve leaking or blocked	<ul style="list-style-type: none"> <li>➔ Clean the valve and vent the dosing pump.</li> <li>➔ Tighten the screw connections.</li> </ul>
Valve damaged (e.g. valve balls)	➔ Remove the damaged parts or install a new valve.
Suction line is leaking	➔ Seal the leak locations or replace the parts.
Suction line is blocked (e.g. screen in foot valve)	➔ Clean the suction line.
Viscosity too high	<ul style="list-style-type: none"> <li>➔ Possibly reduce the concentration of the dosing medium or increase the temperature.</li> <li>➔ Install spring-loaded valves.</li> <li>➔ Increase the pipe diameter.</li> </ul>
The dosing pump's electrical data does not match that of the mains supply	➔ Check the electrical installation.
Suction side pressure too high (pump siphoning)	➔ Install a back-pressure valve in the pressure line.
Pressure peaks due to acceleration with long suction lines	➔ Install a suction pressure regulator.
Imprecise dosing due to changeable positive and negative suction heads.	➔ Install a suction pressure regulator.
System backpressure too high (measured at discharge connection of dosing pump)	<ul style="list-style-type: none"> <li>➔ Clean blocked injection nozzle.</li> <li>➔ Install pulsation dampeners to reduce pressure peaks if pipes are too long.</li> <li>➔ Check function of safety valves.</li> </ul>

Tab. 24: Type of fault: Delivery rate varies

#### 13.3.1 No stroke movement observed

Possible cause	Remedy
Current supply interrupted	➔ Reconnect the current supply
The dosing pump's electrical data does not match that of the mains supply	➔ Check the electrical installation.

Tab. 25: Type of fault: No stroke movement observed

Possible cause	Remedy
Pressure peaks due to acceleration with long suction lines	➔ Install a suction pressure regulator.
System backpressure too high (measured at discharge connection of dosing pump)	<ul style="list-style-type: none"> <li>➔ Clean blocked injection nozzle.</li> <li>➔ Install pulsation dampeners to reduce pressure peaks if pipes are too long.</li> <li>➔ Check function of safety valves.</li> </ul>

Tab. 25: Type of fault: No stroke movement observed

### 13.4 Dosing pump delivery rate too high

Possible cause	Remedy
Suction side pressure too high (pump siphoning)	➔ Install a back-pressure valve in the pressure line.
Pressure peaks due to acceleration with long suction lines	➔ Install a suction pressure regulator.

Tab. 26: Type of fault: Dosing pump delivery rate too high

### 13.5 Diaphragm is torn or tears too often

Possible cause	Remedy
Shut-off valves closed	➔ Open the shut-off valves. Inspect the dosing pump for possible damage.
Pressure peaks due to acceleration with long suction lines	➔ Install a suction pressure regulator.
The materials are not suitable for the dosing medium being used	➔ Check the resistance of the materials.
Diaphragm not screwed up to the end stop on the diaphragm rod	➔ Screw a new diaphragm up to the end stop.
System backpressure too high (measured at discharge connection of dosing pump)	<ul style="list-style-type: none"> <li>➔ Clean blocked injection nozzle.</li> <li>➔ Install pulsation dampeners to reduce pressure peaks if pipes are too long.</li> <li>➔ Check function of safety valves.</li> </ul>
Media sediment in dosing head	➔ Clean the dosing head.

Tab. 27: Type of fault: Diaphragm is torn or tears too often

## 14 Spare parts

### 14.1 Spare parts size 1

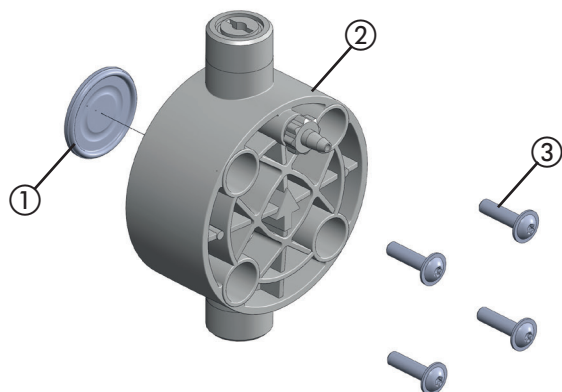


Fig. 51: Spare parts set for MEMDOS SMART LDX/LAX/LPX 2, 5, 10 (plastic dosing head)

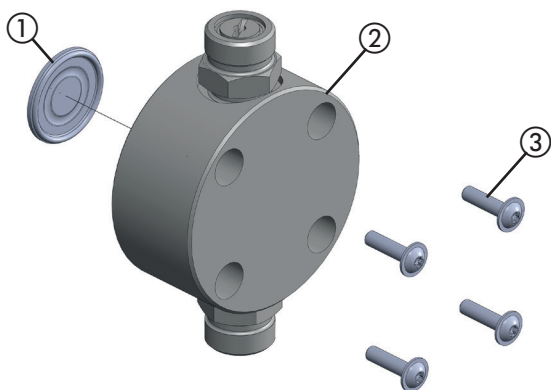


Fig. 52: Spare parts set for MEMDOS SMART LDX/LAX/LPX 2, 5, 10 (stainless steel dosing head (1.4571))

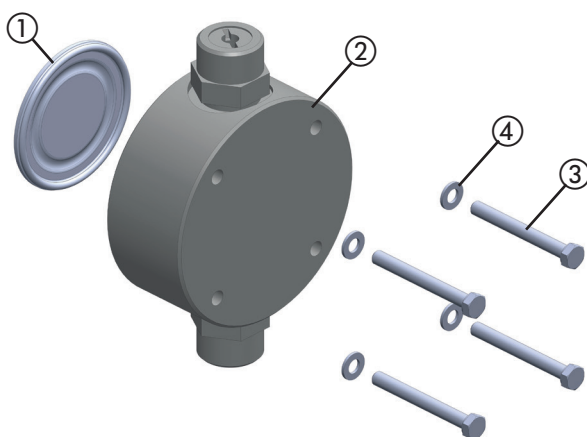


Fig. 53: Spare parts set for MEMDOS SMART LDX/LAX/LPX 20, 30 (plastic or stainless steel dosing head (1.4571))

Required sets for a complete service:

- 1 diaphragm spare parts kit
- 1 dosing head spare parts kit including valves

### 14.1.1 Diaphragm spare parts kits

Diaphragm spare parts set containing:

- 1 Diaphragm (item 1)
- 1 set of dosing head screws (item 3)
- 1 set washers (item 4) (only MEMDOS SMART LDX/LAX/LPX 20, 30).

Diaphragm kit	Size
	2
	5, 10
	20, 30

### 14.1.2 Dosing head spare parts kits including valves

Spare parts set: dosing head including screws consisting of:

- Dosing head (item 2)
- Valves
- 1 set of dosing head screws (item 3)
- 1 set washers (item 4) (only MEMDOS SMART LDX/LAX/LPX 20, 30).

PVC	Size
Ceramic/PVDF/FPM (Ball/Seat/Seals)	2
	5, 10
	20, 30

PP	Size
Ceramic/PVDF/FPM (Ball/Seat/Seals)	2
	5, 10
	20, 30

PVDF	Size
PTFE/PVDF/FPM (Ball/Seat/Seals)	2
	5, 10
	20, 30

Stainless steel (1.4571)	Size
Stainless steel/stainless steel/FPM (Ball/Seat/Seals)	2
	5, 10
	20, 30

## 15 Delivery characteristic curves

This Chapter is intended to give you an idea of the delivery capacity that the dosing pump can achieve at specific back pressures. These delivery capacities were determined on the manufacturer's test stands. They apply at 20 °C (68 °F) for water, at 100 % stroke frequency. The delivery capacity depends on the medium (density and viscosity) and temperature. Since these conditions vary at every installation location, you should calibrate the dosing pump.

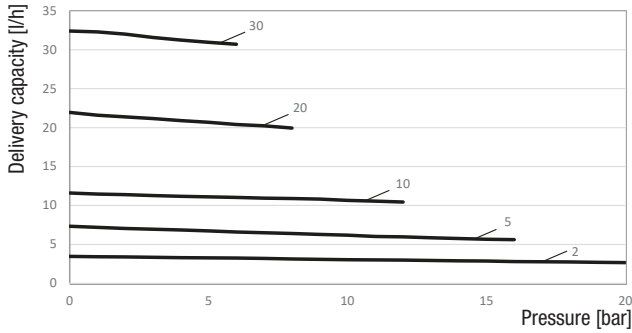


Fig. 54: Delivery characteristic curves MEMDOS SMART LDX/LAX/LPX 2 – 30

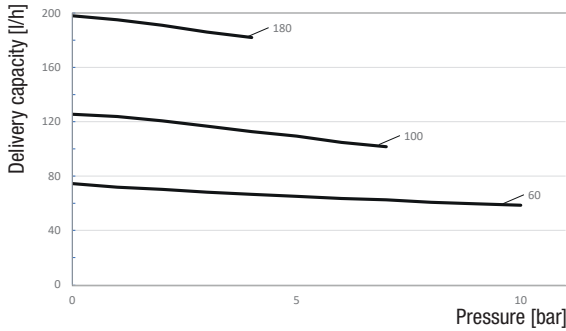


Fig. 55: Delivery characteristic curves MEMDOS SMART LDX/LAX/LPX 60 – 180

## 16 EU Declaration of Conformity



### (DE) EU-Konformitätserklärung

Hiermit erklären wir, dass das nachfolgend bezeichnete Gerät aufgrund seiner Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der aufgeführten EG-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung am Gerät verliert diese Erklärung ihre Gültigkeit.

### (EN) EC Declaration of Conformity

We hereby certify that the device described in the following complies with the relevant fundamental safety and sanitary requirements and the listed EC regulations due to the concept and design of the version sold by us.

If the device is modified without our consent, this declaration loses its validity.

### (FR) Déclaration de conformité CE

Nous déclarons sous notre propre responsabilité que le produit ci-dessous mentionné répond aux exigences essentielles de sécurité et de santé des directives CE énumérées aussi bien sur le plan de sa conception et de son type de construction que du modèle que nous avons mis en circulation.

Cette déclaration perdra sa validité en cas d'une modification effectuée sur le produit sans notre accord explicite.

### (ES) Declaración de conformidad CE

Por la presente declaramos que, dados la concepción y los aspectos constructivos del modelo puesto por nosotros en circulación, el aparato mencionado a continuación cumple con los requisitos sanitarios y de seguridad vigentes de las directivas de la U.E. citadas a continuación.

Esta declaración será invalidada por cambios en el aparato realizados sin nuestro consentimiento.

### (NL) EU-overeenstemmingsverklaring

Ondergetekende Lutz-Jesco GmbH, bevestigt, dat het volgende genoemde apparaat in de door ons in de handel gebrachte uitvoering voldoet aan de eis van, en in overeenstemming is met de EU-richtlijnen, de EU-veiligheidsstandaard en de voor het product specifieke standaard. Bij een niet met ons afgestemde verandering aan het apparaat verliest deze verklaring haar geldigheid.

### Bezeichnung des Gerätes:

Schrittmotor-Membrandosierpumpe

### Description of the unit:

Stepper Motor-driven Diaphragm Dosing Pump

### Désignation du matériel:

Pompe doseuse à membrane entraînée par moteur pas à pas

### Descripción de la mercancía:

Bomba dosificadora de membrana con motor paso a paso

### Omschrijving van het apparaat:

Stappenmotor-Membraandoseerpomp

### Typ:

MEMDOS SMART 2 – 180

### Type:

### EU-Richtlinien:

2006/42/EG, 2014/30/EU

### EC directives:

Die Schutzziele der Niederspannungsrichtlinie 2014/35/EU wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten.

The protective aims of the Low Voltage Directive 2014/35/EU were adhered to in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

### Harmonisierte Normen:


DIN EN ISO 12100:2011-03, DIN EN 809:2012-10,  
DIN EN 61000-6-2:2005, DIN EN 61000-6-3:2007 + A1:2011

### Harmonized standards:

### Dokumentationsbevollmächtigter:

Lutz-Jesco GmbH

### Authorized person for documentation:

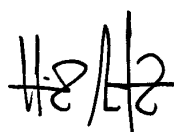

Heinz Lutz  
Geschäftsführer / Chief Executive Officer  
Lutz-Jesco GmbH  
Wedemark, 19.06.2020

Lutz-Jesco GmbH  
Am Bostelberge 19  
30900 Wedemark  
Germany

## 17 Decontamination declaration

Please copy the declaration, stick it to the outside of the packaging and return it with the device.

### Decontamination declaration

Please fill out a separate form for each appliance!

We forward the following device for repairs:

Device and device type: ..... Part-no.: .....

Order No.: ..... Date of delivery: .....

Reason for repair: .....

.....

.....

#### Dosing medium

Description: ..... Irritating:  Yes  No

Properties: ..... Corrosive:  Yes  No

We hereby certify, that the product has been cleaned thoroughly inside and outside before returning, that it is free from hazardous material (i.e. chemical, biological, toxic, flammable, and radioactive material) and that the lubricant has been drained.

If the manufacturer finds it necessary to carry out further cleaning work, we accept the charge will be made to us.

We assure that the aforementioned information is correct and complete and that the unit is dispatched according to the legal requirements.

Company / address: ..... Phone: .....

..... Fax: .....

..... Email: .....

Customer No.: ..... Contact person: .....

Date, Signature: .....

## 18 Warranty claim

### Warranty claim

Please copy and send it back with the unit!

If the device breaks down within the period of warranty, please return it in a cleaned condition with the complete warranty claim.

#### Sender

Company: ..... Phone: ..... Date: .....

Address: .....

Contact person: .....

Manufacturer order no.: ..... Date of delivery: .....

Device type: ..... Serial number: .....

Nominal capacity / nominal pressure: .....

Description of fault:.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

#### Service conditions of the device

Point of use / system designation:.....

.....

.....

Accessories used (suction line etc.):.....

.....

.....

.....

.....

Commissioning (date): .....

Duty period (approx. operating hours): .....

Please describe the specific installation and enclose a simple drawing or picture of the chemical feed system, showing materials of construction, diameters, lengths and heights of suction and discharge lines.

## 19 Index

### A

Accessories .....	19
Alarm relay output .....	23
Analogue input	
Operating mode .....	31

### B

Back-pressure valve .....	19
---------------------------	----

### C

Calibrating the dosing pump .....	30
Calibration .....	30
Clean suction and pressure valves .....	38
Commissioning .....	29
Commissioning the dosing pump .....	29
Connection ports .....	21
Contact water meter .....	19
Control .....	24
Control elements .....	10
Conveying characteristics .....	10

### D

Declaration of no objection .....	44
Decommissioning the dosing pump .....	35
Delivery characteristic curves .....	42
Design of the system .....	16
Diaphragms	
Replace .....	38
Spare parts sets .....	41
Dimensioned drawings .....	13
Dimensions .....	13
Disposal of old equipment .....	36
Dosing head	
Design .....	9
Spare parts .....	41
Dosing head venting facility .....	18
Dosing media	
Prohibited dosing media .....	7

### E

Electrical installation .....	21
EU Declaration of Conformity .....	43

### F

Foreseeable misuse .....	7
Function description .....	10

### G

General warnings .....	5
Glue-in connection .....	18

### H

Handling instructions	
Marking .....	4
Hazards due to non-compliance with the safety instructions .....	5
Hydraulic accessories .....	19
Hydraulic connections .....	16
Hydraulic installations .....	16

### I

Initial start-up	
Menu settings .....	24
Injection nozzle .....	19
Installation .....	15
electrical .....	21
hydraulic .....	16
Installing the dosing pump .....	15
Intended purpose .....	7
Intended use .....	7

### L

Leakage drain .....	18
Level input	
Connection .....	23
Level monitoring .....	20

### M

Maintenance .....	37
Maintenance intervals .....	37
Menu settings at initial commissioning .....	24

### N

Notes for the reader .....	4
----------------------------	---

### O

Operating modes .....	30
Analogue input .....	31
Manual mode .....	30
Pulse input .....	30
Operation .....	29

### P

Personnel qualification .....	6
Pressure-relief valve .....	19
Priming aid .....	20
Product description .....	9
Product warranty .....	7
Prohibited dosing media .....	7
Pulsation dampener .....	19
Pulse input	
Connection .....	22
Operating mode .....	30

## R

Rating plate .....	10
Release input	
Connection .....	22

## S

Safety .....	5
Scope of delivery .....	9
Set up information .....	15
Shut-down .....	35
Shutting down in an emergency .....	35
Signal words	
Explanation .....	4
Spare parts .....	41
Specialist staff .....	6
Storage .....	35
Stroke feedback output .....	22
Structure of the dosing pump .....	9
Suction pressure regulator .....	20
Suspensions .....	20
System piping .....	16

## T

Technical data .....	12
Temperatures	
Approved ambient temperature .....	12
Threaded connection .....	18
Tighten up dosing head bolts .....	37
Transportation .....	35
Troubleshooting .....	39

## V

Venting .....	29
Venting the dosing pump .....	29

## W


Warnings	
General warnings .....	5
Marking .....	4
Warning sign	
Explanation .....	4
Warranty claim .....	45
Water meter .....	19
Working in a safety-conscious manner .....	6









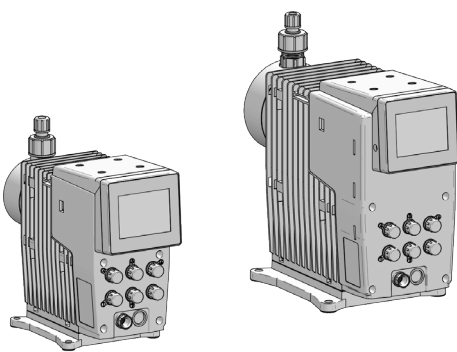

## **Lutz-Jesco GmbH**

Am Bostelberge 19  
D-30900 Wedemark

Phone: +49 5130 5802-0  
[info@lutz-jesco.com](mailto:info@lutz-jesco.com)  
[www.lutz-jesco.com](http://www.lutz-jesco.com)

Operating instructions  
MEMDOS SMART LDX/LAX/LPX