


# Multi-Channel Controller **TOPAX<sup>®</sup> MC**

Operating instructions

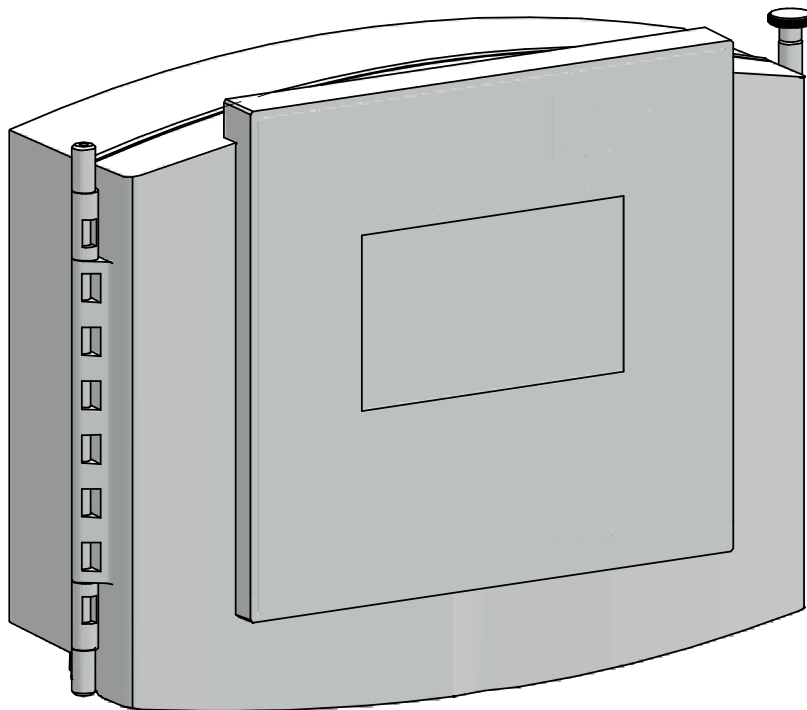

Read the operating manual!

The user is responsible for installation and operation related mistakes!



## Table of Contents

<b>1</b>	<b>Notes for the Reader</b> .....	4	<b>10</b>	<b>Maintenance</b> .....	35
1.1	General non-discrimination .....	4	10.1	Maintenance intervals .....	35
1.2	Explanation of the signal words .....	4	10.2	Keeping logfiles .....	35
1.3	Explanation of the warning signs .....	4	10.3	Updating software .....	35
1.4	Identification of warnings .....	4	10.4	Battery .....	35
1.5	Identification of action instructions .....	4	10.5	Replacing the fuse .....	36
<b>2</b>	<b>Safety</b> .....	5	10.6	Resetting the settings .....	36
2.1	General warnings .....	5	10.7	Finishing maintenance .....	37
2.2	Hazards due to non-compliance with the safety instructions .....	5	<b>11</b>	<b>Troubleshooting TOPAX® MC</b> .....	38
2.3	Working in a safety-conscious manner .....	5	<b>12</b>	<b>Modbus addresses TOPAX® MC</b> .....	39
2.4	Personnel qualification .....	5	<b>13</b>	<b>EU Declaration of Conformity</b> .....	45
<b>3</b>	<b>Intended use</b> .....	7	<b>14</b>	<b>Warranty claim</b> .....	46
3.1	Notes on product warranty .....	7	<b>15</b>	<b>Glossary</b> .....	47
3.2	Intended purpose .....	7	<b>16</b>	<b>Index</b> .....	48
3.3	Foreseeable misuse .....	7			
<b>4</b>	<b>Product description</b> .....	8			
4.1	Scope of delivery .....	8			
4.2	Design and function .....	8			
4.3	multi-channel controller TOPAX® MC rating plate .....	9			
<b>5</b>	<b>Technical data</b> .....	10			
5.1	Measuring inputs .....	10			
5.2	Output modules .....	10			
<b>6</b>	<b>Dimensions</b> .....	11			
6.1	Outside dimensions .....	11			
6.2	Drillhole dimensions .....	11			
<b>7</b>	<b>Installation</b> .....	12			
7.1	Principles .....	12			
7.2	Installation on the wall .....	12			
7.3	Electrical installation .....	12			
7.4	Terminal connection .....	13			
7.5	Connecting sensors .....	14			
7.6	Connecting the actors .....	15			
7.7	Digital inputs .....	17			
7.8	RC protection for relay .....	17			
7.9	Connecting Ethernet .....	17			
7.10	RS485 interface .....	18			
<b>8</b>	<b>Commissioning</b> .....	19			
8.1	First steps .....	19			
8.2	Configuration .....	20			
8.3	Password protection .....	25			
8.4	Network settings .....	26			
<b>9</b>	<b>Operation</b> .....	27			
9.1	Confirming a message .....	27			
9.2	Logbook .....	27			
9.3	Configure trend display .....	28			
9.4	Manual mode .....	28			
9.5	Calibration .....	28			
9.6	Setpoints and reference sets .....	32			
9.7	Access via network .....	34			

## 1 Notes for the Reader

This operating manual contains information and behaviour rules for the safe and designated operation of the multi-channel controller TOPAX® MC.

Observe the following principles:

- Read the entire operating manual prior to starting-up the device.
- Ensure that everyone who works with or on the device has read the operating manual and follows it.
- Maintain the operating manual throughout the service life of the device.
- Pass the operating manual on to any subsequent owner of the device.

### 1.1 General non-discrimination

In this operating manual, only the male gender is used where grammar allows gender allocation. The purpose of this is to make the text easy to read. Men and women are always referred to equally. We would like to ask female readers for understanding of this text simplification.

### 1.2 Explanation of the signal words





Different signal words in combination with warning signs are used in this operating manual. Signal words illustrate the gravity of possible injuries if the risk is ignored:

Signal word	Meaning
DANGER!	Refers to imminent danger. Ignoring this sign may lead to death or the most serious injuries.
WARNING!	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to death or severe injuries.
CAUTION!	Refers to a potentially hazardous situation. Failure to follow this instruction may lead to minor injury or damage to property.
PLEASE NOTE	Refers to a danger which, if ignored, may lead to risk to the machine and its function.

Tab. 1: Explanation of the signal words

### 1.3 Explanation of the warning signs

Warning signs represent the type and source of a danger:


Warning sign	Type of danger
	General danger
	Danger from electrical voltage
	Danger from poisonous substances
	Danger of damage to machine or functional influences

Tab. 2: Explanation of the warning signs

### 1.4 Identification of warnings

Warnings are intended to help you recognise risks and avoid negative consequences.

This is how warnings are identified:

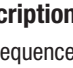Warning sign	SIGNAL WORD
	<b>Description of danger.</b> Consequences if ignored. ⇒ The arrow signals a safety precaution to be taken to eliminate the danger.

### 1.5 Identification of action instructions

This is how pre-conditions for action are identified:

- ✓ Pre-condition for action which must be met before taking action.
- ✘ A resource such as a tool or auxiliary materials required to perform the operating instructions.

This is how instructions for action are identified:


- ➔ Separate step with no follow-up action.
- 1. First step in a series of steps.
- 2. Second step in a series of steps.
  - ▶ Result of the above action.
- ✓ **Action completed, aim achieved.**


## 2 Safety


### 2.1 General warnings

The following warnings are intended to help you eliminate the dangers that can arise while handling the device. Risk prevention measures always apply regardless of any specific action.

Safety instructions warning against risks arising from specific activities or situations can be found in the respective sub-chapters.

	<b>DANGER!</b>
<b>Mortal danger from electric shock!</b>	
Wrongly connected or located cables or damaged ones can injure you.	
⇒ Replace damaged cables without delay.	
⇒ Do not use extension cables.	
⇒ Do not bury cables.	
⇒ Secure cables to avoid being damaged by other equipment.	

	<b>WARNING!</b>
<b>Increased risk of accidents due to insufficient qualification of personnel!</b>	
The device may only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.	
⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.	
⇒ Prevent access to the system for unauthorised persons.	

	<b>PLEASE NOTE</b>
<b>Do not dispose of the device in the domestic waste!</b>	
Do not dispose of electric devices via the domestic waste.	
⇒ The device and its packaging must be disposed of in accordance with locally-valid laws and regulations.	
⇒ Dispose of different materials separately and ensure that they are recycled.	

### 2.2 Hazards due to non-compliance with the safety instructions

Failure to follow the safety instructions may endanger not only persons, but also the environment and the device.

The specific consequences can be:

- Failure of major unit and system functions.
- Failure of required maintenance and repair methods
- Risk to persons when working on the device
- Danger to the environment from overdosing

### 2.3 Working in a safety-conscious manner

Besides the safety instructions specified in this operating manual, further safety rules may apply. Always observe all safety-related regulations and guidelines applicable at the product's location of use. Note in particular the following items:

- safety regulations on handling electricity and live components,
- safety regulations on handling hazardous substances,
- accident prevention regulations
- Safety and operating provisions,
- Environmental protection provisions,
- other applicable directives and laws.

### 2.4 Personnel qualification

Any personnel who work on the device must have appropriate special knowledge and skills.

Anybody who works on the device must meet the conditions below:

- Attendance at all the training courses offered by the owner,
- Personal suitability for the respective activity,
- sufficient qualification for the respective activity,
- training in how to handle the device,
- knowledge of safety equipment and the way this equipment functions,
- knowledge of this operating manual, particularly of safety instructions and sections relevant for the activity,
- Knowledge of fundamental regulations regarding health and safety and accident prevention.

All persons must generally have the following minimum qualification:

- Training as specialists to carry out work on the device unsupervised,
- sufficient training that they can work on the device under the supervision and guidance of a trained specialist.

#### 2.4.1 Specialist staff

Thanks to their professional training, knowledge, experience and knowledge of the relevant specifications, specialist staff are able to perform the job allocated to them and recognise and/or eliminate any possible dangers by themselves.

### 2.4.2 Trained electricians

Due to their professional training, knowledge and experience as well as knowledge of specific standards and provisions, trained electricians are able to do the electrical work assigned to them and to recognise and avoid any potential dangers by themselves.

They are specially trained for their specific working environment and are familiar with relevant standards and provisions.

They must comply with the legally binding regulations on accident prevention.

### 2.4.3 Trained persons

Trained persons have received training from the operator about the tasks they are to perform and about the dangers stemming from improper behaviour.

Trained persons have attended all trainings offered by the operator.

### 2.4.4 Personnel tasks

In the table below, you can check what personnel qualifications are required for the respective tasks. Only people with appropriate qualifications are allowed to perform these tasks!

Qualification	Activities
Specialist staff	Transportation Mechanical installation Commissioning Taking out of operation Fault rectification Maintenance Repairs Disposal
Trained electricians	Electrical installation
Trained persons	Control

Tab. 3: Personnel qualification

## 3 Intended use

### 3.1 Notes on product warranty

Any non-designated use of the device can impair its function and the protection provided. This leads to invalidation of any warranty claims!

Please note that liability is on the side of the user in the following cases:

- The device is operated in a manner which is not consistent with these operating instructions, particularly safety instructions, handling instructions and chapter 3 “Intended use” on page 7.
- Information on usage and environment (section 5 “Technical data” on page 10) is not adhered to.
- If people operate the device who are not adequately qualified to carry out their respective activities.
- Unauthorised changes are made to the device.

### 3.2 Intended purpose

The controller monitors the current measured values during water treatment and controls the dosing systems connected for water treatment. In this way, the controller ensures constant water parameters in various applications and can be deployed universally. One of its main applications is to maintain the quality of water in public swimming pools and in industrial applications by evaluating the measurements of a range of data including chlorine value, pH value, Redox value, the total chlorine, conductivity and the control of chlorinators.

### 3.3 Foreseeable misuse

The following section provides information regarding the device applications which are classified as non-intended use. This section is intended to allow you to detect possible misuse in advance and to avoid it.

Foreseeable misuse is assigned to the individual stages of the product lifetime:

#### 3.3.1 Incorrect assembly

- Connecting the mains voltage without a protective earth
- Non-fused or non-standard mains voltage.
- Not possible to immediately or easily disconnect the power supply
- Wrong connecting cables for mains voltage
- Sensors and actors connected to the incorrect terminals or incorrectly configured.
- Protective earth removed.

#### 3.3.2 Incorrect start-up

- Commissioning with damaged or obsolete sensors.
- Commissioning without the establishment of all protective measures, fastenings etc.

#### 3.3.3 Incorrect operation

- Protective equipment not functioning correctly or dismantled
- Unauthorised modification of the controller.
- Ignoring of alarm or error messages.
- The elimination of alarm or error messages by insufficiently-qualified personnel.
- Bridging the external fuse
- Difficult operation due to insufficient lighting or poor access to the device.
- Operation not possible due to dirty or illegible display.

#### 3.3.4 Incorrect maintenance

- Carrying out maintenance during ongoing operation
- No adequate or regular inspection of correct functioning
- No replacement of damaged parts or cables.
- No securing against reactivation during maintenance work
- Use of the wrong spare parts.

## 4 Product description

### 4.1 Scope of delivery

Please compare the delivery note with the scope of delivery. The following items are part of the scope of delivery:

- Multi-channel controller TOPAX® MC
- Operating instructions
- Mounting set
- Sensors (optional)
- Cable connection from the device to the sensors (optional)

### 4.2 Design and function

#### 4.2.1 Functional diagram of a two-channel controller

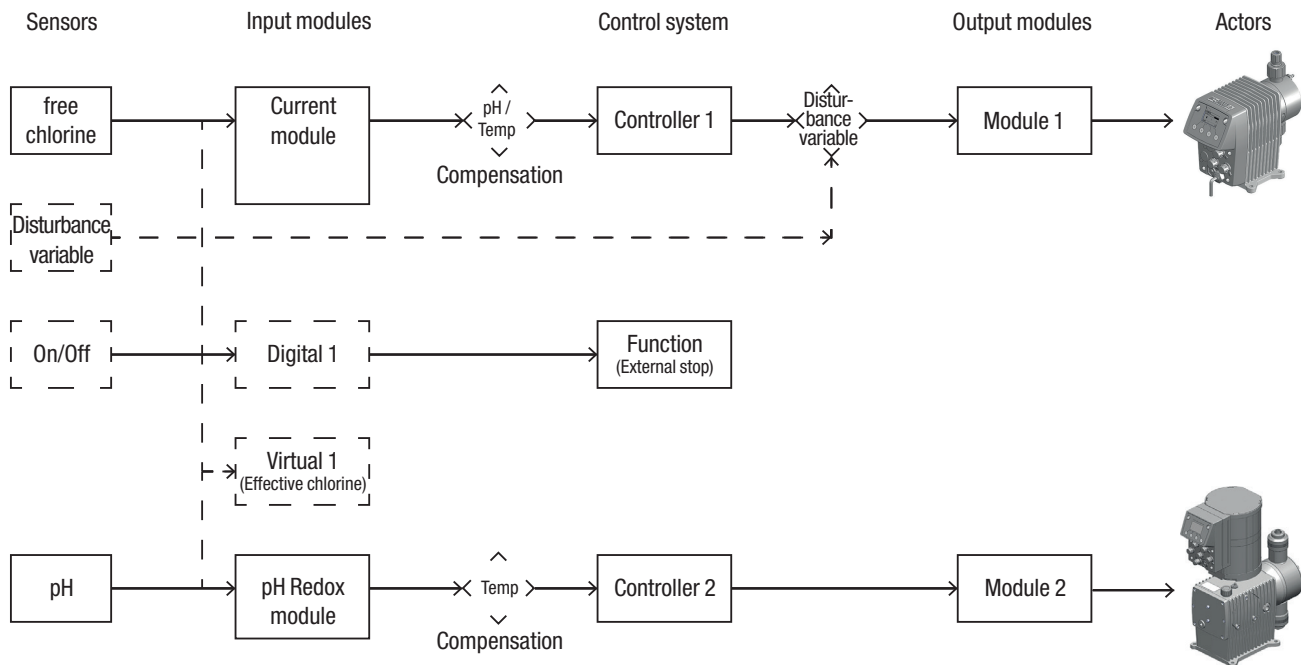


Fig. 1: Functional diagram of a two-channel controller

Gap	Field	Description
Sensors	<ol style="list-style-type: none"> <li>1. Free chlorine</li> <li>2. Disturbance variable</li> <li>3. pH value</li> </ol>	<ol style="list-style-type: none"> <li>1. Measuring the free chlorine</li> <li>2. The disturbance variable is a variable flow volume which can be taken into account</li> <li>3. Measuring the pH value</li> </ol>
Input modules	<ol style="list-style-type: none"> <li>1. Current module</li> <li>2. Digital 1</li> <li>3. Virtual 1</li> <li>4. pH Redox module</li> </ol>	<ol style="list-style-type: none"> <li>1. Module for 4 – 20 mA signals and sensors with 24 V voltage supply</li> <li>2. Digital input for the external control of a function (here: external stop)</li> <li>3. Parameter calculated (here effective chlorine)</li> <li>4. Module for pH and Redox single-rod measuring cells</li> </ol>
Control system	<ol style="list-style-type: none"> <li>1. Controller 1</li> <li>2. Controller 2</li> </ol>	<ol style="list-style-type: none"> <li>1. Controlling the free chlorine inc. pH/temperature compensation and disturbance variable</li> <li>2. Controlling the pH value inc. temperature compensation</li> </ol>
Output modules	<ol style="list-style-type: none"> <li>1. Module 1</li> <li>2. Module 2</li> </ol>	<ol style="list-style-type: none"> <li>1. Module on slot 1 to connect an actor (here: MAGDOS LD)</li> <li>2. Module on slot 2 to connect an actor (here: MEMDOS LP)</li> </ol>

Tab. 4: Explanation of functional diagram of a two-channel controller

### 4.2.2 Functions of the device

The stationary device measures the water parameters using sensors. Controlling actors such as dosing pumps controls the water parameters to the desired setpoint.

### 4.2.3 Main view

The main menu view will appear upon the start of the device or 5 minutes after the last input. The main view shows the current values from up to four sensors and further information.

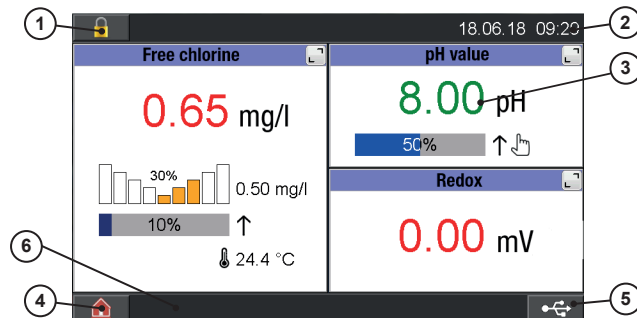


Fig. 2: Main view with three sensors

Item	Function
1	Login/password settings
2	Date/time
3	Measured values
4	Main menu
5	File Browser
6	Status row for messages

Tab. 5: Position numbers main view with three sensors

### 4.3 multi-channel controller TOPAX® MC rating plate

There is information on the product about safety or the product's way of functioning. The information must stay legible for the duration of the service life of the product.

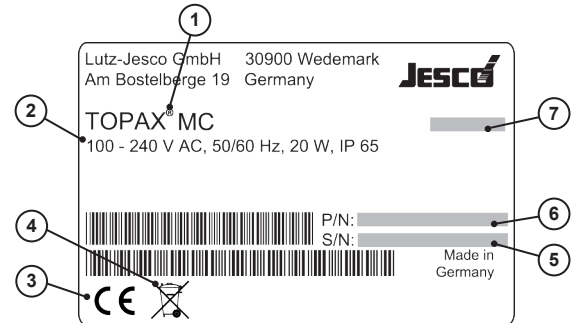


Fig. 3: Multi-channel controller TOPAX® MC rating plate

Item	Description
1	Product name
2	Technical specifications
3	Label showing conformity with applicable European directives
4	WEEE label
5	Serial number
6	Part number
7	Month/year of manufacture

Tab. 6: Position numbers rating plate multi-channel controller TOPAX® MC

## 5 Technical data

TOPAX® MC		
Housing dimensions (W x H x D)	mm	302 x 240 x 107
Voltage supply		100 – 240 V AC, 50/60 Hz
Power consumption	W	max. 20
Analogue outputs for remote transmission		4 x 0/4 – 20 mA, working resistance max. 500 Ω
Disturbance variable input	mA	0/4 – 20
Interfaces		Ethernet TCP/IP or RS485 Modbus RTU (optional)
Protection class		IP65
Ambient temperature	°C	-5 to +45 (no exposure to direct sunlight)
Control characteristic		P, PI, PID or PD behaviour, control direction selectable with disturbance variable feed forward, 2-side control selectable

Tab. 6: Technical data multi-channel controller TOPAX® MC

### 5.1 Measuring inputs

All measuring inputs consist of an input for temperature measurement via Pt100 and a second input for the measurement of a further water parameter. On some measuring inputs, this input will measure a number of different parameters.

Measuring inputs (depending on version)			
Number of measuring inputs			up to 4
Free chlorine	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)
	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)
Chlorine dioxide	Amperometric 3-electrode measuring cell with potentiostat (DMZ3.1)	mg/l	0 – 15 (dependant on the measuring cell transconductance)
	CS120 excess chlorine measuring cell	mg/l	0 – 10 (dependant on the measuring cell transconductance)
	Diaphragm-covered measuring cell	mg/l	0 – 2 (dependant on the measuring cell)
Total chlorine	Diaphragm-covered measuring cell	mg/l	0 – 10 (dependant on the measuring cell)
pH value	pH single-rod measuring cell	pH	0 – 14 (dependant on the single-rod measuring chain)
Redox value	Redox single-rod measuring cell	mV	0 – 1000 (dependant on the single-rod measuring chain)
Conductivity	Conductive conductivity measuring cell inc. temperature sensor PT100, K = 1	mS/cm	0 – 2, 0 – 20, 0 – 100
Temperature	Pt100	°C	-10 to +90

Tab. 7: Multi-channel controller TOPAX® MC measuring inputs

### 5.2 Output modules

Output modules (depending on version)		
Servomotor relay		2 x 230 V AC, 5 A (ohmic load)
	kΩ	Potentiometer feedback: 1 – 10
Servomotor 20 mA		Constant 0/4 – 20 mA output
		Servomotor with 20 mA feedback
Relays		2 x 230 V AC, 5 A (ohmic load)
Optocoupler		2 x 80 V DC, 5 mA

Tab. 8: Multi-channel controller TOPAX® MC output modules

## 6 Dimensions

All dimensions in mm

### 6.1 Outside dimensions

All dimensions in mm

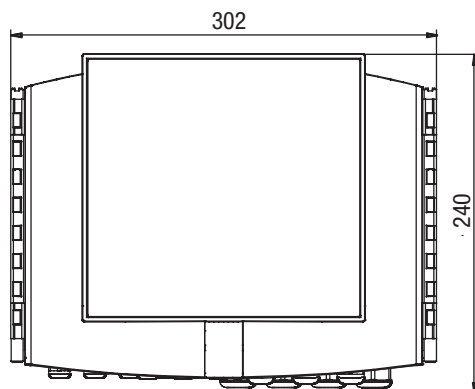


Fig. 4: Outside dimensions

### 6.2 Drillhole dimensions

All dimensions in mm

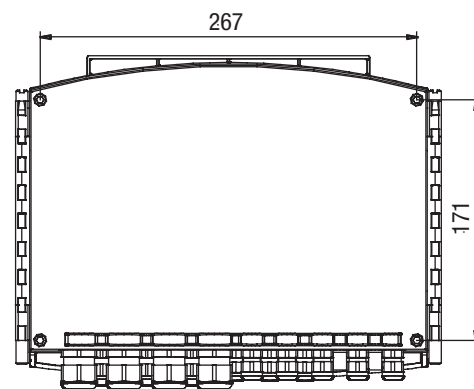


Fig. 5: Drillhole dimensions

## 7 Installation

### 7.1 Principles

Make sure that the installation location complies with the following requirements:

- The display is easily accessible and is visible.
- Plan to leave min. 20 cm free space for the installation of the cable underneath the device. You must be able to install the cable without kinking or damage.
- Various lines (e.g. voltage supply, data cable and sensitive lines for measuring purposes) must be installed separately. The different lines should only cross at 90° so as to prevent falsifications.
- Electrical, magnetic and electromagnetic fields affect signal transmission and can destroy electronic components.
- Compliance with the permissible ambient temperatures (see section 5 "Technical data" on page 10).

### 7.2 Installation on the wall

#### Resources required:

- ✂ Assembly kit
- ✂ Drill
- ✂ Slotted screwdriver

#### Perform the following work steps:

1. Drill the four drillholes for wall mounting. The exact dimensions are stated in section 6 "Dimensions" on page 11.
  2. Unscrew the screw on the right-hand side of the device and pull out the rod.
    - ▶ You can now open the device.
  3. Open the device and use the screws for wall mounting. Ensure that the device is secured to the wall.
  4. Close the device again using the rod.
- ✓ **The device is fitted on the wall.**

### 7.3 Electrical installation

The voltage supply to your device can now be performed via a normal Schuko plug or a control cabinet. Perform the specifications of this section for devices without a pre-fitted Schuko plug.

#### Pre-conditions for actions:

- ✓ The device was installed in accordance with section 7.2 "Installation on the wall" on page 12.
- ✓ A voltage supply with 100 – 240 V AC (50/60 Hz) is available.
- ✓ The voltage supply is deactivated before the start and secured against reactivation.
- ✓ The housing is open.

#### Resources required:

- ✂ Schuko plug
- ✂ Wire end sleeves 0.75 – 2.5 mm<sup>2</sup>



**DANGER!**

#### Mortal danger from electric shock!

Improperly installed or damaged components in the electronics installation can cause injury.

- ⇒ Ensure that all work on the electrical installation is performed by a qualified electrician.
- ⇒ Ensure that all work on the electrical installation is performed in a de-energised state.
- ⇒ Ensure that the power supply is secured with a fault current protective circuit.
- ⇒ Replace damaged cables or components without delay.

#### Perform the following work steps:

1. Fit wire end sleeve to the cable ends if the supply cable does not have them.
2. Open the device housing.
3. Lead the supply cable through a cable screw connection to the underside of the device.
4. Turn the cable screw connection union nut until the line is fixed in the screw connection so that the screw connection performs strain relief. Ensure that the feed cable is installed loosely.
5. Connect the voltage supply to the clamps 44 – 52. Observe the division into protective earth (PE), neutral conductor (N) and the phase (L) on the circuit board.

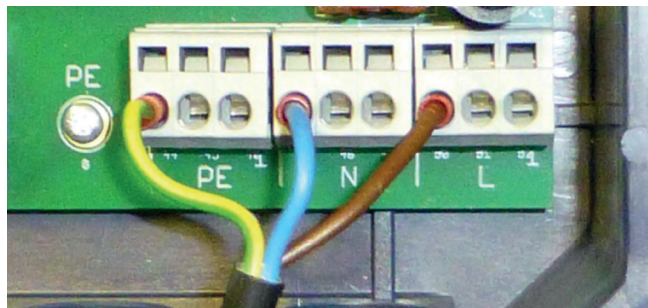


Fig. 6: Connected voltage supply

#### ✓ Electrically installation



Only 3 of 9 clamps are required for connection of the voltage supply. You can use the free clamps to supply further devices with voltage.

The contact load rating amounts to max. 4A.

### 7.4 Terminal connection

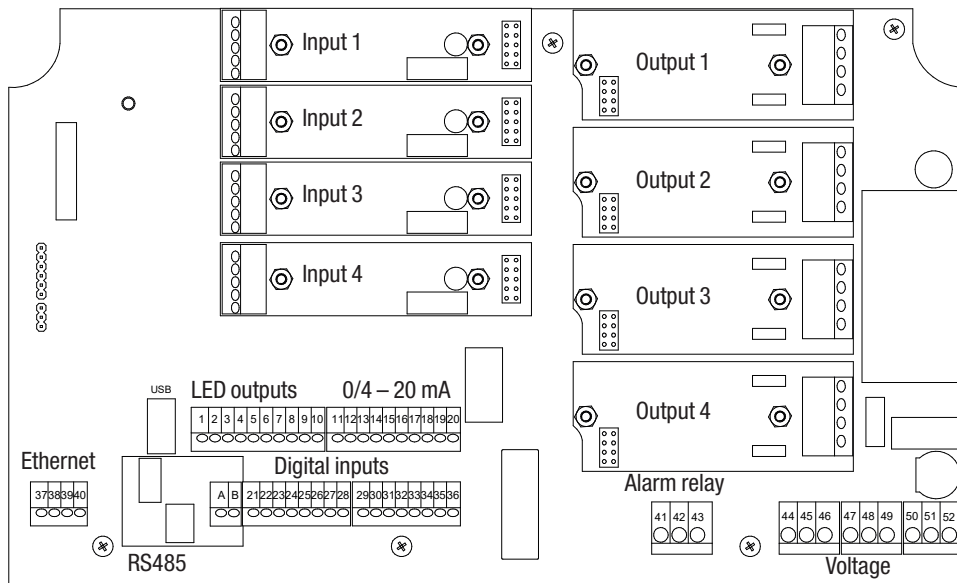


Fig. 7: Overview of terminal connection

Terminal	Function		Description
1	LED output 1 (red)	+	5 V with 220 Ω series resistance for LEDs of the water sampling stations
2	LED-output 1 (green)	+	
3	LED output 2 (red)	+	
4	LED-output 2 (green)	+	
5	LED output 3 (red)	+	
6	LED-output 3 (green)	+	
7	LED output 4 (red)	+	
8	LED-output 4 (green)	+	
9 – 10	LED output GND	-	Ground for the LEDs
11	Disturbance variable input	+	0/4 – 20 mA
12		-	
13	Analogue output 1	+	0/4 – 20 mA, working resistance max. 500 Ω
14		-	
15	Analogue output 2	+	
16		-	
17	Analogue output 3	+	
18		-	
19	Analogue output 4	+	
20		-	
21 – 36	Digital inputs 1 – 8	+ (odd numbers) - (even numbers)	Function configurable
37 – 40	Ethernet connection		
41 – 43	Alarm relay		Clamps 41 + 42 normal on Clamps 42 + 43 normal off
44 – 46	Connection supply voltage		Protective earth (PE)
47 – 49			Neutral line (N)
50 – 52			Phase (L)

Tab. 7: Terminal connection

## 7.5 Connecting sensors

**DANGER!**

**Mortal danger from electric shock!**

Live parts can inflict fatal injuries.

- ⇒ Disconnect the external power supply before opening the water sampling station or the TOPAX® MC controller.
- ⇒ Secure the station to prevent it from being switched on again!

Up to four input modules can be connected to the device. A water parameter and the temperature can be measured with every module.

### Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.

### Resources required:

- ✗ Sensors
- ✗ Suction connection

### Perform the following work steps:

1. Lead the cable through one of the cable screw connections on the underside into the interior of the housing.
2. Connect the wires onto the clamp block of the input modules. Comply with the terminal plans in the following sections.

- ✓ **Sensor connection completed.**

**PLEASE NOTE**

**Electronic distortion of the measurement results.**

Incorrect installation of the electrical cables can distort the measurement results. As a result, the control of connected devices can be faulty.

- ⇒ Do not route the connecting cable parallel to the mains and control connections, and always with a clearance of at least 15 cm. Lay connection junctions at an angle of 90°.

### 7.5.1 pH Redox module input circuit board

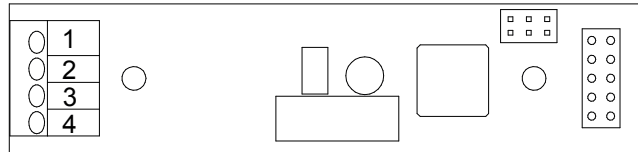


Fig. 8: pH Redox module input circuit board

Terminal	Function	Sensors
1	Temperature input	Resistance thermometer TE110/Pt100
2	Temperature input	
3	- (wire with Ø 1.5 mm)	pH single-rod measuring chain PE110/Redox single-rod measuring chain ME110
4	+ (wire with Ø 2 mm)	

Tab. 8: Terminal connection of the pH Redox module input circuit board




Fig. 9: Connect the cable from the pH or Redox single-rod measuring chain correctly

### 7.5.2 Potentiostat module input circuit board

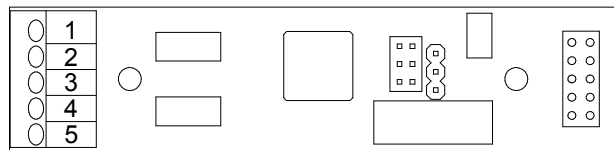


Fig. 10: Potentiostat module input

Terminal	Function	Sensors
1	Temperature input	Resistance thermometer TE110/Pt100
2	Temperature input	
3	Measuring electrode	3 electrode potentiostat
4	Counter electrode	
5	Reference electrode	

Tab. 9: Terminal connection of the potentiostat module input circuit board

### 7.5.3 Current module input circuit board

A number of sensors require an operating voltage for their measurement. These sensors are connected to the current module and supplied with 24 V.

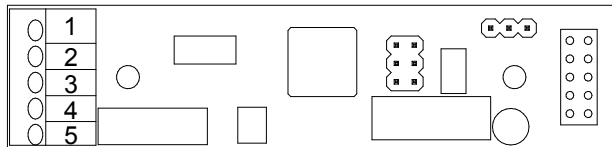


Fig. 11: Current module input circuit board

Terminal	Function	Sensors
1	Temperature input	Resistance thermometer TE110/Pt100
2	Temperature input	
3	-	Excess chlorine measuring cell CS120/conductivity measuring cell
4	+ for CS120** - for 0/4 – 20 mA	
5	+ 24 V DC output	Total chlorine measuring cell GCM/diaphragm-covered measuring cell CI 4.1/ diaphragm-covered measuring cell CD 4 MA*

Tab. 10: Terminal connection of the current module input circuit board

\* Requires 24 V supply module

\*\*red: +; blue, purple: -

### 7.5.4 Conductivity module (conductive) input circuit board

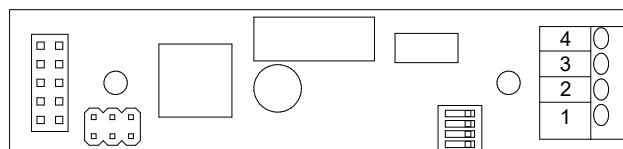


Fig. 12: Conductivity module (conductive) input circuit board

Terminal	Function	Sensors	Wire colour M12 connection cable
1	Temperature input	Conductivity measuring (conductive), k=1	black (BK)
2	Temperature input		blue (BU)
3	Conductivity measurement input		brown (BN)
4	Conductivity measurement input		white (WH)

Tab. 11: Clamp connection conductivity module (conductive) input circuit board

DIP switch	0 – 2000 µS/cm	0 – 20 mS/cm	0 – 100 mS/cm
1	OFF	ON	ON
2	OFF	ON	ON
3	OFF	OFF	ON
4	OFF	OFF	ON

Tab. 12: Selecting the measuring range

### 7.6 Connecting the actors

Depending on the equipment of the device, you have various possibilities of actuating actors such as dosing pumps or regulation valves.

#### 7.6.1 Alarm relay

The alarm relay on the main board forwards alarms.

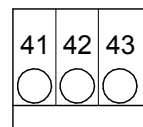


Fig. 13: Alarm relay

Terminal	Function	Description
41 + 42	normal on	The relay works on these clamps as an opener.
42 + 43	normal off	The relay works on these clamps as a closer.

Tab. 13: Terminal connection of the alarm relay

#### 7.6.2 Output circuit board with relay

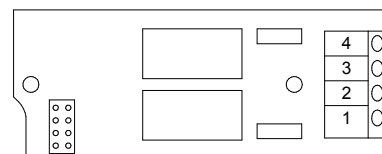


Fig. 14: Output circuit board with relay

Terminal	Function	Description
1	Relay X.2	Second digital output
2		
3	Relay X.1	First digital output
4		

Tab. 14: Clamp connection of the output circuit board with relay

Actors	Configuration
MAGDOS dosing pumps	On/Off
MEMDOS dosing pumps	On/Off
MEMDOS SMART dosing pumps	On/Off
MIDIDOS/MINIDOS dosing pumps	On/Off
Peristaltic pumps	Pulse length

Tab. 15: Actors and relay configuration

### 7.6.3 Output circuit board (optocoupler)



Fig. 15: Output circuit board with optocoupler

Terminal	Function	Description
1	+	Optocoupler x 2 Second digital output
2	-	
3	+	Optocoupler x 1 First digital output
4	-	

Tab. 16: Clamp connection of the output circuit board with optocoupler

Actors	Configuration
MAGDOS dosing pumps	Pulse frequency
MEMDOS dosing pumps	
MEMDOS SMART dosing pumps	

Tab. 17: Actors and configuration optocoupler

### 7.6.4 Servomotor relay output circuit board

This output is suitable for connecting a servomotor with or without feedback via a potentiometer from 1 – 10 kΩ.

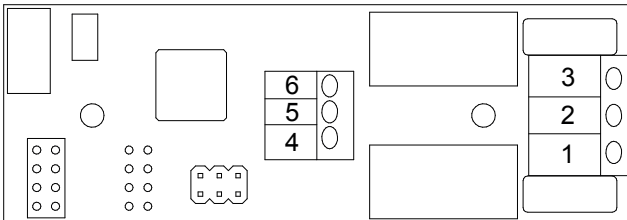


Fig. 16: Servomotor relay output circuit board

Terminal	Function	Description
1 – 2	Opening the regulation valve	Relay output
2 – 3	Closing the regulation valve	Relay output
4		Feedback via potentiometer
5		
6		

Tab. 18: Clamp connection of the output circuit board with servomotor relay

Actors	Configuration
Chlorine gas control valve C 7700	Servomotor with potentiometer/ servomotor without potentiometer

Tab. 19: Actors and configuration servomotor relay

### 7.6.5 Output circuit board with servomotor 20 mA

The output connects a servomotor with or without feedback.

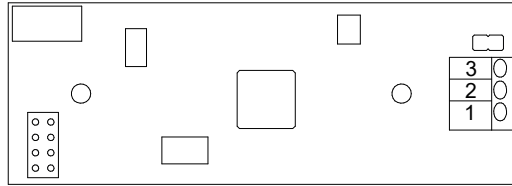


Fig. 17: Output circuit board with servomotor 20 mA

Terminal	Function	Description
1	-	GND
2	Input (feedback)	4 – 20 mA
3	Output	4 – 20 mA

Tab. 20: Clamp connection of the output circuit board with servomotor 20mA

Actors	Configuration
Chlorine gas control valve C 7700	Servomotor with 20 mA/ continuous output (20 mA)
EASYZON chlorine dioxide system	Continuous output (20 mA)
MAGDOS dosing pumps	
MEMDOS dosing pumps	
MEMDOS SMART dosing pumps	

Tab. 21: Actors and configuration servomotor 20 mA

### 7.6.6 Testing the outputs

You can use manual mode to test the correct connection of an actor.

Take the alarm chain into account before conducting the test and inform any connection points or interrupt the alarm chain for the period of the test.

#### Test the connected actors

##### Pre-conditions for actions:

- ✓ The actors have been connected in accordance with section 7.6 “Connecting the actors” on page 15.
- ✓ The device housing cover is closed.
- ✓ The voltage supply has been established and the device has been switched on.

##### Perform the following work steps:

1. Working in the main menu, navigate to “Manual mode” (see section 9.4 “Manual mode” on page 28).
    - ▶ You will now see all the outputs.
  2. Select the output to which you have connected the actor and which you wish to test.
  3. Enter a value between 0 and 100 % and check whether the actor reacts as desired.
- ✓ **Actor has been tested.**

### Testing the analogue outputs

You can also test the connection of terminals 13 to 20.

#### Pre-conditions for actions:

- ✓ The device housing cover is closed.
- ✓ The voltage supply has been established and the device has been switched on.

#### Perform the following work steps:

1. Working in the main menu, navigate to System > Outputs > Analogue.
  - ▶ You will now see all analogue outputs (terminals 13 – 20).
2. Press "Test signal".
3. Set the mA value.
4. Press "Start".

✓ **Analogue outputs tested.**

### 7.7 Digital inputs

You can use up to 8 digital inputs to evaluate switching statuses and to detect them as alarm message which are to be documented in the log-book.

Further information about the settings of the digital inputs can be found in section 8.2.1.6 "Digital inputs" on page 22.

### 7.8 RC protection for relay

When connecting to the relays, note that inductive loads must be suppressed. If this is not possible, the relay contact on the device terminal must be protected by an RC protective circuit / interference suppression element.

If devices with inductive loads from a nominal current of 1 A are connected to a relay, the contacts in the relay may become bonded. Thus, the device will operate in an uncontrolled manner. To prevent bonding if the load circuit suffers a short-circuit, the relays must be protected separately on the maximum relay switching current.

#### Pre-conditions for actions:

- ✓ You would like to connect an inductive load to the relay.

#### Perform the following work steps:

1. Switch off the device.
2. Clamp the interference suppression element parallel to the inductive load.
3. Should it prove impossible to perform point 2, clamp the interference suppression element parallel to the relay output.

✓ **RC protection for relay connected.**

### 7.9 Connecting Ethernet

You can use the Ethernet connection for the following actions:

- Reading/writing via Modbus TCP/IP protocol (PLC or Computer)
- Access via web browser
- Access via TFTP server

The device is fitted with a network input in the form of a 4-pole and D-coded M12x1 socket. Lutz-Jesco GmbH offers different lengths of special twisted-pair network cables to make the typical Ethernet RJ-45 plug connection. If you use third-party cables, choose a Category 5 cable with an impedance of 100 Ω or above.

Pin	Assignments	Wire colours
1	TX-	yellow
2	TX+	orange
3	RX-	white
4	RX+	blue
-	Screen	-

Tab. 22: Ethernet connection socket

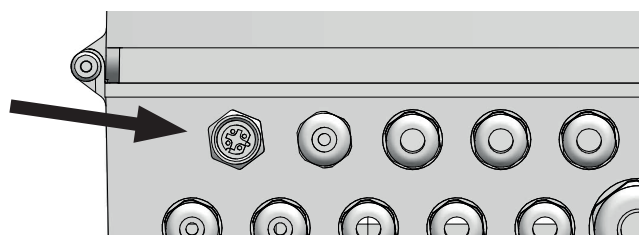


Fig. 18: Ethernet connection

#### Installing a wired network

##### During installation, comply with the following points:

- The Ethernet is cabled in a star topology. The maximum cable length is 100 m
- Only use screened cables and connectors
- Only use CAT5 cables or better

## 7.10 RS485 interface

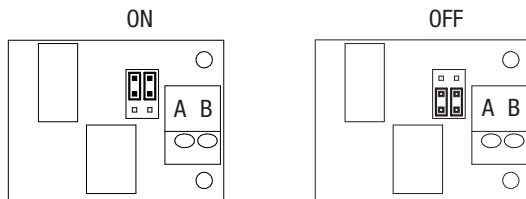


Fig. 19: Jumper position on RS485



When using multiple devices on a data line you, must activate a 120 Ω resistance on the last device. You can activate the resistance by setting the jumper to “ON” as shown in Fig. 19 “Jumper position on RS485” on page 18.

Your device can have an optional RS485 interface. Using a second data cable you can connect up to 14 devices with a PC or a PLC. Modbus RTU protocol serves as a protocol for data transfer. You can use the addresses 1 to 14. The addresses 0 and 15 are reserved for internal purposes and are not supported.

### RS485 Modbus settings:

- Baud rate: 9600
- Word length: 8 Bit
- Stop bit: 1 Bit
- Parity: None
- You can read out a maximum of 40 addresses at once.

The list of Modbus commands can be found in section 12 “Modbus addresses TOPAX® MC” on page 39.

### Perform the following work steps:

1. Open the device housing.
2. Connect a two-wire cable to terminals A and B of the RS485 module.
3. Connect the device with your network.

✓ **Device connected with network.**

## 8 Commissioning

Outputs				Controller functions	Behaviour
Relays	Optocoupler	Servomotor relay	Servomotor 20 mA		
x				On/Off	<ul style="list-style-type: none"> <li>The output switches if a value is exceeded.</li> <li>Hysteresis can be set from 0,1 – 50 %</li> </ul>
x	x			Pulse frequency 2-sides pulse frequency	<ul style="list-style-type: none"> <li>Relay: 10 – 100 pulses per minute</li> <li>Optocoupler: 10 – 350 pulses per minute</li> <li>The pulse frequency is dependant on the control deviation and the set control parameters.</li> <li>With a control output power of Y = 25 % and a maximum pulse frequency of 100 pulses/min., the controller would output 25 pulses/min.</li> </ul>
x				Pulse length 2-sides pulse length	<ul style="list-style-type: none"> <li>0 – 3600 seconds cycle duration</li> <li>Relay output (e. g. for solenoid valve)</li> <li>Depending on the control deviation and the defined control parameters, the relay pulls in or drops out for the set cycle duration. If the cycle lasts 30 seconds and the controller output power is 40 % the relay applies for example for 12 seconds, followed by 18 seconds of non-application.</li> </ul>
		x		Servomotor with a feedback potentiometer	<ul style="list-style-type: none"> <li>A feedback potentiometer can be connected (1 – 10 kΩ) for servomotors with position feedback.</li> <li>Compensate the feedback potentiometer. During compensation, the servomotor is first started and then stopped automatically.</li> </ul>
		x		Servomotor without a feedback potentiometer	<ul style="list-style-type: none"> <li>For servomotors without feedback.</li> <li>Measure and set the runtime of the servomotor.</li> </ul>
			x	Continuous output	<ul style="list-style-type: none"> <li>Continuous control output from 0/4 – 20 mA for the actuation of constant actors.</li> </ul>
			x	Servomotor with 20 mA feedback	<ul style="list-style-type: none"> <li>Servomotors which are controlled via 0/4 – 20 mA and have a 0/4 – 20 mA position feedback.</li> </ul>

Tab. 23: Functions of the individual controllers

### 8.1 First steps

**PLEASE NOTE**

**Distorting the measurement results**

The measurement results of high-impedance sensor inputs may be distorted in the first 24 hours due to the heat development inside the housing of the TOPAX® MC controller.

- ⇒ Activate the TOPAX® MC controller 24 hours before start-up.
- ⇒ Factor in the distortion caused by the heat development and only perform the calibration for the measurement results 24 hours after activating the TOPAX® MC controller.

You need to make a number of basic settings before operating the device. This section leads you through initial commissioning.

#### Pre-conditions for actions:

- ✓ The device has been installed in accordance with section 7 “Installation” on page 12.

#### Configuration assistant

With initial commissioning, a configuration wizard will lead you through the basic settings: Your preferred language, the measured values, controller assignments and switch outputs. With the exception of the language, the values configured here can only be set in the configuration assistant. The finer settings are made in the sub-menus.

Working in the configuration assistant, determine the tasks of the installed modules, the controller and the output modules.

The finer settings such as the behaviour of these modules are made later, e. g. in the “Outputs” menu item.

#### Perform the following work steps:

1. Set the preferred language and press on the arrow.
2. **Measured values:** Determine the desired measured value for the installed input modules. Press the right-hand arrow.

3. **Controller:** You can assign inputs for up to four controllers in this tab. Select a sensor, a virtual input or a timer. Set the centre row of the control function (Tab. 23 “Functions of the individual controllers” on page 19) and press the right-hand arrow. Controllers 1 to 4 must be assigned to the output modules 1 to 4 in a fixed fashion.
4. **Digital outputs:** You can assign a function to output modules in this tab. Only the output modules which are still free are displayed. Press the right-hand arrow.
5. Confirm the security query with “Yes” to save the configuration.

✓ **The configuration assistant has been ended.**



Start the configuration assistant manually in System > Settings > Configuration > “Configuration assistant”.

## 8.2 Configuration

The device is set up variably and can be individually adapted to meet your requirements. As such, it is necessary to adjust the configuration of the inputs and outputs to the sensors and actors used.

The following section leads you through the device configuration.

### 8.2.1 Inputs

You can connect up to four sensors (depending on model) for various water parameters and the temperature to the device. You can also use up to eight digital inputs (depending on the version).

#### 8.2.1.1 Sensor inputs

The sensors in the device must be configured individually to enable precise and error-free measurement of the water parameters. You can perform various settings.

##### Perform the following work steps:

1. In the main menu, navigate from System > Inputs to the “Sensors” tab.
2. In the “Sensors” tab, configure every connected sensor and state the following information.
3. **Input:** Select the input module of the sensor which you wish to configure.
4. **Signal:** Enter the type of the sensor signal. Depending on the input module, the signal type has been specified or you can select a signal type.
5. **Measurement:** Here, you can check which water parameters are measured. This setting can only be changed in the configuration assistant.
6. **Unit:** Select the appropriate unit.
7. **Measuring range:** If an input field is available, enter the measuring range of the sensor.
8. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
9. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.
10. **Delay:** Set a time delay for the “minimum and maximum alarm”.

✓ **Configuration of the sensors completed.**

#### 8.2.1.2 Temperature inputs

You can connect up to four temperature sensors (depending on the version) to the device. This enables you to measure the temperatures at various positions.

##### Perform the following work steps:

1. In the main menu under System > Inputs, navigate to the “Temperature” tab.
2. In the “Temperature” tab, configure every connected temperature sensor and state the following information.
3. **Measurement:** Chose between “On” and “Off”.
4. **Min-alarm:** Activate or deactivate the minimum alarm and state a temperature under which the alarm will be triggered.
5. **Max-alarm:** Activate or deactivate the maximum alarm and state a temperature over which the alarm will be triggered.

✓ **Configuration of the temperature sensors completed.**

#### 8.2.1.3 Compensation of cross sensitivities

The water parameters which you measure with the device can be falsified by interference (e. g. with temperature or pH value).

The device can compensate these interferences automatically.

##### Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the “Compensation” tab.
2. Working in the “Compensation” tab, configure every sensor connected for which the measured value is to be compensated and state the following information
3. **Temperature:** If it is possible to compensate for the influence of the temperature, you can select a fixed reference value or one of the four temperature inputs.
4. **pH value:** If it is possible to compensate for the pH value error, you can select a fixed reference value or a sensor input.

✓ **Configuration of the compensation completed.**

### 8.2.1.4 Disturbance variable

You can connect the measurement of a disturbance variable (e.g. a flow volume) to an analogue 4 – 20 mA input. The disturbance variable can then be taken into account with a factor (0.1 to 10) during the calculation of the control variable Y. The control variable Y will be multiplied with the disturbance variable during the calculation.

**Example:** If the factor = 2 and the disturbance variable amounts to 42 %, the controller can be set to a maximum of the control variable Y = 84 %. If the factor = 0.5 and the disturbance variable amounts to 42 %, the controller can be set to a maximum of the control variable Y = 21 %.

#### Perform the following work steps:

1. Working in the main menu under System > Controller, navigate to the “Disturbance variable” tab and state the following information.
2. **Disturbance variable:** Set the disturbance variable to an input signal of 4 – 20 mA or 0 – 20 mA. You can also deactivate the disturbance variable.
3. **Unit:** As a rule, the disturbance variable is the measurement of a flow. Select the desired unit.

✓ **Configuration of the disturbance variable input completed.**

### 8.2.1.5 Virtual inputs

You can calculate a new value from multiple measurements or reference values using a virtual input. You can assign the new virtual value to a controller in the configuration assistant.

In this way, you can calculate the difference between the bound chlorine and the effective chlorine and use it as the basis for controlling your actors.

#### Difference

You can calculate the difference between two measured values or the difference between a measured value and a fixed reference value.

#### Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the “Virtual” tab.
2. State the following information.
3. **Calculation:** Select “difference”.
4. Select a sensor.
5. Select a second sensor or a reference value. The second sensor must output the same measured value as the first. You will need to enter the reference value manually.
6. **Min-alarm:** Activate or deactivate the minimum alarm and state a difference value under which the alarm will be triggered.
7. **Max-alarm:** Activate or deactivate the maximum alarm and state a difference value over which the alarm will be triggered.
8. **Delay:** Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the difference completed.**

### Combined chlorine

Bound chlorine is calculated from the difference between the total chlorine and the free chlorine:

$$\text{Bound chlorine} = \text{total chlorine} - \text{free chlorine}$$

At least one total chlorine measurement is required to calculate bound chlorine. The chlorine value can be entered manually as a single reference value or a corresponding sensor input is selected.

#### Perform the following work steps:

1. Working in the main menu under System > Inputs, navigate to the “Virtual” tab.
2. Working in the “Virtual” tab, configure the desired calculation of the bound chlorine and state the following information.
3. **Calculation:** Select “bound chlorine” to calculate the bound chlorine.
4. **Total chlorine:** Select the sensor which measures the total chlorine.
5. **Free chlorine:** Select the sensor which measures the free chlorine. If no sensor is present, you can enter a reference value measured once which can be used for the calculation.
6. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
7. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.
8. **Delay:** Set a time delay for the minimum and maximum alarm.

✓ **Configuration of the bound chlorine completed.**

### Effective chlorine

The disinfectant effect of the free chlorine is highly dependant on the pH value of the process water. The pH value influences the reactivity of the Chlorine ions. This relationship is underscored by the dissociation curve (Fig. 20 “Dissociation curve of the effective chlorine” on page 22) of the chlorine.

The actual disinfectant effect of the chlorine is generated by the hypochlorous acid (HClO). The figure shows that the proportion of the HClO is largest between pH 2 and pH 7.5. The disinfectant effect is very low outside this pH value.

For photometric measurements the pH value of the sample is buffered to approx. pH 6.5. As a result the measurement has a higher effective chlorine content than is actually in the process water. For high pH-values significant differences will therefore occur between the expected and actual disinfection if assessed by photometric analysis. The calculation of the effective chlorine can be used to display the proportion of the hypochlorous acid (HClO), i.e. the proportion which contributes to the disinfectant effect.

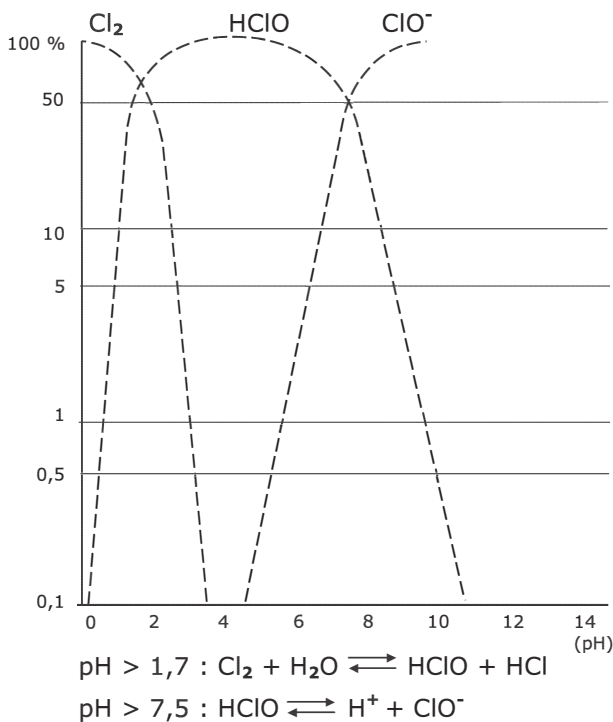


Fig. 20: Dissociation curve of the effective chlorine

**Perform the following work steps:**

1. Working in the main menu under System > Inputs, navigate to the "Virtual" tab.
2. Working in the "Virtual" tab, configure the desired calculation of the effective chlorine and state the following information.
3. **Calculation:** Select "effective chlorine" to calculate the effective chlorine.
4. **Free chlorine:** Select the sensor which measures the free chlorine.
5. **pH value:** Select the sensor which measures the pH value. If no sensor is present, you can enter a reference value measured once which can be used for the calculation.
6. **Temperature:** A temperature value is required to calculate the effective chlorine. Select the temperature input which can be used for the calculation. If no temperature sensor is present, you can set a reference value measured once which can be used for the calculation.
7. **Min-alarm:** Activate or deactivate the minimum alarm and state a value under which the alarm will be triggered.
8. **Max-alarm:** Activate or deactivate the maximum alarm and state a value over which the alarm will be triggered.
9. **Delay:** Set a time delay for the "minimum and maximum alarm".

✓ **Configuration of the calculation of the effective chlorine completed.**

**8.2.1.6 Digital inputs**

You can use up to 8 digital inputs to evaluate switching statuses and to detect them as alarm message which are to be documented in the log-book.

**Perform the following work steps:**

1. In the main menu under System > Inputs, navigate to the "Digital" tab.
2. In the "Digital" tab, configure the inputs and state the following information.
3. **Action:** Choose between "OK = open" (N.O., working contact) or "OK = contact" (N.C., break contact).
4. **Function:** Select a function from Tab. 23 "Functions of the individual controllers" on page 19 depending on the desired reaction of the device to the input.

✓ **Configuration of the digital inputs completed.**

Function	Reaction
Off	The switching of the contact has no influence on the measurement or control.
Setpoint changeover	You can use the contact to switch between reference sets.
Measuring water shortage	All controller outputs will be switched off.
External stop	All controller outputs will be switched off.
Pre-alarm 1 – 4	Only display as an alarm message. Nothing is switched off.
Main alarm 1 – 4	The appendant controller output is switched off. The other outputs remain unaffected.
Others	You can assign an individual name to this digital input. The name is displayed in the alarm messages during switching the contacts.

Tab. 24: Functions digital inputs

**8.2.2 Outputs**

Depending on the equipment, you can connect a range of actors to the device and actuate them. Make sure that you actuate the actor with the correct signal type and select an appropriate output module with the configuration. An alarm relay, four analogue outputs and the possibility of connecting external LEDs (e.g. for water sampling stations) are always available.

**8.2.2.1 Controller outputs**

You can configure and use up to four controllers.

**Pre-conditions for actions:**

- ✓ You have used the configuration assistant to assign an input and a control function to a controller (see section "Configuration assistant" on page 19).

**Perform the following work steps:**

1. Working in the main menu under System > Outputs, navigate to the “Controller” tab.
2. Working in the “Controller” tab, configure the controller output and state the following information.
3. **Y-alarm:** Activate the Y alarm. The Y alarm is a safety cut-out. If the controller output power amounts to more than 95 % (e.g. through a malfunction) over the set time, the Y alarm will be triggered and the corresponding controller output will be set to 0 %. You can set a time between 0 and 200 minutes.
4. **Basic load:** Depending on the controller function, you can set a base load which is always active independently of the control variable. With a base load of 10 %, the actor is always actuated with a minimum of 10 %.
5. **Limit:** Depending on the controller function, you can set a limit of between 5 – 100 %. State the value at which the actor should be actuated as maximum.
6. Further settings are dependant on the function of the controller. Further information is available in Tab. 23 “Functions of the individual controllers” on page 19.

✓ **Configuration of the controller outputs completed.**

**8.2.2.2 Actuation via a timer**

The output can be used for direct actuation via a timer. This is required e.g. to run the flocculant pump or the peristaltic pumps over a certain time.

**Pre-conditions for actions:**

- ✓ You have assigned the "Timer switch" input to a controller using the configuration wizard as described in the chapter 8.1 “First steps” on page 19.

**Perform the following work steps:**

1. Working in the System menu, navigate to > Outputs and configure the output (see section 8.2.2 “Outputs” on page 22).
2. Navigate to the menu > setpoints. Here, you can set the desired set control output directly from 0 to 100 %.
3. **Reference set:** Here, you can set various control outputs and via the timers in the “Switching” tab, you can determine when the control output should be changed. The checkmark must be set against “Switch setpoints automatically”. Further information pertaining to switching is found in section 9.6 “Setpoints and reference sets” on page 32.

✓ **Actuation configured via a timer.**

**8.2.2.3 Controller parameters**

You can configure the behaviour of the individual controller channels. Explanations of the various functions can be found in Tab. 23 “Functions of the individual controllers” on page 19 and in section 15 “Glossary” on page 47.

**Perform the following work steps:**

1. Working in the main menu under System > Controller, navigate to the “parameter” tab.

2. Working in the “Parameter” tab, configure every control channel and state the following information.
3. **Control direction:** Configure the direction of control. If a switch is to be made between a 1- and a 2-side control, this must be set in the configuration assistant.
4. **Function:** Set the desired controller function. Possible: P-, PI-, PD- and PID-controller.
5. **Xp, Tn, and Tv:** You can configure these parameters depending on the control function that has been set.
6. **Disturbance variable and factor disturbance variable:** If you have activated a disturbance variable (see chapter 8.2.1.4 “Disturbance variable” on page 21), you can configure the influence of this disturbance variable on the selected controller channel. You can switch the influence on or off and set a factor between 0.1 and 10.

✓ **Configuration of the controller parameters completed.**

**8.2.2.4 Digital output signals**

You can use digital output signals via the outputs of the alarm relay, an optocoupler circuit board or a relay circuit board. The following sections describe the configurations that you can perform.

**Alarm relay as an alarm output.**

You can use the alarm relay (terminals 41 – 43) on the main board as an output for alarm messages.

**Perform the following work steps:**

1. In the main menu under System > Outputs, navigate to the “Digital” tab.
2. Working under “Digital output”, select the “alarm relay” output.
3. Configure the alarm relay by entering the following data.
4. **Action:** Choose between “normal opened” (N.O., make contact) or “normal closed” (N.C., break contact).
5. **Latching:** “On” = the alarm relay is active until all alarms have been manually confirmed. “Off” = the relay is automatically deactivated if the active alarms are no longer pending.
6. **Output triggers upon:** Select which alarms should trigger the alarm relay. The relay switches as soon as one of the selected alarms is active.
7. **Alarm delay:** Determine the earliest point (in seconds) at which the relay should switch after activation of the alarm.

✓ **Configuration of the alarm relay completed.**

**Further alarm outputs**

In addition to the alarm relay, you can use the unused outputs of the optocoupler circuit board or relay circuit boards for further alarm messages.

**Pre-conditions for actions:**

- ✓ You have used the configuration assistant to assign the “alarm output” function to a free output (see section “Configuration assistant” on page 19).

**Perform the following work steps:**

1. In the main menu under System > Outputs, navigate to the “Digital” tab.

2. Working under “Digital output” select the desired output.
  - ▶ The free outputs will be displayed which you have configured as an “alarm output” in the configuration assistant. Example: “Relay 1.2”. The first digit stands for the number of the output circuit board (1.X) and the second digit stands for the number of the output on the circuit board (X.2).
3. Working under the “Function” display, check whether the function with “alarm output” is displayed.
4. Configure the alarm output by entering the following data.
5. **Action:** Choose between “normal opened” (N.O., make contact) or “normal closed” (N.C., break contact).
6. **Latching:** “On” = the alarm output is active until all alarms have been manually confirmed. “Off” = the output will be deactivated automatically if the alarms are no longer active.
7. **Output triggers upon:** Select from the list of all possible alarms those which should trigger the output. The output switches as soon as one of the selected alarms is active.
8. **Alarm delay:** Determine the earliest point (in seconds) at which the output should switch after activation of the alarm.

✓ **Configuration of the alarm output completed.**

#### Limit value control

You can use unused outputs from optocoupler circuit boards or relay circuit boards as a limit value control (including “DIN contact”).

An output for limit value control switches if all measured values are located within the defined limits.

#### Pre-conditions for actions:

- ✓ You have used the configuration assistant to assign the “limit value control” function to a free output (see section “Configuration assistant” on page 19).

#### Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the “Digital” tab.
2. Working under “Digital output” select the desired output.
  - ▶ The free outputs will be displayed which you have configured as “limit value control” in the configuration assistant. Example: “Relay 1.2”. The first digit stands for the number of the output circuit board (X.1) and the second digit stands for the number of the output on the circuit board (X.2).
3. Working in the “Function” display, check whether the function with a “limit value control” is displayed.
4. Configure the limit value control by entering the following data.
5. **Action:** Choose between “normal opened” (N.O., make contact) or “normal closed” (N.C., break contact).
6. **Delay:** The contact switches only if all water parameters are continually over the set lag time within the limits set. The lag time can be set between 0 and 10.
7. **Parameter:** Set the measured values in which the water parameters must be located so that the output switches. Press the minimum or maximum value that you wish to change.

✓ **Configuration of the limit value control completed.**

#### 8.2.2.5 Analogue output signals

The basic configuration of the device includes up to four analogue 4 – 20 mA outputs. You can use the outputs to transmit the measured values to a control room or a PLC (programmable logic controller).

Some actuators such as dosing pumps can be controlled directly via this output.

#### Perform the following work steps:

1. In the main menu under System > Outputs, navigate to the “Analogue” tab.
2. Working under “Analogue”, select the desired output.
3. Configure the analogue output by entering the following data.
4. **20 mA type:** You can choose between the following signal types: 4 – 20 mA, 0 – 20 mA, 20 – 4 mA or 20 – 0 mA.
5. **Testsignal:** You can test the configuration of the analogue outputs. Check the actuation on the external device.
6. **Output:** Determine what should be outputted on the selected output. You can choose between the measurement and temperature values or outputs (controller outputs).
7. **Minimum:** Determine a minimum value. The minimum value indicates for which measured value the signal is the weakest.
8. **Maximum:** Determine a maximum value. The maximum value indicates for which measured value the signal is the weakest.



The values for “minimum” and “maximum” serve the scaling of the analogue output signal. Example: Sensor 1 has a measuring range of 0 – 10 mg/l. 4 – 20 mA was selected as the 20 mA type. If the complete sensor measuring range is to be covered by the analogue signal, 0 mg/l should be selected for “Minimum” and 10 mg/l for “Maximum”. At 0 mg/l, a 4 mA signal will be issued; at 10 mg/l a 20 mA signal will be issued.

✓ **Configuration of the analogue outputs completed.**

#### 8.2.2.6 Actuation of the LEDs for the water sampling stations

Some water sampling stations have multiple LEDs which display whether a water parameter is in the desired range. You can configure the actuation of the LEDs.

#### Perform the following work steps:

1. Working in the main menu under System > Outputs, navigate to the “External LEDs” tab.
2. Working under “LED”, select the desired LED.
3. Configure the LED by entering the following data.
4. **Function:** Select the reaction criteria for the LED. Selection of “Sample water shortage” standardly results in a green LED. If the digital contact “Sample water shortage” is active, it will illuminate red. Further options are the measured values of the sensor inputs 1 – 4.
5. **Minimum and maximum:** If you have decided to use a measured value, you must establish a minimum and a maximum value. The LED will illuminate red if the minimum value is undercut or the maximum value exceeded. It illuminates green between the values.

**6. Testsignal:** You can test the configuration of the LEDs.

✓ **Configuration of the external LED outputs completed.**

### 8.2.3 Second overview

In the main view, the device shows the measured values of the installed input modules. This display is pre-determined and cannot be changed.

However, you can activate a “second overview” and adapt your needs individually (see Fig. 21 “Individual second overview” on page 25).

#### 8.2.3.1 Activating the second overview

**Perform the following work steps:**

1. In the main menu under System > Settings, navigate to the “Display” tab.
2. **2. Overview:** Activate the second overview with “On”.
3. **Number windows:** Select how many individual and freely-configurable windows should be displayed.

✓ **Second overview activated.**

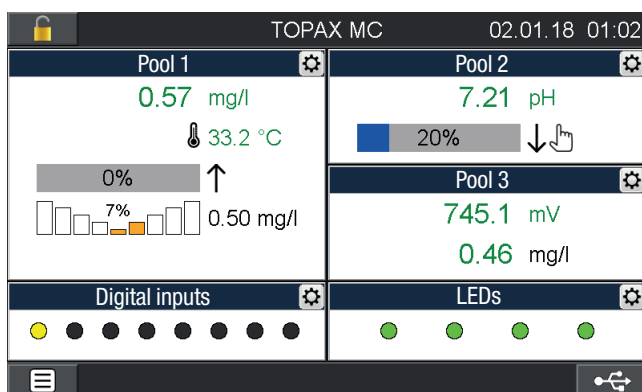


Fig. 21: Individual second overview

#### 8.2.3.2 Configuring the second overview

**Perform the following work steps:**

1. Press the “Main menu” button (bottom left on the display) until the second overview with the individually-settable windows appears.
2. A gear wheel icon is displayed in the top right-hand corner of every window. Press on the icon to configure the selected window and state the following information.
3. **Name:** Give each window an individual name.
4. **Display 1 – 5:** Up to five displays can be configured depending on the size of the window. You can choose between the measured values, the virtual values, the outputs, the setpoints, the disturbance variables, the digital inputs and the external LED outputs.

✓ **Configuration of the second overview completed.**

### 8.2.4 Colours of the alarm messages

You can edit the colours of the different messages.

**Perform the following work steps:**

1. In the main menu under System > Settings, navigate to the “Alarm colour” tab.
2. Look in the “Alarm colour” tab for the message for which you wish to edit the alarm colour.
3. Press on the row of the alarm and then on “Edit”.
  - ▶ You can choose between four colour fields.

✓ **Alarm colour edited.**

### 8.2.5 Save the configuration

You can save your individual configuration and load it later to rectify problems quickly.

**Recommendation:** Leave the factory-set configuration file unchanged and save your personal configuration in a new file. Given problems with the configuration, this enables you to return to a functioning configuration quickly.

**Perform the following work steps:**

1. In the main menu under System > Settings, navigate to the “Configuration” tab.
2. Press “save” and enter an existing file name to overwrite the file or a new name to generate a new configuration file.
3. Press on the green checkmark to confirm the entry.

✓ **Configuration saved.**

### 8.3 Password protection

The password protection of your device has been deactivated at the factory. You can provide your device with password protection against access to specific functions in three levels.

- **1. Level:** Only simple settings are accessible here. This level is suitable for daily operation.
- **2. Level:** The configuration of the inputs and outputs and the adjustment of the sensors are accessible here. This level is required for device configuration and should only be operated by experienced users.
- **3. Level:** The service menu is accessible here. This level is mainly required for maintenance work such as changing the sensor, performing software updates or network settings.

**Information:** The following passwords are factory-set:

1. Level: 0001
2. Level: 0002
3. Level: 0003

## Configuring the password protection

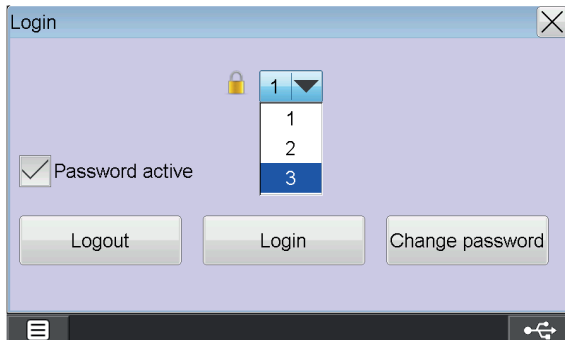


Fig. 22: Configuring the password protection

### Perform the following work steps:

1. Press the lock icon in the left-hand upper corner to configure the password protection.
2. **Password active:** Select whether password protection should be activated or deactivated. Password protection can only be deactivated if you are logged in to level 3.
  - ▶ Password protection must be activated to unlock the following steps.
3. Select one of the three password levels into which you wish to log on.
4. **Login:** Login with the password for the password level previously selected.
5. **Change password:** You can edit the password of the level in which you are logged in.

✓ **Password protection configured.**

## 8.4 Network settings

You may need to perform settings in order to be able to use the device in a network.

Further information about using the device in a network can be found in section 9.7 “Access via network” on page 34.

### Perform the following work steps:

1. In the main menu under System > Service, navigate to the “Network” tab.
2. Working in the “Network” tab, configure the interface and state the following information.
3. **IP address:** Give the device a unique IP address through which it can be reached in the network. If this IP address is already being used by another device, errors can result.
4. **Subnetmask** Enter the subnetmask.
5. **TFTP server:** “On” = Access via TFTP protocol activated on the device memory. “OFF” = Access via TFTP protocol de-activated on the device memory.
6. **Modbus RTU address:** Enter a number between 1 and 14 in the device if your device is fitted with a RS485 network connection.

✓ **Network settings performed.**

## 9 Operation

When in operation, the device will display the main view with the current values and the status row with status messages.

### 9.1 Confirming a message

You can view device alarm, error and service messages in the status row. The status row flashes in the colour set for the message type. Inactive messages are displayed white.

You must confirm a message on the device to end the display of inactive messages in the status row. Active messages will still be displayed, even if they have been cleared.

**Perform the following work steps:**

1. When a message is displayed, press on the status row or go to the “Messages” menu.
  2. Select one or more messages and press either “Confirm” or “Confirm all”.
    - ▶ The confirmed message is marked with a green tick.
- ✓ **Message confirmed.**

#### History

You can follow the course of the messages in a history.

In the main menu, press “messages” and the tab “History”.

### 9.2 Logbook

The messages and service entries are saved in the device on a USB flash drive. You can display the files on the device or connect the USB flash drive to an external device.

The USB flash drive in the device contains the following logbook files:

Log	Format	Description
REPORTS	CSV	Messages
TREND	DAT	Trend data
SERVICE	CSV	Service entries
CHANGES	CSV	Changes to the configuration
SETUP	SET	Configuration
ADJUSTMENT	CSV	Calibration

Tab. 25: Logbook

 You can open and analyse CSV files with a suitable programme (e. g. MS Excel). You can also view all CSV files on the device.

#### 9.2.1 View and open files


You can display the logbook files on the device.

**Perform the following work steps:**

1. Press the USB icon in the status row (below right).
    - ▶ The files saved on the USB flash drive will be displayed in a file browser.
  2. Open one of the file folders.
  3. Select the desired file and press “Open file”.
- ✓ **File opened.**

#### 9.2.2 Opening files externally

You can open the logbook files on an external device once you have removed the USB flash drive.



**DANGER!**

**Mortal danger from electric shock!**

When the device housing is open, you can touch live parts. There is the danger that you could suffer an electric shock.

- ⇒ Ensure that the machine has been disconnected from the voltage supply and is not live when conducting work with an open housing.
- ⇒ Secure the voltage supply against reactivation.

**Pre-conditions for actions:**

- ✓ The voltage supply is deactivated before the start and secured against reactivation.

**Perform the following work steps:**

1. Open the housing.
  2. Remove the USB flash drive.
  3. Connect the USB flash drive with an external device and open it.
    - ▶ You can now access the logbook files.
- ✓ **Files opened externally.**

### 9.3 Configure trend display

You can view the trend progression of up to four measured values in the last 24 hours.

#### Perform the following work steps:

1. In the main menu, press "Trend".
  - ▶ The device will show the trend.
2. You can configure the display in accordance with your wishes. Press the "Display" tab and activate up to four values which are to be displayed in the trend.
3. You can set the scaling of the individual trend display for every value individually. Press on the "Scaling" tab, select a sensor and define "minimum" and "maximum".

✓ **Trend display configured.**

### 9.4 Manual mode

You can manually control a controller output in the menu item "Manual mode" and set an output capacity between 0 and 100 %.

If a controller is in manual mode, this is indicated by a blue Y display in the main view and by a hand icon.

Working in the menu item "Manual mode", you can also switch the automatic switching of the setpoints on or off (see section 9.6 "Setpoints and reference sets" on page 32).

### 9.5 Calibration



For new electrodes or initial commissioning, all measuring cells must be recalibrated after a running-in period of 1 - 2 days.

You must first calibrate the sensors before you can detect the correct measured values. All calibration processes in the device are monitored for plausibility (zero point and slope) and the measured values documented. Measured values resulting from an uncalibrated sensor are marked in the main overview. In this case, the measured values are displayed in red. If the measurement input is displayed individually in the main view, the information "Calibration not OK" will be displayed.

The current calibration and slope can be found in the "Calibration" menu in the "Overview" tab.

#### 9.5.1 pH single-rod measuring cell

Calibration of the pH single-rod measuring cell can be performed as a 2-point calibration with 2 buffer solutions or a single point calibration with subsequent input of the slope of the sensor.

The actual voltage of the single-rod measuring cell and the ideal value of the set buffer solution is displayed during calibration.

The response time for a new single-rod measuring chain is a few seconds and is set when the physical reading becomes stable. Older single-rod measuring cells can have a longer reaction time.



To perform the calibration performed here, you will require a buffer solution with a known pH value. Buffer solutions have a restricted storage life and their pH value changes depending on their duration of storage and the storage conditions.

Comply with the manufacturer's instructions pertaining to the correct storage; use buffer solutions only within the scope of their life period and never submerge a sensor in a buffer solution immediately after removing it from a different buffer solution.

#### 9.5.1.1 2-point adjustment of the pH value

##### Pre-conditions for actions:

- ✓ Two different buffer solutions are ready.
- ✓ The sensor is clean.

##### Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
3. Press the "2 points" button.
  - ▶ 2-point calibration begins.
4. Shut off the sample water.
5. Unscrew the pH single-rod measuring cell from the water sampling station.
6. Rinse the pH single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
7. Hold the dry pH single-rod measuring cell in the first buffer solution. It is not important, which of the two buffer solutions you start with.
8. Enter the pH value of the first buffer solution. This pH value serves as a reference value for the device. The ideal voltage value and the current voltage value is displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the pH single-rod measuring cell needs to be replaced.
9. Wait until the value has stabilised.
10. Confirm the entry with the green checkmark.
11. Repeat points 6 to 10 for the second buffer solution.
12. A window with the actual slope of the sensor will open.

✓ **2-point adjustment of the pH value completed.**

### 9.5.1.2 1-point adjustment of the pH value

#### Pre-conditions for actions:

- ✓ A buffer solution is on hand for calibration.
- ✓ The slope of the pH single-rod measuring cell was measured in a laboratory beforehand.

#### Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
  2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
  3. Press the "1 points" button.
    - ▶ 1-point calibration begins.
  4. Shut off the sample water.
  5. Unscrew the pH single-rod measuring cell from the water sampling station.
  6. Rinse the pH single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
  7. Hold the pH single-rod measuring cell in the buffer solution and move back and forth for a short time.
  8. Enter the pH value of the buffer solution. This pH value serves as a reference value for the device. The ideal voltage value and the current voltage value is displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the pH single-rod measuring cell needs to be replaced.
  9. Wait until the value has stabilised.
  10. Confirm the entry with the green checkmark.
  11. You will be requested to set the slope. Enter the slope.
  12. Confirm the entry with the green checkmark.
- ✓ **1-point adjustment of the pH value completed.**

### 9.5.1.3 Offset compensation

External influences can cause the pH value measured with the photometer to deviate from the electrometric measurement of the pH value by a constant value. The offset compensation enables you to compensate for this constant difference (zero-point deviation).

#### Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
  2. Working under "sensor", select the sensor that measures the pH value and which you wish to calibrate.
  3. Press the "Offset" button.
  4. You can enter a pH offset from pH -0.30 to max pH +0.30.
  5. Confirm the entry with the green checkmark.
- ✓ **Offset compensation completed.**

### 9.5.2 Redox value

The Redox value is measured using the Redox single-rod measuring cell. The Redox single-rod measuring cell measures the voltage present in the water due to oxidizing and reducing ions. You must calibrate the Redox single-rod measuring cell during commissioning.

#### 9.5.2.1 1-point adjustment of the Redox value

#### Pre-conditions for actions:

- ✓ A buffer solution is on hand for calibration.

#### Perform the following work steps:


1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
  2. Working under "sensor", select the sensor that measures the Redox value and which you wish to calibrate.
  3. Press the "1 points" button.
    - ▶ 1-point calibration begins.
  4. Shut off the sample water.
  5. Unscrew the redox single-rod measuring cell from the water sampling station.
  6. Rinse the Redox single-rod measuring cell with water and dab it dry. Rubbing can cause electrical discharge on the glass membrane, which results in a delayed display.
  7. Hold the Redox single-rod measuring cell in the buffer solution and move back and forth for a short time.
  8. Enter the voltage value in mV which is recorded on the buffer solution. The voltage value entered and the current measured voltage value are displayed in mV. If these values deviate too greatly from one another, the best value is displayed red. Too great a level of deviation is an indication that the Redox single-rod measuring cell needs to be replaced.
  9. Wait until the value has stabilised.
  10. Confirm the entry with the green checkmark.
- ✓ **1-point adjustment of the Redox value completed.**



With older sensors, the reaction time can increase or the measured value can differ considerably from the buffer solution value. This indicates that the Redox single-rod measuring cell must be checked and replaced if necessary.

### 9.5.3 3-Electrode potentiostat and excess chlorine measuring cell CS120

You should calibrate a 3-electrode potentiostat or the potentiostatic measuring cells (chlorine sensors) as single-point calibration as a matter of course. You will require a photometrically measured value in accordance with the DPD method as a reference value.

 With operation in a hot water system, electrochemical processes on the measuring electrode can result in a displacement of the zero point. In this case, 2-point calibration is necessary in which you calibrate the zero point using chlorine-free hot water. The second point is determined using the DPD method with chlorinated water as usual.

#### 9.5.3.1 1-point adjustment of a 3-electrode potentiostat

To calibrate chlorine sensors, you will require a photometer with which to measure the reference value using the DPD method.

##### Pre-conditions for actions:

- ✓ A measurement device for determining the DPD value is already present.
- ✓ The sensor is operated with sample water.

##### Perform the following work steps:

1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "Sensor", select the sensor that you wish to calibrate.
3. Press the "1 points" button.
  - ▶ 1-point calibration begins.
4. Take sample water in immediate proximity to the measuring cell and confirm with "OK".
5. Determine the concentration in the sample water using the DPD method.
6. Enter the measured concentration. This serves the device as a reference value with which to permit correct measurement.
7. Confirm the entry with the green checkmark.

✓ **1-point adjustment of a 3-electrode potentiostat completed.**

#### 9.5.3.2 2-point adjustment of a 3-electrode potentiostat

##### Pre-conditions for actions:

- ✓ A measurement device for determining the DPD value is already present.
- ✓ The sensor is operated with sample water.

##### Perform the following work steps:


1. Working in the main menu under "Calibration", navigate to the "Sensors" tab.
2. Working under "Sensor", select the sensor that you wish to calibrate.
3. Press the "2 points" button.
  - ▶ 2-point calibration begins.


4. You will be asked to set the first reference value; this is the zero point. If the zero point was mal-set by accident, set it by pinching off the measuring electrode and entering a value of zero. Should real 2-point calibration be performed, e.g. due to hot water, you must first perform calibration with chlorine-free and then with chlorinated water. Enter a value for the zero point.
5. Confirm the entry with the green checkmark.
6. Take sample water in immediate proximity to the measuring cell and confirm with "OK". This means that the current signal at the time of the sample water extraction is saved to rule out signal fluctuation as a measurement error during the DPD ascertainment.
7. Determine the concentration in the sample water using the DPD method.
8. First enter the determined DPD value.
9. Confirm the entry with the green checkmark.

✓ **2-point adjustment of a 3-electrode potentiostat completed.**

### 9.5.4 Conductivity conductive

When calibrating the conductivity measurement, the slope of the conductive measuring electrode is ascertained in combination with the input amplifier of the TOPAX® MC. The value (mA) measured with the conductive conductivity measuring cell is assigned to the conductivity (mS/cm or µS/cm), which is then displayed in the main menu. This is performed over two points; the first point corresponds with 0 mA; 0 mS/cm is electrically stipulated and no action is required. The usual approach uses 1-point calibration, but a calibration in the setpoint is also conceivable.

 The unit is always mS/cm or µS/cm. Due to grounds of space, the TOPAX® MC partially displays only mS or µS; % salt content is a further possibility.

 Given correct calibration, measurements in the medium and upper measuring range have a deviation of ±1 % of the measuring range final value. The electronic design means that measurements against the zero point have a greater tolerance. This means that the conductivity measurement is suitable for tap water applications but not for ultra pure water applications (e.g. reverse osmosis units).

#### 9.5.4.1 1-point adjustment for the conductivity measurement

For calibration purposes, use only KCL buffer solutions (potassium chloride) for the various measuring ranges in accordance with the following scheme:

Measuring range	buffer solution
0 – 2000 µS/cm	1000 µS/cm = 1 mS/cm
0 – 20 mS/cm	12,88 mS/cm
0 – 100 mS/cm	80 mS/cm

Tab. 26: 1-point adjustment for the conductivity measurement

##### Pre-conditions for actions:

- ✓ A buffer solution corresponding to the measuring range is on hand and has the printed temperature.
- ✘ A clean cloth is available.

### Perform the following work steps:

1. Working in the main menu under “Calibration”, navigate to the “Sensors” tab.
  2. Working under “Sensor”, select the sensor that measures the conductivity and which you wish to calibrate.
  3. Press the “1 points” button.
    - ▶ 1-point calibration begins.
  4. Shut off the sample water.
  5. Unscrew the conductivity measuring cell from the corresponding measuring cell housing.
  6. Dry the electrode with the cloth to prevent dilution of the buffer solution.
  7. Hold the conductivity measuring cell in the buffer solution and move back and forth for a short time.
  8. Enter the value which is recorded on the buffer solution. The measured current value and the entered value are both displayed.
  9. Wait until the value has stabilised.
  10. Confirm the entry with the green checkmark.
- ✓ **1-point adjustment of the conductivity measurement completed.**

#### 9.5.4.2 Adjusting the conductivity in the setpoint

When controlling the conductivity with your TOPAX® MC, you can calibrate the conductivity close to the setpoint ( $\pm 10\%$ ) using a reference measurement.

#### Pre-conditions for actions:

- ✘ The salt content of the sample water is close to the setpoint; the sampling station is in operation.
- ✘ A hand-held measuring device is available.

### Perform the following work steps:

1. Working in the main menu under “Calibration”, navigate to the “Sensors” tab.
  2. Working under “Sensor”, select the sensor that measures the conductivity and which you wish to calibrate.
  3. Press the “1 points” button.
    - ▶ The calibration starts.
  4. Remove the sample water from the measuring point.
  5. Determine the conductivity with the portable meter.
  6. Enter the value ascertained using the measuring device.
  7. Confirm the entry with the green checkmark.
- ✓ **The calibration of the conductivity in the setpoint has been completed.**

## 9.5.5 Temperature

You can connect a temperature sensor to every input module. You can adjust the temperature sensor by setting a reference value.

When setting the reference value, the device will automatically correct the measurement of the temperature sensor by the difference.

### 9.5.5.1 Adjustment of a temperature sensor

#### Pre-conditions for actions:

- ✓ A thermometer is available.
- ✓ You have activated the measurement of the temperature (see section 8.2.1.2 “Temperature inputs” on page 20).

### Perform the following work steps:

1. Working in the Main menu under “Calibration”, navigate to the “Temperature” tab.
  2. Working under “input”, select the input module for which you wish to set a reference value.
  3. Press the “Reference value” button.
  4. Enter the reference temperature measured beforehand.
  5. Confirm with the green checkmark.
- ✓ **Adjustment of a temperature sensor completed.**

## 9.5.6 Servomotor relay

### 9.5.6.1 Servomotor with position feedback

You can connect servomotors with a position feedback to your device and control them via an output. Before you can control the servomotor exactly, you must first compensate the control via your device and the position of the servomotor.

During compensation, the servomotor is first driven to the end position and then back.

This section only applies to servomotors with a feedback potentiometer.

### 9.5.6.2 Calibration of an servomotor with position feedback

#### Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 23 “Functions of the individual controllers” on page 19).

### Perform the following work steps:

1. Working in the Main menu under “Calibration”, navigate to the “Outputs” tab.
  2. Working under “Output”, select the output which is to be adjusted.
  3. Press the “Compensate potentiometer” button.
  4. A further window with a progress bar opens; this indicates the position feedback.
  5. Compensation is started using the “Start” button.
    - ▶ The motor starts and runs to top speed, then stops. This can take a number of minutes.
  6. Completion of the compensation is signalled with “Compensation OK”.
- ✓ **Calibration of an servomotor with position feedback completed.**

### 9.5.6.3 Servomotor without position feedback

You can actuate servomotors without a position feedback. To this end, you need to measure how quickly the motor starts and then set the controller accordingly.

#### Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 23 “Functions of the individual controllers” on page 19).

#### Resources required:

- ✂ Timer.

#### Perform the following work steps:

1. Working in the main menu, navigate to the “Manual mode” menu item.
2. Activate the manual mode of the output with “On” and set the control output as 0 %.
  - ▶ The servomotor now stops completely.
3. Observe the drive and wait until it has stopped completely.
4. Set the output to 100 % and at the same time, start to measure the time for the complete opening of the drive.
  - ▶ The servomotor now starts and runs to top speed.
5. Observe the drive and wait until it has stopped completely.
6. Deactivate manual mode with “Off”.
7. Working in the main menu under System > Outputs, navigate to the “Controller” tab.
8. Working under “Output”, select the output of the runtime which you have just measured.
9. Working under “Runtime”, enter the time which you have just measured.

- ✓ **Runtime set!**

### 9.5.7 Servomotor 20 mA

You can connect servomotors with a 20 mA actuation and a 20 mA feedback to the device. The servomotors must be calibrated with the actuation before commissioning. You can calibrate the 20 mA output signal with  $\pm 1$  mA.

#### 9.5.7.1 Calibration of an servomotor 20 mA

#### Pre-conditions for actions:

- ✓ The servomotor is switched on and has been connected properly.
- ✓ The output has been configured correctly (see Tab. 23 “Functions of the individual controllers” on page 19).

#### Perform the following work steps:

1. Working in the Main menu under “Calibration”, navigate to the “Outputs” tab.
2. Working under “Output”, select the output which is to be adjusted.
3. Press the “Compensation” button.
  - ▶ A further window with a progress bar opens; this indicates the position feedback.

4. Compensation is started using the “Start” button.
5. The motor starts and runs to top speed, then stops. This can take a number of minutes.
6. Completion of the compensation is signalled with “Compensation OK”.

- ✓ **Calibration of an servomotor 20 mA completed.**

#### 9.5.7.2 Calibrating the 20 mA output

If, whilst performing the previous compensation, you have determined that the output signal does not completely conform with the motor position, you can adjust the output signal. You can adjust both the lower signal range (0/4 mA) and the upper signal range (20 mA) to the motor position.

#### Perform the following work steps:

1. Working in the Main menu under “Calibration”, navigate to the “Outputs” tab.
2. Working under “Outputs, select the output that you wish to adjust.
3. Press the “1 point” button to calibrate just the upper area or the “2 points” button for the upper and lower areas.
4. A further window will open in which you can set a tolerance. You can change this by maximum -50 to +50 depending on whether you wish to calibrate the upper or lower area. The maximum change corresponds c. to a current of 1 mA.
5. Check the output signal using a multimeter or a servomotor and make sure that the motor is now under exact control.
6. Save the current offset by pressing the “Save” button.

- ✓ **Calibrating the 20 mA output completed.**

## 9.6 Setpoints and reference sets

You can determine various setpoints which should actuate the device. You have four different sets of setpoints; the controller can switch between them automatically. The reference sets can be used to vary the control at different times of the day or in different operating conditions.

The following section describes the possibilities of controlling using setpoints and their configuration.

### 9.6.1 Setting the setpoints

You can configure and save the setpoints via the menu item “Setpoints”.

#### Perform the following work steps:

1. Working in the main menu under “Setpoints” navigate to the “Active” tab.
2. **Active:** You can view the reference set currently active in the “Active” tab.
  - ▶ The individual setpoints are displayed. If you change one of the values, it will immediately be activated as a new setpoint.
3. **Save:** You can save the active setpoints as a reference set. Select a reference set for this and press “Save”.
4. **Setpoints 1 – 4:** The possible setpoints for the controller follow in sequence. The following information is displayed from left to right:
  - S1 – S4/V1 – V4 indicates the sensor input or virtual input.

- 01 – 04 indicates the output. The “timer” indicates that the output is actuated directly.

- The measured value of this input follows, e. g. free chlorine, pH or the text “No control function” if this controller is inactive.

An upwards or downwards arrow indicates the control direction. Raise or lower.

- This is followed by the setpoint. Pressing on the setpoint enables you to change it immediately. If it is a 2-side control, two setpoints must be entered. Both for the control direction “Raise” or “Lower”. Changing these setpoints does not have an impact on the savable reference sets. To do so, you must perform step 3.

**5. Capacity:** You can activate or deactivate the flow. This enables you to reduce the flow by between 0 % and 100 %. The value of the flow is multiplied with the output Y. If the output is e.g. 80 % but the flow is only 50 %, this produces an output capacity of: Control variable YY = 80 % · 50 % = 40 %.

✓ **Setpoints set.**

### 9.6.2 Loading reference sets

You can load a reference set.

**Perform the following work steps:**

1. Working in the main menu under “Setpoints”, navigate to the “Reference set” tab.
2. Select the desired reference set.
3. Press “Load”.
  - ▶ The desired reference set is active immediately.

✓ **Reference set loaded.**

### 9.6.3 Switching between setpoints

The reference sets set in the previous section can be switched manually or automatically. You have two possibilities to activate automatic switching.

1. Working in the “Setpoints” menu item, navigate to the “Switching” tab. Set a checkmark against “Switch setpoints automatically”.
2. Working in the “Manual mode” menu, set a checkmark against “Switch setpoints automatically”.

You can use a digital input (see section 9.6.3.1 “Switching via digital inputs” on page 33) and multiple internal timers (see section 9.6.3.2 “Switching via timer” on page 34) for automatic switching. The switching has priority over a digital input. Switching via a timer only occurs if no switching is active via a digital input.

#### 9.6.3.1 Switching via digital inputs

Before you can use a digital input for switching to a particular reference set, you must configure the digital input in accordance with section 8.2.1.6 “Digital inputs” on page 22.

Switching can be performed in three different forms: externally-controlled switching; switching via an internal timer and the “ECO control” function, which includes the limit value control.

### Configure external switchover

In the case of external actuation, switching to the desired reference set is performed as long as the digital input has been activated.

If the digital input is deactivated, the device switches back to the previous reference set.

To configure, working in the “Setpoints” menu item, select the “Switching” tab.

**Perform the following work steps:**

1. Configure the switching and state the following information.
2. **Automatically switching the reference sets:** Set a checkmark here.
3. **Switch-over:** Select “Digital input”.
4. **Function:** Select the point “External switching”.
5. **Reference set:** Select the reference set to which is to be switched.
6. **Digital input:** The digital input in use is indicated here.

✓ **Configuration of the external switching completed.**

### Switching via a timer

During switching via a timer, the desired reference set is active until the set period has been completed. The previous reference set is re-activated after the time has elapsed.

You can also start the timer manually, thereby e.g. triggering shock chlorination.

To configure, working in the “Setpoints” menu item, select the “Switching” tab.

**Perform the following work steps:**

1. Configure the switching and state the following information.
2. **Automatically switching the reference sets:** Set a checkmark here.
3. **Switch-over:** Select “Digital input”.
4. **Function:** Go to “Timer”.
5. **Reference set:** Select the reference set to which is to be switched.
6. **Digital input:** The digital input in use is indicated here.
7. **Time:** Configure the timer to the desired duration.
8. **“Off” or “Active”:** It will be displayed here whether the timer is currently active. If this is the case, the display will show how long it is still active.
9. **“Start” and “Stop” button:** The timer can be started or stopped manually, e. g. for a shock chlorination.

✓ **Configuration completed.**

### Configure switching via ECO control

A limit value control is defined for the "Economy mode". The limit value control is generally used to reduce the circulation capacity.

If the measured values are located within the setpoints, the output is closed. If the digital input is also switched for switching to another reference set, "Economy mode" is active and the switch will be made to the desired reference set.

#### Pre-conditions for actions:

- ✓ The limit value control is configured as described in section "Limit value control" on page 24.

To configure, working in the "Setpoints" menu item, select the "Switching" tab.

#### Perform the following work steps:

1. **Automatically switching the reference sets:** Set a checkmark here.
2. **Switch-over:** Select "Switching input".
3. **Function:** Select "ECO control".
4. **Reference set:** Select the reference set to which is to be switched.
5. **Digital input:** The digital input in use is indicated here.

- ✓ **Configuration "Switchover via ECO control" completed.**

#### 9.6.3.2 Switching via timer

Up to ten timers can be configured parallel to the switching via a digital switching input (see section 9.6.3.1 "Switching via digital inputs" on page 33). Times are defined for the point at which the timers should switch to a certain reference set.

To configure, working in the "Setpoints" menu item, select the "Switching" tab.

#### Perform the following work steps:

1. **Automatically switching the reference sets:** Set a checkmark here.
2. **Switch-over:** Configure up to ten timer switches and state the following information.
3. **Off/Active:** Switch on the timer.
4. **Time:** Configure a time at which the switch-over is to be made. State the hour and minutes.
5. **Monday – Sunday:** Set a checkmark against every weekday on which the timer should be active.
6. **Reference set:** Select the reference set to which is to be switched.

- ✓ **Configuration "Switchover via timer" completed.**

## 9.7 Access via network

Accessing the device via a network requires that it is connected to an existing Ethernet or RS485 network.

Further information about connection to an existing network is specified in sections ü "RC protection for relay connected." on page 17, n "Only use CAT5 cables or better" on page 17 and 8.4 "Network settings" on page 26.



If connection problems are experienced during access via network, check the configuration of your security software.

### Modbus

You can access certain data on the device via the Modbus protocol using both Ethernet and the RS485. You need the Modbus protocol e.g. For the connection with a control panel or a PLC. Modbus TCP/IP is supported for Ethernet and Modbus RTU is supported for the RS485 interface.

The Modbus addresses of your device are stated in section 12 "Modbus addresses TOPAX® MC" on page 39.

#### Web browser (only Ethernet)

You can access the device data using all network devices which are fitted with a web browser. You will require the IP address, subnetmask and possibly the MAC address of the device.

The network settings of your device are listed under Main menu > System > Service > Network.

Open the web browser of your end device and enter the IP address of the device in the address row. The page of the device will open and provide a range of information.

#### TFTP protocol (only Ethernet)

You can access the device memory via a TFTP client software as long as TFTP is activated in the network settings. You need the device IP address for access.

The network settings of your device are listed under Main menu > System > Service > Network.

## 10 Maintenance

Products by Lutz-Jesco are manufactured to the highest quality standards and have a long service life. However, some parts are subject to operational wear. This means that regular visual inspections are necessary to ensure a long operating life. Regular maintenance will protect the device from operation interruptions.

**DANGER!**

**Mortal danger from electric shock!**

Live parts can inflict fatal injuries.

- ⇒ Before carrying out any maintenance work, always disconnect the device from the power supply.
- ⇒ Secure the system to prevent it from being switched on by accident.

**WARNING!**

**Increased risk of accidents due to insufficient qualification of personnel!**

The system and its accessories may only be installed, operated and maintained by personnel with sufficient qualifications. Insufficient qualification will increase the risk of accidents.

- ⇒ Ensure that all action is taken only by personnel with sufficient and corresponding qualifications.

### 10.1 Maintenance intervals

This table gives you an overview of maintenance work and the intervals at which you must carry it out. The next few sections contain instructions for carrying out this work.

Interval	Maintenance
Monthly	<ul style="list-style-type: none"> <li>■ Visual check</li> <li>■ Touchscreen function test</li> <li>■ Calibrating the measured values</li> </ul>
Annually	<ul style="list-style-type: none"> <li>■ Checking the button cell</li> </ul>

Tab. 27: Maintenance intervals

### 10.2 Keeping logfiles

If you make an entry in the logfiles, the device will issue a reminder when a sensor needs to be replaced.

#### Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Service entry and working under “Service entry” / “Sensor”, select the desired sensor.

2. Enter the serial number in the tab and the manufacturing company of the sensor.
3. Activate the reminder function and enter a date for the next sensor change.

✓ **Logfiles maintained.**

### 10.3 Updating software

The most up-to-date firmware version can be downloaded from [www.Lutz-Jesco.com](http://www.Lutz-Jesco.com). Copy this \*.BIN file onto the device USB flash drive. The file must be saved in the root directory of the USB flashdrive and may not be stored in a sub-folder.

You can update the device software to a newer version.

#### Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Device.
2. Press Software update.
3. Select the \*.BIN file with the newer version and press “Load”.
  - ▶ The software is installed. The device will restart automatically during this procedure.

✓ **Update performed**

### 10.4 Battery

The device is fitted with a button cell. Check the button cell within the scope of the annual maintenance. The lifetime of the button cell is determined by the device usage and can vary considerably.

You will need to replace the battery more often with devices which are switched off often or over a long period (e.g. over winter).

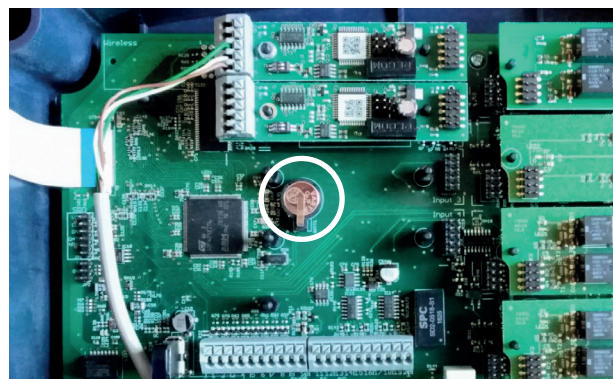


Fig. 23: CR1220 button cell

### 10.4.1 Checking the charge

You can check the battery charge easily using the device. Replace the battery if the charge amounts to less than 2.9 V.

→ Working in the main menu, navigate to System > Information > System values and read the current charge state of the battery.

### 10.4.2 Replace the battery

You must remove the two input circuit boards to be able to replace the battery (Fig. 23 “CR1220 button cell” on page 35).

#### Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.

#### Resources required:

- ✂ Socket wrench 5.5 mm (M3)
- ✂ New battery: CR1220, Ø12,5 mm, 3 V, 35 mAh

#### Perform the following work steps:

1. Pull all cable connections from the input circuit boards which you need to dismantle.
  2. Using the socket wrench, unscrew the retaining nuts from the white protective plate and remove the plate.
  3. Using the socket wrench, unscrew the two nuts from the input circuit boards which you need to remove.
  4. Working carefully, slide the input circuit boards from their brackets.
    - ▶ The battery is now easily accessible.
  5. Lever the battery out of its holder without damaging the contact bow.
  6. Slide a new battery in the holder.
- ✓ **The battery has been changed.**

### 10.5 Replacing the fuse

Your device is fitted with an electrical fuse to protect against short circuits or over-voltage. You can change the fuse if it is defective.

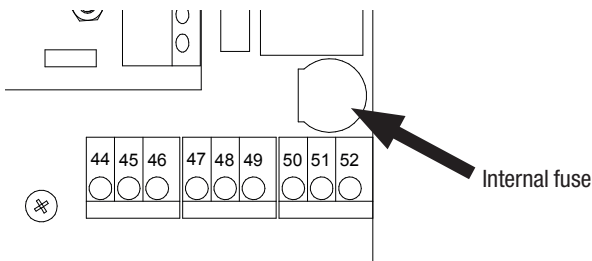


Fig. 24: Position of the fuse

#### Pre-conditions for actions:

- ✓ The voltage supply has been disconnected and protected against re-connection.
- ✓ The housing is open.

#### Resources required:

- ✂ Slotted screwdriver
- ✂ New fuse: 5 x 20 mm, 3.15 A, 250 V (delay)

#### Perform the following work steps:

1. The fuse holder in the form of a bayonet catch is located at the bottom right-hand side, above the clamps for PE, N and L with the marking “Fuse”. Use the slotted screwdriver to press the catch downwards and then turn it leftwards.
  2. Remove the fuse.
  3. Replace the fuse and fix it in place by turning the catch clockwise.
- ✓ **Fuse has been replaced.**

### 10.6 Resetting the settings



The instructions differentiate between the internal factory settings and the device configuration.

The factory settings contain the basic configuration of the device hardware and cannot be changed.

The configuration file (\*.SET) contains the individual device configuration. You can change, save and load the individual settings.

#### Reset to the factory settings

You can now reset the device to its factory settings. This deletes the configuration. You must then either load a configuration file or perform the configuration manually.

#### Perform the following work steps:

1. Working in the main menu, navigate to System > Service > Device.
  2. Press “factory settings”.
  3. Confirm with “Yes”.
    - ▶ The configuration will be deleted. You must proceed with the following section.
- ✓ **All factory default settings will be reset.**

#### Reset the configuration

The device configuration will be saved in \*.SET files. A factory-set configuration file with standard settings is already present. You can change these or save your personal configuration in new files.

**Recommendation:** Leave the factory-set configuration file unchanged and save your personal configuration in a new file. Given problems with the configuration, this enables you to return to a functioning configuration quickly.

#### Perform the following work steps:

1. Working in the main menu, navigate to System > Settings > Configuration.
2. Select an existing configuration file.

3. Click "Load" to confirm.
    - ▶ The device configuration returns to the saved state.
- ✓ **Load the old configuration.**

## 10.7 Finishing maintenance

### Perform the following work steps:

1. Make a note of the date and scope of the maintenance performed.
  2. In the "Service" menu, navigate to the "Service entry" tab. Enter your company name and notes about the maintenance. Activate the reminder function and enter a date for the next service. Confirm with the "Save" button .
    - ▶ Your service action has been saved in the logfiles.
  3. To restart the system, proceed in accordance with the instructions in section 8 "Commissioning" on page 19.
- ✓ **Maintenance completed.**

## 11 Troubleshooting TOPAX® MC

See below for information about how to rectify faults on the device or the system. If you cannot eliminate the fault, please consult with the manufacturer on further measures or return the device for repair.

Fault	Possible cause	Remedy
The device loses all settings after it has been disconnected from the network and then reconnected.	The battery is empty.	<ul style="list-style-type: none"> <li>■ Check that the battery is really empty. To do so, navigate to the menu System &gt; Information &gt; System values. You can view the battery voltage under "Battery". If the voltage is under 2.9 V, change the battery.</li> <li>■ Replace the battery (see chapter 10.4 "Battery" on page 35).</li> </ul>
The device is off.	The power supply has been interrupted.	Restore the power supply.
	The device fuse is defective.	Replace the fuse (see chapter 10.5 "Replacing the fuse" on page 36).
The sensor error is displayed as an alarm.	The sensor has not been installed correctly.	Make sure that the sensor has been connected correctly (see chapter 7.5 "Connecting sensors" on page 14).
	The signal cable to the sensor has a break.	Replace the signal cable.

Tab. 28: Troubleshooting

## 12 Modbus addresses TOPAX® MC

With a DOUBLE-WORD, the HIGH-WORD is transferred first! Hexadecimal display is shown by a leading “0x”.

Address	Read	Write	Description	Meaning
<b>Data that are not channel-related.</b>				
4	x		Device type + version	0x0500 + (number of channels -1) A single-channel controller accordingly has the identification: 0x0500.
6 – 8	x		Software Version:	Transfer: ASCII sign e.g. 102 is the software version V1.02
10 – 11	x		Operating hours	
13	x		Hardware version	
2000 – 2002	x		Serial number	The information consists of a ASCII sign in HIGH-BYTE and one in LOW-BYTE. Serial number: 123456 will thus be transferred as Address 2000: 0x3132 Address 2001: 0x3334 Address 2002: 0x3536 transferred
2003	x		Status of digital inputs	Displays the terminal logic (not the configured software function). The individual bits are assigned directly to the input clamps. Example: 0x01 means that the first digital inputs (clamps 21 + 22) are actuated.
2004	x		Status of digital outputs	The individual bits of the output modules. Example: 0x03 means that the upper relay or the upper optocoupler of the second output module (from the top) is active.
2008 – 2017	x	x	Name of the device	Max. of 20 characters Caution! The evaluation must stop at the first zero (string end). The individual letters are located in the HIGH-BYTE and LOW-BYTE of every address. “GW” thus produces: Address 2008 = 0x4757 Address 2009 = 0x00 The question marks are undefined. In this case, all other addresses send undefined values.
<b>Input-related data. 20 addresses will be held available for each of the 1 to 4 inputs. The address space for the inputs begins at 2020, 2040, 2060 and 2080.</b>				

Tab. 29: Modbus addresses

Address	Read	Write	Description	Meaning																																																
2020	x		Medium	<ul style="list-style-type: none"> <li>■ 1 = pH</li> <li>■ 2 = Redox</li> <li>■ 3 = Free chlorine</li> <li>■ 4 = Total chlorine</li> <li>■ 5 = Chlorine dioxide</li> <li>■ 6 = Bromine</li> <li>■ 7 = Chlorite</li> <li>■ 8 = Hydrogen peroxide</li> <li>■ 9 = Ozone</li> <li>■ 10 = Bromite</li> <li>■ 11 = Fluoride</li> <li>■ 12 = Salt content</li> <li>■ 13 = Conductivity</li> <li>■ 14 = Current</li> <li>■ 15 = Temperature</li> <li>■ 16 = Neutral (0 – 100%)</li> <li>■ 254 = Free entry</li> <li>■ 255 = No type</li> </ul>																																																
2021 – 2022	x		Measurement	Number of positions after the decimal point, see unit (4 bytes signed int.).																																																
2023	x		Unit	<table border="1"> <thead> <tr> <th>Number</th> <th>Unit</th> <th>decimal places</th> </tr> </thead> <tbody> <tr><td>0</td><td>mA</td><td>2</td></tr> <tr><td>1</td><td>µA</td><td>1</td></tr> <tr><td>2</td><td>ppm</td><td>2</td></tr> <tr><td>3</td><td>mg/l</td><td>2</td></tr> <tr><td>4</td><td>µS/cm</td><td>2</td></tr> <tr><td>5</td><td>mS/cm</td><td>2</td></tr> <tr><td>6</td><td>%</td><td>2</td></tr> <tr><td>7</td><td>mV</td><td>1</td></tr> <tr><td>8</td><td>pH</td><td>2</td></tr> <tr><td>9</td><td>min</td><td>0</td></tr> <tr><td>10</td><td>s</td><td>0</td></tr> <tr><td>11</td><td>mV/pH</td><td>1</td></tr> <tr><td>12</td><td>Pulses/min.</td><td>0</td></tr> <tr><td>13</td><td>Travelling unit</td><td>1</td></tr> <tr><td>14</td><td>Celsius</td><td>1</td></tr> </tbody> </table>	Number	Unit	decimal places	0	mA	2	1	µA	1	2	ppm	2	3	mg/l	2	4	µS/cm	2	5	mS/cm	2	6	%	2	7	mV	1	8	pH	2	9	min	0	10	s	0	11	mV/pH	1	12	Pulses/min.	0	13	Travelling unit	1	14	Celsius	1
				Number	Unit	decimal places																																														
				0	mA	2																																														
				1	µA	1																																														
				2	ppm	2																																														
				3	mg/l	2																																														
				4	µS/cm	2																																														
				5	mS/cm	2																																														
				6	%	2																																														
				7	mV	1																																														
				8	pH	2																																														
				9	min	0																																														
				10	s	0																																														
				11	mV/pH	1																																														
				12	Pulses/min.	0																																														
13	Travelling unit	1																																																		
14	Celsius	1																																																		
2024	x		The assigned input of the controller	<ul style="list-style-type: none"> <li>■ 0 = Sensor 1</li> <li>■ 1 = Sensor 2</li> <li>■ 2 = Sensor 3</li> <li>■ 3 = Sensor 4</li> <li>■ 4 = Virtual input 1</li> <li>■ 5 = Virtual input 2</li> <li>■ 6 = Virtual input 3</li> <li>■ 7 = Virtual input 4</li> <li>■ 8 = Timer switch</li> </ul>																																																
2025	x		Control output Y (active control)	500 = 50,0 % (2 Byte signed int)																																																
	x	x	Control output Y (only manual mode)																																																	

Tab. 29: Modbus addresses

Address	Read	Write	Description	Meaning		
2026	x		Control output 2 Y2 (active control)	500 = 50,0 % (2 Byte signed int)		
	x	x	Control output 2 Y2 (only manual mode)	Second side if 2-side control is active.		
2027 – 2028	x	x	Setpoint 1	Number of positions after the decimal point, see unit (4 bytes signed int.).		
2029 – 2030	x	x	Setpoint 2	If 2-side control is active (4 byte signed int).		
2031	x	x	Xp	Number of positions after the decimal point, see unit (2 bytes unsigned int.).		
2032	x	x	D	Derivative time in s (2 byte unsigned int).		
2033	x	x	I	Reset time in s (2 byte unsigned int).		
2034	x	x	Minimum and maximum alarm	Write: 0 = clear alarm	Read: Bit 0 = minimum alarm is active Bit 1 = maximum alarm is active	
2035	x	x	Y alarm	Write: 0 = clear alarm	Read: Bit 0 = Y alarm is inactive Bit 1 = Y alarm is active	
2036	x	x	Manual mode	Bit 0: Manual mode on Bit 1: Lower (with 2-side control)		
<b>Input-related data of the virtual inputs. 20 addresses will be held available for each of the 1 to 4 inputs. The address space for the virtual inputs begins at 2100, 2120, 2140 and 2160.</b>						
2100	x		Calculation	0 = off, no calculation 1 = difference value measurement 2 = bound chlorine 3 = effective chlorine		
2101 – 2102	x		Measurement	Number of positions after the decimal point, see unit (4 bytes signed int.).		
2103	x		Unit	<b>Number</b>	<b>Unit</b>	<b>decimal places</b>
				0	mA	2
				1	µA	1
				2	ppm	2
				3	mg/l	2
				4	µS/cm	2
				5	mS/cm	2
				6	%	2
				7	mV	1
				8	pH	2
				9	min	0
				10	s	0
				11	mV/pH	1
				12	Pulses/min.	0
				13	Travelling unit	1
14	Celsius	1				

Tab. 29: Modbus addresses

Address	Read	Write	Description	Meaning
2104	x		The assigned input of the controller	<ul style="list-style-type: none"> <li>■ 0 = Sensor 1</li> <li>■ 1 = Sensor 2</li> <li>■ 2 = Sensor 3</li> <li>■ 3 = Sensor 4</li> <li>■ 4 = Virtual input 1</li> <li>■ 5 = Virtual input 2</li> <li>■ 6 = Virtual input 3</li> <li>■ 7 = Virtual input 4</li> <li>■ 8 = Timer switch</li> </ul>
2105	x		Control output Y (active control)	500 = 50,0 % (2 Byte signed int)
	x	x	Control output Y (only manual mode)	
2106	x		Control output 2 Y2 (active control)	500 = 50,0 % (2 Byte signed int)
	x	x	Control output 2 Y2 (only manual mode)	Second side if 2-side control is active.
2107 – 2108	x	x	Setpoint 1	Number of positions after the decimal point, see unit (4 bytes signed int.)
2109 – 2110	x	x	Setpoint 2	If 2-side control is active (4 byte signed int)
2111	x	x	Xp	Number of positions after the decimal point, see unit (2 bytes unsigned int.)
2112	x	x	D	Derivative time in s (2 byte unsigned int)
2113	x	x	I	Reset time in s (2 byte unsigned int)
2114	x	x	Minimum and maximum alarm	Write: 0 = clear alarm Read: Bit 0 = minimum alarm is active Bit 1 = maximum alarm is active
2115	x	x	Y alarm	Write: 0 = clear alarm Read: Bit 0 = Y alarm is inactive Bit 1 = Y alarm is active
2116	x	x	Manual mode	Bit 0: Manual mode on Bit 1: Lower (with 2-side control)
<b>Further non channel-related data.</b>				
2220 – 2223	x		Analogue outputs 1 – 4	421 = 4.21 mA (2 byte signed int)

Tab. 29: Modbus addresses

Address	Read	Write	Description	Meaning	
				Message or alarm	Bit
2225	x		<b>Alarm status 1</b>  If the bit is set, the associated alarm or message is active.	<b>Message or alarm</b>	<b>Bit</b>
				Sensor error 1	0
				Sensor error 2	1
				Sensor error 3	2
				Sensor error 4	3
				Sensor 1 maximum alarm	4
				Sensor 2 maximum alarm	5
				Sensor 3 maximum alarm	6
				Sensor 4 maximum alarm	7
				Virtual 1 maximum alarm	8
				Virtual 2 maximum alarm	9
				Virtual 3 maximum alarm	10
				Virtual 4 maximum alarm	11
				Sensor 1 minimum alarm	12
				Sensor 2 minimum alarm	13
Sensor 3 minimum alarm	14				
Sensor 4 minimum alarm	15				
2226	x		<b>Alarm status 2</b>  If the bit is set, the associated alarm or message is active.	<b>Message or alarm</b>	<b>Bit</b>
				Virtual 1 minimum alarm	0
				Virtual 2 minimum alarm	1
				Virtual 3 minimum alarm	2
				Virtual 4 minimum alarm	3
				Controller 1 Y alarm	4
				Controller 2 Y alarm	5
				Controller 3 Y alarm	6
				Controller 4 Y alarm	7
				Temperature 1 maximum alarm	8
				Temperature 2 maximum alarm	9
				Temperature 3 maximum alarm	10
				Temperature 4 maximum alarm	11
				Temperature 1 minimum alarm	12
				Temperature 2 minimum alarm	13
Temperature 3 minimum alarm	14				
Temperature 4 minimum alarm	15				

Tab. 29: Modbus addresses

Address	Read	Write	Description	Meaning	
				Message or alarm	Bit
2227	x		Alarm status 3 If the bit is set, the associated alarm or message is active.	Setpoint changeover	0
				Measuring water shortage	1
				External stop	2
				Low level alert 1	3
				Low level alert 2	4
				Low level alert 3	5
				Low level alert 4	6
				Main alarm 1	7
				Main alarm 2	8
				Main alarm 3	9
				Main alarm 4	10
				Digital input 1	11
				Digital input 2	12
				Digital input 3	13
				Digital input 4	14
Digital input 5	15				
2228	x		Alarm status 4 If the bit is set, the associated alarm or message is active.	Digital input 6	0
				Digital input 7	1
				Digital input 8	2
				Sensor 1 calibration not OK	3
				Sensor 2 calibration not OK	4
				Sensor 3 calibration not OK	5
				Sensor 4 calibration not OK	6
				Temperature 1 calibration not OK	7
				Temperature 2 calibration not OK	8
				Temperature 3 calibration not OK	9
				Temperature 4 calibration not OK	10
				Output 1 calibration not OK	11
				Output 2 calibration not OK	12
				Output 3 calibration not OK	13
				Output 4 calibration not OK	14
Next service due	15				
2229	x		Alarm status 5 If the bit is set, the associated alarm or message is active.	Sensor change sensor 1 due	0
				Sensor change sensor 2 due	1
				Sensor change sensor 3 due	2
				Sensor change sensor 4 due	3
2235	x		Temperature input 1	235 = 23.5 °C With an inactive temperature, the return is -10000 (2 byte signed int)	
2236	x		Temperature input 2		
2237	x		Temperature input 3		
2238	x		Temperature input 4		

Tab. 29: Modbus addresses

## 13 EU Declaration of Conformity



### (DE) EU-Konformitätserklärung

Hiermit erklären wir, dass das nachfolgend bezeichnete Gerät aufgrund seiner Konzipierung und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den einschlägigen grundlegenden Sicherheits- und Gesundheitsanforderungen der aufgeführten EU-Richtlinien entspricht. Bei einer nicht mit uns abgestimmten Änderung am Gerät verliert diese Erklärung ihre Gültigkeit.

### (EN) EU Declaration of Conformity

We hereby certify that the device described in the following complies with the relevant fundamental safety and sanitary requirements and the listed EU regulations due to the concept and design of the version sold by us.

If the device is modified without our consent, this declaration loses its validity.

### (FR) Déclaration de conformité UE

Nous déclarons sous notre propre responsabilité que le produit ci-dessous mentionné répond aux exigences essentielles de sécurité et de santé des directives UE énumérées aussi bien sur le plan de sa conception et de son type de construction que du modèle que nous avons mis en circulation.

Cette déclaration perdra sa validité en cas d'une modification effectuée sur le produit sans notre accord explicite.

### (ES) Declaración de conformidad UE

Por la presente declaramos que, dados la concepción y los aspectos constructivos del modelo puesto por nosotros en circulación, el aparato mencionado a continuación cumple con los requisitos sanitarios y de seguridad vigentes de las directivas de la U.E. citadas a continuación.

Esta declaración será invalidada por cambios en el aparato realizados sin nuestro consentimiento.

### (PT) Declaração de conformidade UE

Declaramos pelo presente documento que o equipamento a seguir descrito, devido à sua concepção e ao tipo de construção daí resultante, bem como a versão por nós lançada no mercado, cumpre as exigências básicas aplicáveis de segurança e de saúde das directivas CE indicadas.

A presente declaração perde a sua validade em caso de alteração ao equipamento não autorizada por nós.

<b>Bezeichnung des Gerätes:</b>	Mehrkanalregler
<b>Description of the unit:</b>	Multi-Channel Controller
<b>Désignation du matériel:</b>	Régulateur multi-canaux
<b>Descripción de la mercancía:</b>	Controlador multi canal
<b>Designação do aparelho:</b>	Controlador multi-canal

<b>Typ:</b>	Topax MC
<b>Type:</b>	


<b>EU-Richtlinien:</b>	2014/30/EU
<b>EU directives:</b>	2014/35/EU
	2011/65/EU

Die Schutzziele der Niederspannungsrichtlinie 2014/35/EU wurden gemäß Anhang I, Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG eingehalten.

The protective aims of the Low Voltage Directive 2014/35/EU were adhered to in accordance with Annex I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

<b>Harmonisierte Normen:</b>	DIN EN ISO 12100:2011-03
<b>Harmonized standards:</b>	DIN EN 61000-4-2:2009-12
	DIN EN 61000-4-3:2006 + A1:2008 + A2:2010
	DIN EN 61000-4-4:2012
	DIN EN 61000-4-5:2014
	DIN EN 61000-4-6:2014-08
	DIN EN 61000-4-11:2005-02
	DIN EN 61000-6-2:2016-05
	DIN EN 61000-6-3:2011-09
	DIN EN 55016-2-3:2010 + A1:2010

<b>Dokumentationsbevollmächtigter:</b>	Lutz-Jesco GmbH
<b>Authorized person for documentation:</b>	

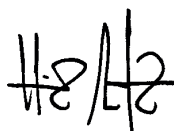

Heinz Lutz	Lutz-Jesco GmbH
Geschäftsführer / Chief Executive Officer	Am Bostelberge 19
Lutz-Jesco GmbH	30900 Wedemark
Wedemark, 01.03.2019	Germany

## 14 Warranty claim

### Warranty claim

Please copy and send it back with the unit!

If the device breaks down within the period of warranty, please return it in a cleaned condition with the complete warranty claim.

#### Sender

Company: ..... Phone: ..... Date: .....

Address: .....

Contact person: .....

Manufacturer order no.: ..... Date of delivery:.....

Device type: ..... Serial number: .....

Nominal capacity / nominal pressure: .....

Description of fault:.....

.....

.....

.....

.....

.....

.....

.....

.....

#### Service conditions of the device

Point of use / system designation:.....

.....

.....

Accessories used (suction line etc.):.....

.....

.....

.....

.....

Commissioning (date): .....

Duty period (approx. operating hours): .....

Please describe the specific installation and enclose a simple drawing or picture of the chemical feed system, showing materials of construction, diameters, lengths and heights of suction and discharge lines.

## 15 Glossary

### Limit value control/DIN contact

The **limit value control is an output which switches when determined limit values are exceeded or undercut**. This function is used to control an ECO or Night mode in a swimming pool with reduced circulation. If there are no swimmers in the swimming pool, energy and dosing media can be saved. The limit value control monitors the maintenance of the parameters.

In Germany, the limit values of the national standard DIN 19643 apply. As such, "DIN contact" is a widespread name for this function.

### Hysteresis

**Hysteresis is the delayed response time of a two position controller**, when it reaches the "setpoint Y" and the control switches quickly between raising and lowering. As quick switching or control can have undesired effects, you can define hysteresis and achieve a more equal control.

### Actual value X

The actual value 'X' is the continually **measured value of a sensor**.

### Reset time Tn

The reset time 'Tn' is the **integral proportion (I proportion)** with PI and PID controllers. 'Tn' is the time **required by the controller to alter the control variable 'Y'**, which is generated by the proportional range 'Xp' immediately after the step change of the control deviation 'X-W'.

You can set a reset time 'Tn' of up to 200 minutes.

### P controller

A P controller is **defined by the proportional range 'Xp'**. The use of a pure P controller means that a control deviation 'X-W' always remains. The setpoint 'W' will thus never be reached.

### PI controller

The PI controller is **defined by the proportional range 'Xp' and the reset time 'Tn'**. The use of the PI controller means that the actual value 'X' can reach the setpoint 'W'.

The PI controller is suitable for the majority of applications.

### PD-controller

The PD controller is **defined by the proportional range 'Xp' and the derivative time 'Tv'**. The use of a PD controller means that a control deviation 'X-W' always remains. The setpoint 'W' will thus never be reached.

### PID controller

The PID controller is **defined by the proportional range 'Xp', the reset time 'Tn' and the derivative time 'Tv'**. The integral gain means that the actual value 'X' can reach the setpoint 'W'.

### Proportional range Xp

The proportional range 'Xp' (p proportion) of a P, PI or PID controller indicates **the amount by which the actual value 'X' must deviate from the setpoint 'W' so that the variable Y = 100 %**. If the control deviation 'X-W' is lower, the control variable is also lower.

The control variable 'Y' of a P controller is only affected by the control deviation 'X-W'. The Xp value is stated in the unit of the variable to be controlled. If for example, during the control of the pH value, an Xp = 2 pH is selected and the actual value is X = 9 pH and setpoint W = 7 pH, the control deviation is X-W = 9 pH - 7 pH = 2 pH.

In this case, the deviation X-W is as large as the Xp value. In this case, the variable Y would be 100 %. With a decreasing deviation X-W, the control variable decreases in a linear fashion to 0 % with an actual value X = setpoint W.

### Control deviation X-W

The control deviation X-W is **the difference between the actual value 'X' and the setpoint 'W'**. The control variable 'Y' results from the control deviation.

### Setpoint W

The setpoint 'W' of a control is the **desired value**.

### Control variable Y

The control variable 'Y' is the value **with which the controller actuates the actor** in accordance with its set parameters and the control deviation 'X-W'. The value lies between 0 % and 100 %.

### Derivative time Tv

With PD or PID controllers, the differential proportion (D proportion) is defined with the derivative time 'Tv'. **The D proportion ensures that the control path already contains a correction factor at the point at which the actual value "X" begins to differ from setpoint "W"**. The control variable 'Y' depends on the speed with which the control deviation 'X-W' takes place. The duration of the correction is determined by the derivative time 'Tv'. If the actual value 'X' does not change, i.e. the speed of change is "0", the correction factor effected by the D proportion with the derivative time 'Tv' drops as far as "0" (even if the actual value 'X' does not match the setpoint 'W', but consistently deviates from it). The fact that the control system causes the actual value 'X' to match the setpoint 'W' is due mainly to the I proportion of the controller. The D proportion often improves the controller behaviour because it acts against the trend to deviate.

The derivative time Tv can be set from 0 seconds to a maximum of 1200 seconds.

### Y alarm

You can activate an alarm **which deactivates the controller if the control variable 'Y' amounts to over 95 % over a defined period**.

## 16 Index

### B

Basic load .....	23
Battery .....	35

### C

Calibration .....	28
Commissioning .....	19

### D

Design .....	8
Dimensioned drawings .....	11
Dimensions .....	11
Drillhole dimensions .....	11
Outside dimensions .....	11
DIN contact .....	24

### E

Electrical installation .....	12
Ethernet .....	17
EU Declaration of Conformity .....	45

### F

Firmware .....	35
Foreseeable misuse .....	7
Functional diagram .....	8

### G

General warnings .....	5
------------------------	---

### H

Handling instructions	
Marking .....	4
Hazards due to non-compliance with the safety instructions .....	5

### I

Installation	
Connecting the actors .....	15
Connecting the sensor .....	14
Installation example .....	8
Installation on the wall .....	12
Intended purpose .....	7
Intended use .....	7
Internal fuse .....	36

### L

Logbook .....	27
---------------	----

### M

Maintenance .....	35
Maintenance intervals .....	35

### N

Notes for the Reader .....	4
----------------------------	---

### O

Operation .....	27
-----------------	----

### P

Personnel qualification .....	5
Personnel tasks .....	6
Product description .....	8
Product warranty .....	7

### R

Rating plate .....	9
--------------------	---

### S

Safety .....	5
Scope of delivery .....	8
Setpoints .....	32
Signal words	
Explanation .....	4
Specialist staff .....	5

### T

Technical data .....	10
Terminal connection .....	13
Trained electricians .....	6
Trained persons .....	6
Trend display .....	28
Troubleshooting .....	38

### U

Updating software .....	35
-------------------------	----

### W

Warnings	
General warnings .....	5
Marking .....	4
Warning sign	
Explanation .....	4
Warranty claim .....	46
Working in a safety-conscious manner .....	5


### Y

Y alarm .....	23
---------------	----







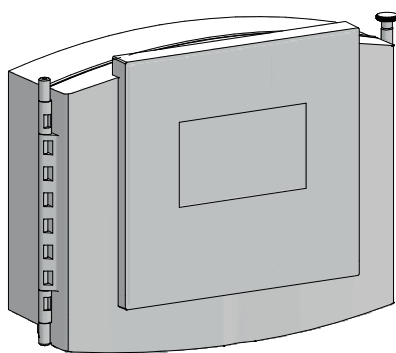

**Lutz-Jesco GmbH**

Am Bostelberge 19  
D-30900 Wedemark

Phone: +49 5130 5802-0  
info@lutz-jesco.com  
www.lutz-jesco.com

Multi-channel controller **TOPAX® MC**  
Operating instructions